Shark® 200 & 200T

LOW-COST HIGH PERFORMANCE MULTIFUNCTION ELECTRICITY METER

Installation & Operation Manual

Revision 1.10

April 28, 2009
Doc #: E149701 V1.10

Electro Industries/GaugeTech

1800 Shames Drive
Westbury, New York 11590

Tel: 516-334-0870 ◆ Fax: 516-338-4741
Sales@electroind.com ◆ www.electroind.com

"The Leader in Power Monitoring and Control"

Shark® 200 & 200T Meter
Installation and Operation Manual
Version 1.10

Published by:
Electro Industries/GaugeTech
1800 Shames Drive
Westbury, NY 11590

All rights reserved. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage or retrieval systems or any future forms of duplication, for any purpose other than the purchaser's use, without the expressed written permission of Electro Industries/GaugeTech.

© 2009
Electro Industries/GaugeTech

Shark® is a registered trademark of Electro Industries/GaugeTech.

Printed in the United States of America.

Customer Service and Support

Customer support is available 9:00 am to 4:30 pm, eastern standard time, Monday through Friday. Please have the model, serial number and a detailed problem description available. If the problem concerns a particular reading, please have all meter readings available. When returning any merchandise to EIG, a return materials authorization number is required. For customer or technical assistance, repair or calibration, phone 516-334-0870 or fax 516-338-4741.

Product Warranty

Electro Industries/GaugeTech warrants all products to be free from defects in material and workmanship for a period of four years from the date of shipment. During the warranty period, we will, at our option, either repair or replace any product that proves to be defective.

To exercise this warranty, fax or call our customer-support department. You will receive prompt assistance and return instructions. Send the instrument, transportation prepaid, to EIG at 1800 Shames Drive, Westbury, NY 11590. Repairs will be made and the instrument will be returned.

Limitation of Warranty

This warranty does not apply to defects resulting from unauthorized modification, misuse, or use for any reason other than electrical power monitoring. The Shark® 200 Meter is not a user-serviceable product.

Our products are not to be used for primary over-current protection. Any protection feature in our products is to be used for alarm or secondary protection only.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ELECTRO INDUSTRIES/GAUGETECH SHALL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING FROM ANY AUTHORIZED OR UNAUTHORIZED USE OF ANY ELECTRO INDUSTRIES/GAUGETECH PRODUCT. LIABILITY SHALL BE LIMITED TO THE ORIGINAL COST OF THE PRODUCT SOLD.

Statement of Calibration

Our instruments are inspected and tested in accordance with specifications published by Electro Industries/GaugeTech. The accuracy and a calibration of our instruments are traceable to the National Institute of Standards and Technology through equipment that is calibrated at planned intervals by comparison to certified standards.

Disclaimer

The information presented in this publication has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this document is subject to change without notice.

This symbol indicates that the operator must refer to an explanation in the operating instructions. Please see Chapter 4, Electrical Installation, for important safety information regarding installation and hookup of the Shark® 200 Meter.

About Electro Industries/GaugeTech

Founded in 1973 by engineer and inventor Dr. Samuel Kagan, Electro Industries/GaugeTech changed the face of power monitoring forever with its first breakthrough innovation: an affordable, easy-to-use AC power meter.

Thirty years later, Electro Industries/GaugeTech, the leader in Web-Accessed Power Monitoring, continues to revolutionize the industry with the highest quality, cutting edge power monitoring and control technology on the market today. An ISO 9001:2000 certified company, EIG sets the industry standard for advanced power quality and reporting, revenue metering and substation data acquisition and control. EIG products can be found on site at virtually all of today's leading manufacturers, industrial giants and utilities.

All EIG products are designed, manufactured, tested and calibrated at our facility in Westbury, New York.

Table of Contents

EIG Warranty ii

Chapter 1: Three-Phase Power Measurement
- 1.1: Three-Phase System Configurations 1-1
- 1.1.1: Wye Connection 1-1
- 1.1.2: Delta Connection 1-3
- 1.1.3: Blondell's Theorem and Three Phase Measurement 1-4
- 1.2: Power, Energy and Demand 1-6
- 1.3: Reactive Energy and Power Factor 1-8
- 1.4: Harmonic Distortion 1-10
- 1.5: Power Quality 1-13

Chapter 2: Shark® 200 Meter Overview and Specifications
- 2.1: Shark® 200 Meter Overview 2-1
- 2.1.1: Voltage and Current Inputs 2-2
- 2.1.2: Ordering Information 2-3
- 2.1.3: V-Switch™ Key Technology 2-4
- 2.1.4: Measured Values 2-5
- 2.1.5: Utility Peak Demand 2-6
- 2.2: Specifications 2-6
- 2.3: Compliance 2-9
- 2.4: Accuracy 2-9

Chapter 3: Mechanical Installation
- 3.1: Introduction 3-1
- 3.2: ANSI Installation Steps 3-3
- 3.3: DIN Installation Steps 3-4
- 3.4: Shark® 200T Transducer Installation 3-5

Chapter 4: Electrical Installation
- 4.1: Considerations When Installing Meters 4-1
- 4.2: CT Leads Terminated to Meter 4-2
- 4.3: CT Leads Pass Through (No Meter Termination) 4-3
- 4.4: Quick Connect Crimp-on Terminations 4-4
- 4.5: Voltage and Power Supply Connections 4-5
- 4.6: Ground Connections 4-5
- 4.7: Voltage Fuses 4-5
- 4.8: Electrical Connection Diagrams 4-6

Chapter 5: Communication Installation
- 5.1: Shark® 200 Meter Communication 5-1
- 5.1.1: IrDA Port (Com 1) 5-1
- 5.1.2: RS-485 / KYZ Output Com 2 5-2
- 5.1.2.1: Using the Unicom 2500 5-5
- 5.2: Shark® 200T Transducer Communication and Programming Overview 5-6
- 5.2.1: Factory Default Settings 5-6
- 5.2.2: Shark® 200 Meter Profile Settings 5-8

Chapter 6: Using the Shark® 200 Meter
6.1: Introduction 6-1
6.1.1: Understanding Meter Face Elements 6-1
6.1.2: Understanding Meter Face Buttons 6-1
6.2: Using the Front Panel 6-2
6.2.1: Understanding Startup and Default Displays 6-2
6.2.2: Using the Main Menu 6-3
6.2.3: Using Reset Mode 6-3
6.2.4: Entering a Password 6-4
6.2.5: Using Configuration Mode 6-5
6.2.5.1: Configuring the Scroll Feature 6-6
6.2.5.2: Configuring CT Setting 6-7
6.2.5.3: Configuring PT Setting 6-8
6.2.5.4: Configuring Connection Setting 6-9
6.2.5.5: Configuring Communication Port Setting 6-9
6.2.6: Using Operating Mode 6-10
6.3: Understanding the % of Load Bar 6-11
6.4: Performing Watt-Hour Accuracy Testing (Verification) 6-12

Chapter 7: Using the Shark® 200 Meter's I/O Option Cards
7.1: Overview 7-1
7.2: Installing Option Cards 7-2
7.3: Configuring Option Cards 7-2
7.4: 1mA Output Card 7-3
7.4.1: Specifications 7-3
7.4.2: Default Configuration 7-3
7.4.3: Wiring Diagram 7-4
7.5: 20mA Output Card 7-5
7.5.1: Specifications 7-5
7.5.2: Default Configuration 7-5
7.5.3: Wiring Diagram 7-6
7.6: Digital Output (Relay Contact)/Digital Input Card 7-7
7.6.1: Specifications 7-7
7.6.2: Wiring Diagram 7-8
7.7: Pulse Output (Solid State Relay Contacts)/Digital Input Card 7-9
7.7.1: Specifications 7-9
7.7.2: Default Configuration 7-9
7.7.3: Wiring Diagram 7-10
7.8: Fiber Optic Communication Card 7-11
7.8.1: Specifications 7-11
7.8.2: Default Configuration 7-11
7.8.3: Wiring Diagram 7-12
7.9: 10/100BaseT Ethernet Communication Card (INP100S) 7-13
7.9.1: Specifications 7-13
7.9.2: Default Configuration 7-13
7.9.3: Wiring Diagram 7-14

Chapter 8: Using the Ethernet Card (INP100S)
8.1: Overview 8-1
8.2: Hardware Connection 8-1
8.3: Performing Network Configuration 8-2
8.4: Accessing the Shark® 200 Meter's Web Pages 8-2
8.5: Upgrading the Ethernet Card's Firmware 8-5

Chapter 9: Data Logging
9.1: Overview 9-1
9.2: Available Logs 9-1

Appendix A: Navigation Maps for the Shark® 200 Meter
A.1: Introduction A-1
A.2: Navigation Maps (Sheets 1 to 4) A-1
Main Menu Screens (Sheet 1)
Operating Mode Screens (Sheet 2)
Reset Mode Screens (Sheet 3)
Configuration Mode Screens (Sheet 4)

Appendix B: Modbus Mapping and Log Retrieval for the Shark® 200 Meter
B.1: Introduction B-1
B.2: Modbus Register Map Sections B-1
B.3: Data Formats B-1
B.4: Floating Point Values B-2
B.5: Retrieving Logs Using the Shark® 200 Meter's Modbus Map B-3
B.5.1: Data Formats B-3
B.5.2: Shark® 200 Meter Logs B-3
B.5.3: Block Defintions B-4
B.5.4: Log Retrieval B-11
B.5.4.1: Auto-Increment B-11
B.5.4.2: Modbus Function Code OX23 B-11
B.5.4.3: Log Retrieval Procedure B-12
B.5.4.4: Log Retrieval Example B-13
B. 5. 5.: Log Record Interpretation B-18
B. 5. 6.: Examples B-23
B.6: Important Note Concerning the Shark ® 200 Meter's Modbus Map B-26
B.6.1: Hex Representation B-26
B.6.2: Decimal Representation B-26
B.7: Modbus Register Map (MM-1 to MM-8) B-26

Appendix C: Using DNP Mapping for the Shark® 200 Meter
C.1: Overview C-1
C.2: Physical Layer C-1
C.3: Data Link Layer C-1
C.4: Application Layer C-2
C.5: Error Reply C-2
C.6: DNP Lite Register Map C-3
C.7: DNP Message Layouts C-5

Appendix D: Using the USB to IrDA Adpater
D.1: Introduction D-1
D.2: Installation Procedures D-1

Chapter 1
Three-Phase Power Measurement

This introduction to three-phase power and power measurement is intended to provide only a brief overview of the subject. The professional meter engineer or meter technician should refer to more advanced documents such as the EEI Handbook for Electricity Metering and the application standardsfor more in-depth and technical coverage of the subject.

1.1: Three-Phase System Configurations

Three-phase power is most commonly used in situations where large amounts of power will be used because it is a more effective way to transmit the power and because it provides a smoother delivery of power to the end load. There are two commonly used connections for three-phase power, a Wye connection or a Delta connection. Each connection has several different manifestations in actual use. When attempting to determine the type of connection in use, it is a good practice to follow the circuit back to the transformer that is serving the circuit. It is often not possible to conclusively determine the correct circuit connection simply by counting the wires in the service or checking voltages. Checking the transformer connection will provide conclusive evidence of the circuit connection and the relationships between the phase voltages and ground.

1.1.1: Wye Connection

The Wye connection is so called because when you look at the phase relationships and the winding relationships between the phases it looks like a Y (wye). Fig. 1.1 depicts the winding relationships for a Wye-connected service. In a Wye service the neutral (or center point of the wye) is typically grounded. This leads to common voltages of 208/120 and 480/277 (where the first number represents the phase-to-phase voltage and the second number represents the phase-to-ground voltage).

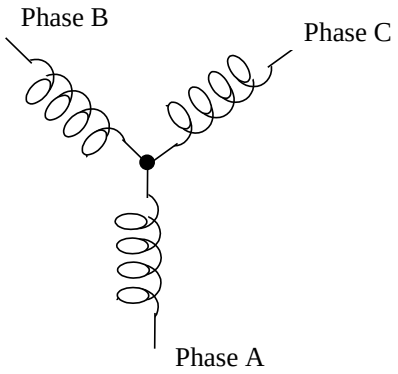

Figure 1.1: Three-Phase Wye Winding

The three voltages are separated by 120 degrees electrically. Under balanced load conditions with unity power factor the currents are also separated by 120 degrees. However, unbalanced loads and other conditions can cause the currents to depart from the ideal 120 degree separation.

Three-phase voltages and currents are usually represented with a phasor diagram. A phasor diagram for the typical connected voltages and currents is shown in Figure 1.2.

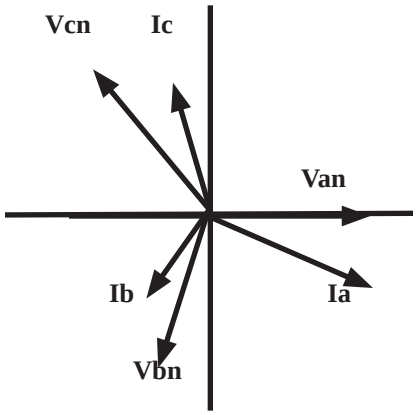

Fig 1.2: Phasor Diagram Showing Three-phase Voltages and Currents

The phasor diagram shows the 120 degree angular separation between the phase voltages. The phase-to-phase voltage in a balanced three-phase Wye system is 1.732 times the phase-to-neutral voltage. The center point of the Wye is tied together and is typically grounded. Table 1.1 shows the common voltages used in the United States for Wye-connected systems.

Phase-to-Ground Voltage	Phase-to-Phase Voltage
120 Volts	208 Volts
277 Volts	480 Volts
2,400 Volts	4,160 Volts
7,200 Volts	12,470 Volts
7,620 Volts	13,200 Volts

Table 1.1: Common Phase Voltages on Wye Services

Usually a Wye-connected service will have four wires; three wires for the phases and one for the neutral. The three-phase wires connect to the three phases (as shown in Fig. 1.1). The neutral wire is typically tied to the ground or center point of the wye (refer to Figure 1.1).

In many industrial applications the facility will be fed with a four-wire Wye service but only three wires will be run to individual loads. The load is then often referred to as a delta-connected load but the service to the facility is still a Wye service; it contains four wires if you trace the circuit back to its source (usually a transformer). In this type of connection the phase to ground voltage will be the phase-to-ground voltage indicated in Table 1.1, even though a neutral or ground wire is not physically present at the load. The transformer is the best place to determine the circuit connection type because this is a location where the voltage reference to ground can be conclusively identified.

1.1.2: Delta Connection

Delta connected services may be fed with either three wires or four wires. In a three-phase Delta service the load windings are connected from phase-to-phase rather than from phase-to-ground. Figure 1.3 shows the physical load connections for a Delta service.

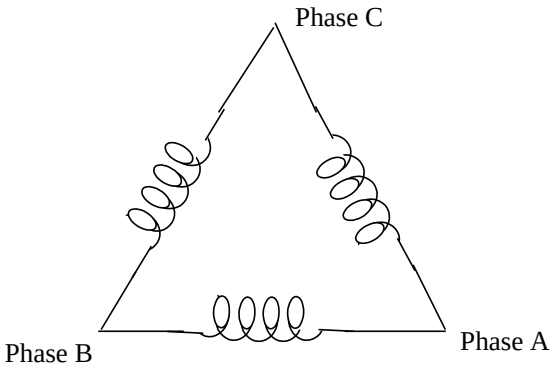

Figure 1.3: Three-Phase Delta Winding Relationship

In this example of a Delta service, three wires will transmit the power to the load. In a true Delta service, the phase-to-ground voltage will usually not be balanced because the ground is not at the center of the delta.

Fig. 1.4 shows the phasor relationships between voltage and current on a three-phase Delta circuit.

In many Delta services, one corner of the delta is grounded. This means the phase to ground voltage will be zero for one phase and will be full phase-to-phase voltage for the other two phases. This is done for protective purposes.

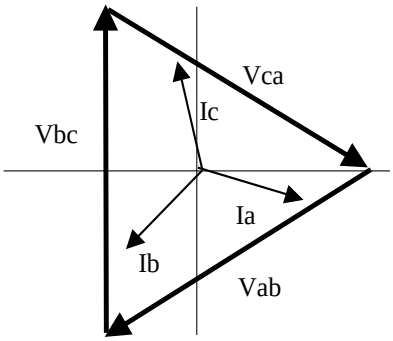

Figure 1.4: Phasor diagram showing three-phase voltages, currents delta connected.

Another common Delta connection is the four-wire, grounded delta used for lighting loads. In this connection the center point of one winding is grounded. On a 120/240 volt, four-wire, grounded Delta service, the phase-to-ground voltage would be 120 volts on two phases and 208 volts on the third phase. Figure 1.5 shows the phasor diagram for the voltages in a three-phase, four-wire Delta system.

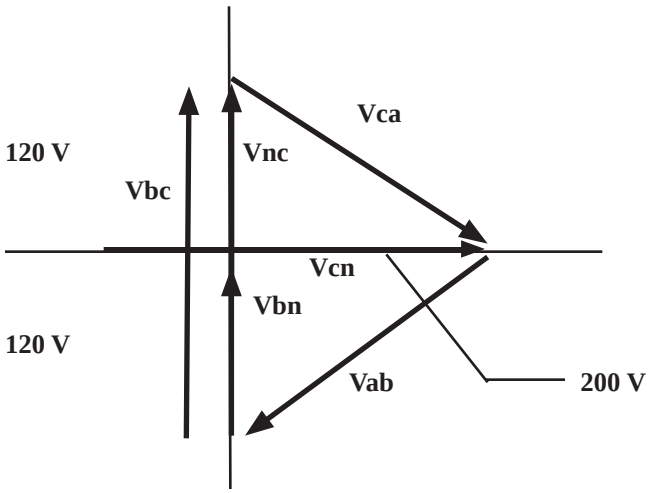

Fig 1.5: Phasor Diagram showing Three-phase, Four-wire Delta Connected System

1.1.3: Blondell's Theorem and Three Phase Measurement

In 1893 an engineer and mathematician named Andre E. Blondell set forth the first scientific basis for poly phase metering. His theorem states:

If energy is supplied to any system of conductors through N wires, the total power in the system is given by the algebraic sum of the readings of N Wattmeters so arranged that each of the N wires contains one current coil, the corresponding potential coil being connected between that wire and some common point. If this common point is on one of the N wires, the measurement may be made by the use of N-1 Wattmeters.

The theorem may be stated more simply, in modern language, as follows:

In a system of N conductors, N-1 meter elements will measure the power or energy taken provided that all the potential coils have a common tie to the conductor in which there is no current coil.

Three-phase power measurement is accomplished by measuring the three individual phases and adding them together to obtain the total three phase value. In older analog meters, this measurement was accomplished using up to three separate elements. Each element combined the single-phase voltage and current to produce a torque on the meter disk. All three elements were arranged around the disk so that the disk was subjected to the combined torque of the three elements. As a result the disk would turn at a higher speed and register power supplied by each of the three wires.

According to Blondell's Theorem, it was possible to reduce the number of elements under certain conditions. For example, a three-phase, three-wire Delta system could be correctly measured with two elements (two potential coils and two current coils) if the potential coils were connected between the three phases with one phase in common.

In a three-phase, four-wire Wye system it is necessary to use three elements. Three voltage coils are connected between the three phases and the common neutral conductor. A current coil is required in each of the three phases.

In modern digital meters, Blondell's Theorem is still applied to obtain proper metering. The difference in modern meters is that the digital meter measures each phase voltage and current and calculates the single-phase power for each phase. The meter then sums the three phase powers to a single three-phase reading.

Some digital meters calculate the individual phase power values one phase at a time. This means the meter samples the voltage and current on one phase and calculates a power value. Then it samples the second phase and calculates the power for the second phase. Finally, it samples the third phase and calculates that phase power. After sampling all three phases, the meter combines the three readings to create the equivalent three-phase power value. Using mathematical averaging techniques, this method can derive a quite accurate measurement of three-phase power.

More advanced meters actually sample all three phases of voltage and current simultaneously and calculate the individual phase and three-phase power values. The advantage of simultaneous sampling is the reduction of error introduced due to the difference in time when the samples were taken.

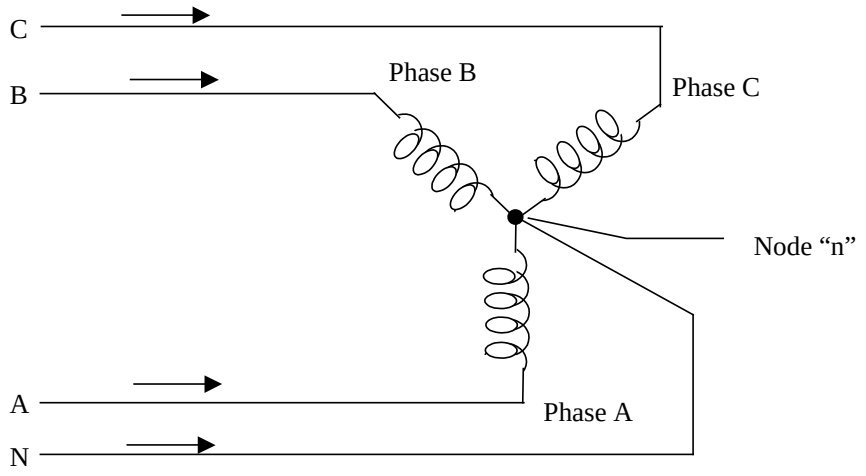

Figure 1.6: Three-Phase Wye Load illustrating Kirchhoff's Law and Blondell's Theorem

Blondell's Theorem is a derivation that results from Kirchhoff's Law. Kirchhoff's Law states that the sum of the currents into a node is zero. Another way of stating the same thing is that the current into a node (connection point) must equal the current out of the node. The law can be applied to measuring three-phase loads. Figure 1.6 shows a typical connection of a three-phase load applied to a three-phase, four-wire service. Krichhoff's Laws hold that the sum of currents A, B, C and N must equal zero or that the sum of currents into Node "n" must equal zero.

If we measure the currents in wires A, B and C, we then know the current in wire N by Kirchhoff's Law and it is not necessary to measure it. This fact leads us to the conclusion of Blondell's Theorem that we only need to measure the power in three of the four wires if they are connected by a common node. In the circuit of Figure 1.6 we must measure the power flow in three wires. This will require three voltage coils and three current coils (a three element meter). Similar figures and conclusions could be reached for other circuit configurations involving Delta-connected loads.

1.2: Power, Energy and Demand

It is quite common to exchange power, energy and demand without differentiating between the three. Because this practice can lead to confusion, the differences between these three measurements will be discussed.

Power is an instantaneous reading. The power reading provided by a meter is the present flow of watts. Power is measured immediately just like current. In many digital meters, the power value is actually measured and calculated over a one second interval because it takes some amount of time to calculate the RMS values of voltage and current. But this time interval is kept small to preserve the instantaneous nature of power.

Energy is always based on some time increment; it is the integration of power over a defined time increment. Energy is an important value because almost all electric bills are based, in part, on the amount of energy used.

Typically, electrical energy is measured in units of kilowatt-hours (kWh). A kilowatt-hour represents a constant load of one thousand watts (one kilowatt) for one hour. Stated another way, if the power delivered (instantaneous watts) is measured as 1,000 watts and the load was served for a one hour time interval then the load would have absorbed one kilowatt-hour of energy. A different load may have a constant power requirement of 4,000 watts. If the load were served for one hour it would absorb four kWh. If the load were served for 15 minutes it would absorb ¼ of that total or one kWh.

Figure 1.7 shows a graph of power and the resulting energy that would be transmitted as a result of the illustrated power values. For this illustration, it is assumed that the power level is held constant for each minute when a measurement is taken. Each bar in the graph will represent the power load for the one-minute increment of time. In real life the power value moves almost constantly.

The data from Figure 1.7 is reproduced in Table 2 to illustrate the calculation of energy. Since the time increment of the measurement is one minute and since we specified that the load is constant over that minute, we can convert the power reading to an equivalent consumed energy reading by multiplying the power reading times 1/60 (converting the time base from minutes to hours).

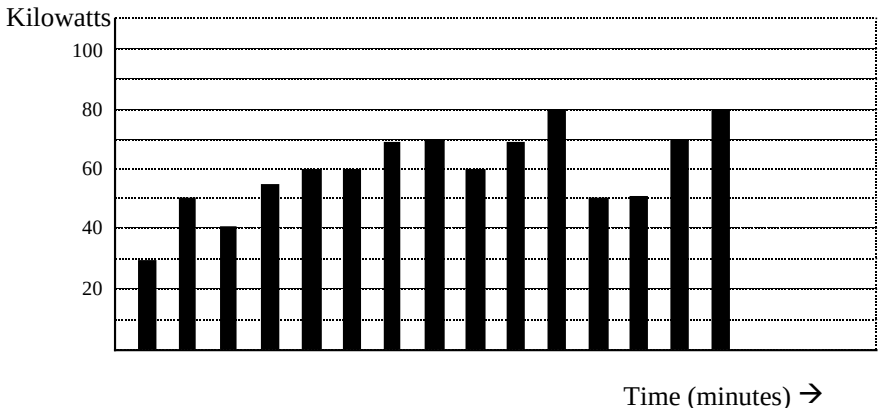

Figure 1.7: Power use over time

Time Interval (Minute)	Power (kW)	Energy (kWh)	Accumulated Energy (kWh)
1	30	0.50	0.50
2	50	0.83	1.33
3	40	0.67	2.00
4	55	0.92	2.92
5	60	1.00	3.92
6	60	1.00	4.92
7	70	1.17	6.09
8	70	1.17	7.26
9	60	1.00	8.26
10	70	1.17	9.43
11	80	1.33	10.76
12	50	0.83	12.42
13	50	0.83	12.42
14	70	1.17	13.59
15	80	1.33	14.92

Table 1.2: Power and energy relationship over time

As in Table 1.2, the accumulated energy for the power load profile of Figure 1.7 is 14.92 kWh.

Demand is also a time-based value. The demand is the average rate of energy use over time. The actual label for demand is kilowatt-hours/hour but this is normally reduced to kilowatts. This makes it easy to confuse demand with power. But demand is not an instantaneous value. To calculate demand it is necessary to accumulate the energy readings (as illustrated in Figure 1.7) and adjust the energy reading to an hourly value that constitutes the demand.

In the example, the accumulated energy is 14.92 kWh. But this measurement was made over a 15-minute interval. To convert the reading to a demand value, it must be normalized to a 60-minute interval. If the pattern were repeated for an additional three 15-minute intervals the total energy would be four times the measured value or 59.68 kWh. The same process is applied to calculate the 15-minute demand value. The demand value associated with the example load is 59.68 kWh/hr or 59.68 kWd. Note that the peak instantaneous value of power is 80 kW, significantly more than the demand value.

Figure 1.8 shows another example of energy and demand. In this case, each bar represents the energy consumed in a 15-minute interval. The energy use in each interval typically falls between 50 and 70 kWh. However, during two intervals the energy rises sharply and peaks at 100 kWh in interval number 7. This peak of usage will result in setting a high demand reading. For each interval shown the demand value would be four times the indicated energy reading. So interval 1 would have an associated demand of 240 kWh/hr. Interval 7 will have a demand value of 400 kWh/hr. In the data shown, this is the peak demand value and would be the number that would set the demand charge on the utility bill.

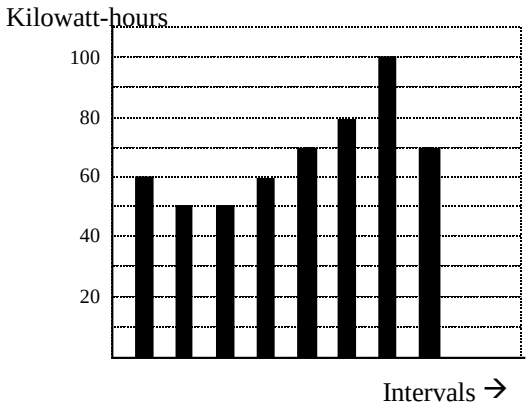

Figure 1.8: Energy Use and Demand

As can be seen from this example, it is important to recognize the relationships between power, energy and demand in order to control loads effectively or to monitor use correctly.

1.3: Reactive Energy and Power Factor

The real power and energy measurements discussed in the previous section relate to the quantities that are most used in electrical systems. But it is often not sufficient to only measure real power and energy. Reactive power is a critical component of the total power picture because almost all real-life applications have an impact on reactive power. Reactive power and power factor concepts relate to both load and generation applications. However, this discussion will be limited to analysis of reactive power and power factor as they relate to loads. To simplify the discussion, generation will not be considered.

Real power (and energy) is the component of power that is the combination of the voltage and the value of corresponding current that is directly in phase with the voltage. However, in actual practice the total current is almost never in phase with the voltage. Since the current is not in phase with the voltage, it is necessary to consider both the inphase component and the component that is at quadrature (angularly rotated 90 degrees or perpendicular) to the voltage. Figure 1.9 shows a single-phase voltage and current and breaks the current into its in-phase and quadrature components.

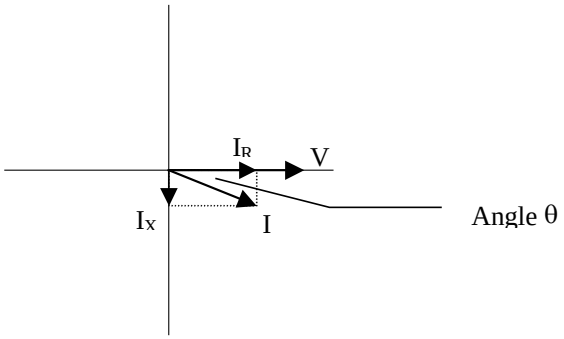

Figure 1.9: Voltage and complex current

The voltage (V) and the total current (I) can be combined to calculate the apparent power or VA. The voltage and the in-phase current (IR) are combined to produce the real power or watts. The voltage and the quadrature current (IX) are combined to calculate the reactive power.

The quadrature current may be lagging the voltage (as shown in Figure 1.9) or it may lead the voltage. When the quadrature current lags the voltage the load is requiring both real power (watts) and reactive power (VARs). When the quadrature current leads the voltage the load is requiring real power (watts) but is delivering reactive power (VARs) back into the system; that is VARs are flowing in the opposite direction of the real power flow.

Reactive power (VARs) is required in all power systems. Any equipment that uses magnetization to operate requires VARs. Usually the magnitude of VARs is relatively low compared to the real power quantities. Utilities have an interest in maintaining VAR requirements at the customer to a low value in order to maximize the return on plant invested to deliver energy. When lines are carrying VARs, they cannot carry as many watts. So keeping the VAR content low allows a line to carry its full capacity of watts. In order to encourage customers to keep VAR requirements low, most utilities impose a penalty if the VAR content of the load rises above a specified value.

A common method of measuring reactive power requirements is power factor. Power factor can be defined in two different ways. The more common method of calculating power factor is the ratio of the real power to the apparent power. This relationship is expressed in the following formula:

Total PF = real power / apparent power = watts/VA

This formula calculates a power factor quantity known as Total Power Factor. It is called Total PF because it is based on the ratios of the power delivered. The delivered power quantities will include the impacts of any existing harmonic content. If the voltage or current includes high levels of harmonic distortion the power values will be affected. By calculating power factor from the power values, the power factor will include the impact of harmonic distortion. In many cases this is the preferred method of calculation because the entire impact of the actual voltage and current are included.

A second type of power factor is Displacement Power Factor. Displacement PF is based on the angular relationship between the voltage and current. Displacement power factor does not consider the magnitudes of voltage, current or power. It is solely based on the phase angle differences. As a result, it does not include the impact of harmonic distortion.

Displacement power factor is calculated using the following equation:

Displacement PF = cos θ, where θ is the angle between the voltage and the current (see Fig. 1.9).

In applications where the voltage and current are not distorted, the Total Power Factor will equal the Displacement Power Factor. But if harmonic distortion is present, the two power factors will not be equal.

1.4: Harmonic Distortion

Harmonic distortion is primarily the result of high concentrations of non-linear loads. Devices such as computer power supplies, variable speed drives and fluorescent light ballasts make current demands that do not match the sinusoidal waveform of AC electricity. As a result, the current waveform feeding these loads is periodic but not sinusoidal. Figure 1.10 shows a normal, sinusoidal current waveform. This example has no distortion.

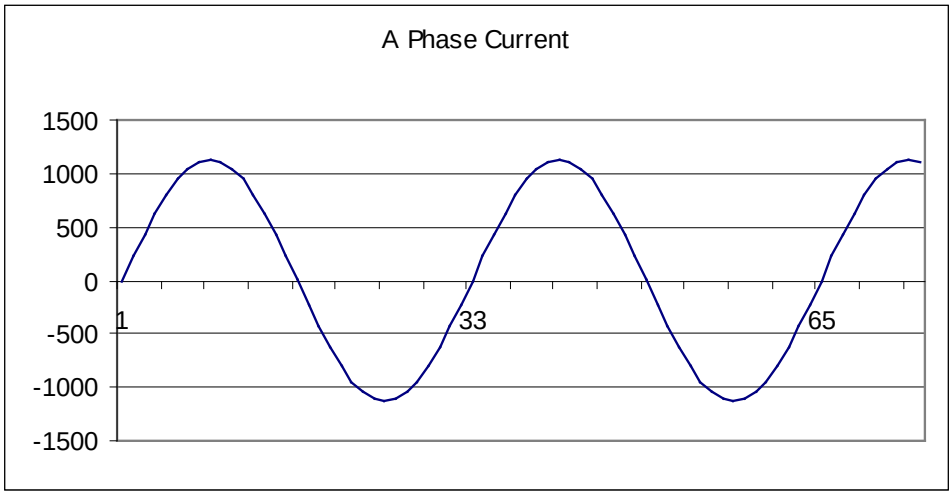

Figure 1.10: Non-distorted current waveform

Figure 1.11 shows a current waveform with a slight amount of harmonic distortion. The waveform is still periodic and is fluctuating at the normal 60 Hz frequency. However, the waveform is not a smooth sinusoidal form as seen in Figure 1.10.

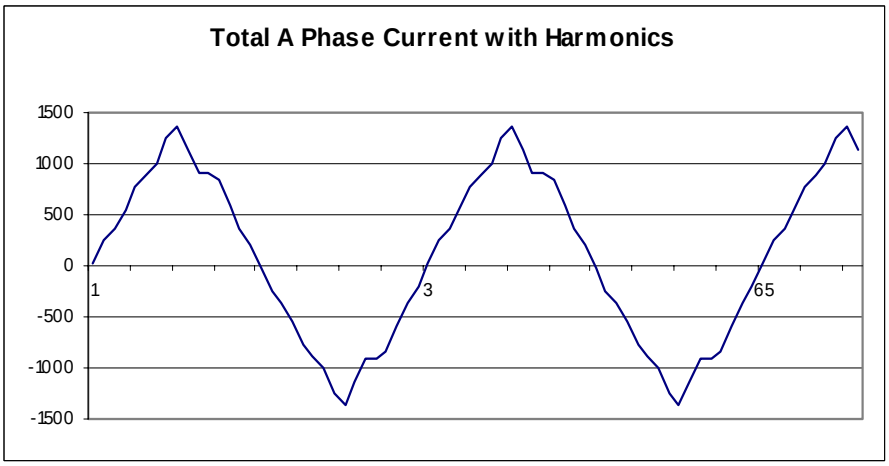

Figure 1.11: Distorted current wave

The distortion observed in Figure 1.11 can be modeled as the sum of several sinusoidal waveforms of frequencies that are multiples of the fundamental 60 Hz frequency. This modeling is performed by mathematically disassembling the distorted waveform into a collection of higher frequency waveforms. These higher frequency waveforms are referred to as harmonics. Figure 1.12 shows the content of the harmonic frequencies that make up the distortion portion of the waveform in Figure 1.11.

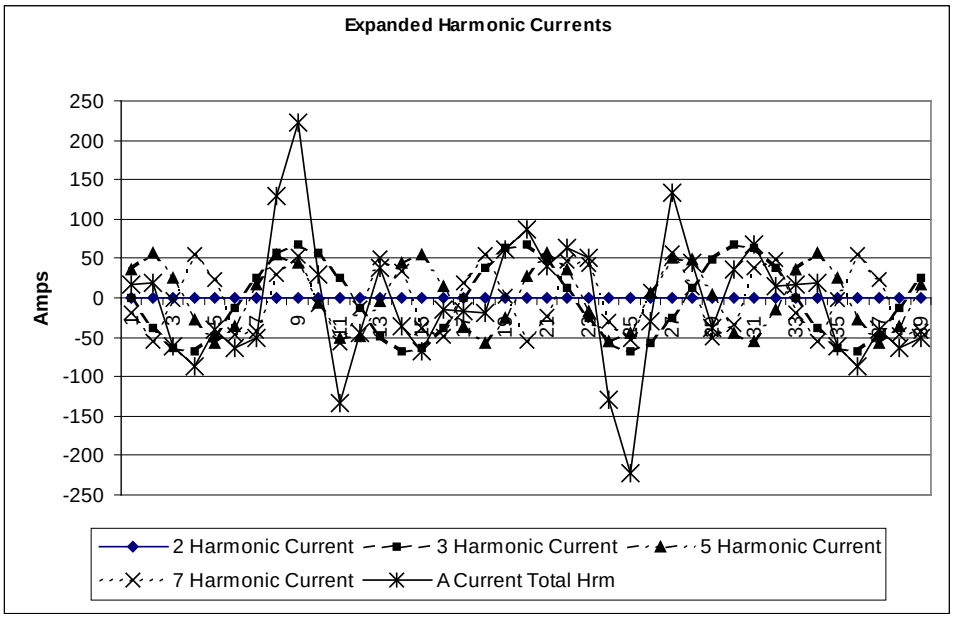

Figure 1.12: Waveforms of the Harmonics

The waveforms shown in Figure 1.12 are not smoothed but do provide an indication of the impact of combining multiple harmonic frequencies together.

When harmonics are present it is important to remember that these quantities are operating at higher frequencies. Therefore, they do not always respond in the same manner as 60 Hz values.

Inductive and capacitive impedance are present in all power systems. We are accustomed to thinking about these impedances as they perform at 60 Hz. However, these impedances are subject to frequency variation.

$XL = jwL$ and

$XC = 1/jwC$

At 60 Hz, w = 377; but at 300 Hz (5th harmonic) w = 1,885. As frequency changes, impedance changes, and system impedance characteristics that are normal at 60 Hz may behave entirely differently in the presence of higher order harmonic waveforms.

Traditionally, the most common harmonics have been the low order, odd frequencies, such as the 3rd, 5th, 7th, and 9th. However newer, non-linear loads are introducing significant quantities of higher order harmonics.

Since much voltage monitoring and almost all current monitoring is performed using instrument transformers, the higher order harmonics are often not visible. Instrument transformers are designed to pass 60 Hz quantities with high accuracy. These devices, when designed for accuracy at low frequency, do not pass high frequencies with high accuracy; at frequencies above about 1200 Hz they pass almost no information. So when instrument transformers are used, they effectively filter out higher frequency harmonic distortion making it impossible to see.

However, when monitors can be connected directly to the measured circuit (such as direct connection to 480 volt bus) the user may often see higher order harmonic distortion. An important rule in any harmonics study is to evaluate the type of equipment and connections before drawing a conclusion. Not being able to see harmonic distortion is not the same as not having harmonic distortion.

It is common for advanced meters to perform a function commonly referred to as waveform capture. Waveform capture is the ability of a meter to capture a present picture of the voltage or current waveform for viewing and harmonic analysis. Typically a waveform capture will be one or two cycles in duration and can be viewed as the actual waveform, as a spectral view of the harmonic content, or as a tabular view showing the magnitude and phase shift of each harmonic value. Data collected with waveform capture is typically not saved to memory. Waveform capture is a real-time data collection event.

Waveform capture should not be confused with waveform recording. Waveform recording is used to record multiple cycles of all voltage and current waveforms in response to a transient condition.

1.5: Power Quality

Power quality can mean several different things. The terms 'power quality' and 'power quality problem' have been applied to all types of conditions. A simple definition of 'power quality problem' is any voltage, current or frequency deviation that results in mis-operation or failure of customer equipment or systems. The causes of power quality problems vary widely and may originate in the customer equipment, in an adjacent customer facility or with the utility.

In his book "Power Quality Primer," Barry Kennedy provided information on different types of power quality problems. Some of that information is summarized in Table 1.3, below.

Cause	Disturbance Type	Source
Impulse Transient	Transient voltage disturbance, sub-cycle duration	Lightning Electrostatic discharge Load switching Capacitor switching
Oscillatory transient with decay	Transient voltage, sub-cycle duration	Line/cable switching Capacitor switching Load switching
Sag/swell	RMS voltage, multiple cycle duration	Remote system faults
Interruptions	RMS voltage, multipile second or longer duration	System protection Circuit breakers Fuses Maintenance
Undervoltage/ Overvoltage	RMS voltage, steady state, multiple second or longer duration	Motor starting Load variations Load dropping
Voltage flicker	RMS voltage, steady state, repetitive condition	Intermittent loads Motor starting Arc furnaces
Harmonic distortion	Steady state current or voltage, long term duration	Non-linear loads System resonance

Table 1.3: Typical power quality problems and sources

It is often assumed that power quality problems originate with the utility. While it is true that many power quality problems can originate with the utility system, many problems originate with customer equipment. Customer-caused problems may manifest themselves inside the customer location or they may be transported by the utility system to another adjacent customer. Often, equipment that is sensitive to power
quality problems may in fact also be the cause of the problem.

If a power quality problem is suspected, it is generally wise to consult a power quality professional for assistance in defining the cause and possible solutions to the problem.

Chapter 2
Shark® 200 Meter Overview and Specifications

2.1: Shark® 200 Meter Overview

The Shark® 200 meter is a multifunction, data logging, power and energy meter with waveform recording capability, designed to be used in electrical substations, panel boards, as a power meter for OEM equipment, and as a primary revenue meter, due to its high performance measurement capability. The unit provides multifunction measurement of all electrical parameters and makes the data available in multiple formats via display, communication systems, and analog retransmits. The unit also has data logging and load profiling to provide historical data analysis, and waveform recording that allows for enhanced power quality analysis.

Figure 2.1: Shark® 200 Meter

The Shark® 200 meter offers up to 4 MegaBytes of flash memory. The unit provides you with up to seven logs: three historic logs, a log of limit alarms, a log of I/O changes, a waveform log, and a sequence of events log. Purposes of these features include historical load profiling, voltage analysis, and recording power factor distribution. The Shark® 200 meter's real-time clock allows all events to be time-stamped. (See NOTE on flash memory on page 2-4.)

Optional 100BaseT Ethernet capability is available.

The Shark® 200 meter is designed with advanced meaurement capabilities, allowing it to achieve high performance accuracy. It is specified as a 0.2% class energy meter for billing applications as well as a highly accurate panel indication meter.

The Shark® 200 meter provides additional capabilities, including standard RS485, Modbus and DNP 3.0 Protocols, an IrDA Port for remote interrogation, and Option cards that can be added at any time.

Features of the Shark® 200 meter include:

- 0.2% Class revenue certifiable energy and demand Metering
- Meets ANSI C12.20 (0.2%) and IEC 687 (0.2%) classes
- Multifunction measurement including voltage, current, power, frequency, energy, etc.
- Power quality measurements (%THD and Alarm Limits)
- V-Switch™ Key Technology - field upgradeable without removing installed meter
- Percentage of Load Bar for analog meter reading
- Easy to use faceplate programming
- IrDA Port for PDA remote read
- RS485 communication
- Optional I/O Cards - field upgradeable without removing installed meter, including 100BaseT Ethernet.
- Sampling rate of up to 512 samples per cycle for waveform recording
- Transformer/Line Loss compensation (see Chapter 5 and Appendix B in the *Communicator EXT User Manual* for instructions on using this feature).

In addition to the Shark® 200 meter/transducer configuration, a Shark® 200T transducer configuration is available. The Shark® 200T transducer is a digital transducer only unit, providing RS485 communication via Modbus RTU, Modbus ASCII or DNP 3.0 protocols. The unit is designed to install using DIN Rail Mounting. (See Section 3.4 of this manual for Shark® 200T transducer mounting information.)

Figure 2.2: Shark® 200T Transducer

2.1.1: Voltage and Current Inputs

Universal Voltage Inputs

Voltage Inputs allow measurement up to Nominal 480VAC (Phase to Reference) and 600VAC (Phase to Phase). This insures proper meter safety when wiring directly to high voltage systems. One unit will perform to specification on 69 Volt, 120 Volt, 230 Volt, 277 Volt, and 347 Volt power systems.

NOTE: Higher voltages require the use of potential transformers (PTs).

Current Inputs

The unit supports a 5 amp or a 1 amp secondary for current measurements.
NOTE: The secondary current must be specified and ordered with the meter.

The Shark® 200 meter's Current Inputs use a unique dual input method:

Method 1: CT Pass Through

The CT passes directly through the meter without any physical termination on the meter. This insures that the meter cannot be a point of failure on the CT circuit. This is preferable for utility users when sharing relay class CTs. No Burden is added to the secondary CT circuit.

Method 2: Current "Gills"

This unit additionally provides ultra-rugged Termination Pass Through Bars that allow CT leads to be terminated on the meter. This, too, eliminates any possible point of failure at the meter. This is a preferred technique for insuring that relay class CT integrity is not compromised (the CT will not open in a fault condition).

2.1.2: Ordering Information

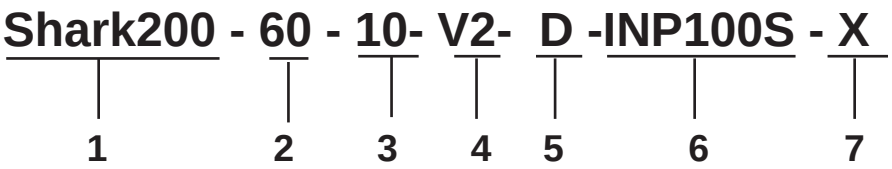

1. Model:
Shark® 200 Meter/Transducer
Shark® 200T Transducer (no display)

2. Frequency:
-50: 50 Hz System
-60: 60 Hz System

3. Current Input:
-10: 5 Amp Secondary
-2: 1 Amp Secondary

4. V-Switch™ Key Pack:
-V1: Multifunction meter only
-V2: Above, with 2 MegaBytes datalogging memory
-V3: Above, with %THD
-V4: Above, with limit and control functions
-V5: Above, with 3 MegaBytes datalogging memory and 64 samples per cycle wavefrom recorder
-V6: Above, with 4 MegaBytes datalogging memory and 512 samples per cycle waveform recorder
See Section 2.1.3 for more information and instructions on obtaining a V-Switch™ key.

5. Power Supply:
-D2 Option: Universal, (90 to 265) VAC @50/60Hz or (100 to 370) VDC
-D Option: (18-60) VDC

6 and 7. I/O Slots 1 and 2: (See Chapter 7 for I/O Card Specifications.)
-X: None
-INP100S: 100BaseT Ethernet
-RO1S: 2 Relay Outputs/2 Status Inputs
-PO1S: 4 Pulse Outputs/4 Status Inputs
-1mAOS: 4 Channel Analog Output 0-1 (Bidirectional)
-20mAOS: 4 Channel Analog Output 4-20mA
-FOSTS: Fiber Optic Output ST Terminated
-FOVPS: Fiber Optic Output Versatile Link Terminated

Example:

Shark200-60-10-V2-D-INP100S-X

(Shark® 200 meter with 60 Hz System, 5 Amp Secondary, V2-V-Switch™ **key**, 18-60 VDC Power Supply, 100BaseT Ethernet in Card Slot 1 and no card in Card Slot 2)

2.1.3: V-Switch™ Key Technology

The Shark® 200 meter is equipped with V-Switch™ key technology, a virtual firmware-based switch that allows you to enable meter features through software communication. This V-Switch™ key technology allows the unit to be upgraded after installation without removing it from service.

Available V-Switch™ key upgrades:

V-Switch™ key 1 (-V1): Multifunction measurement.
V-Switch™ key 2 (-V2): Multifunction measurement and 2 MegaBytes* for datalogging.
V-Switch™ key 3 (-V3): Multifunction measurement with harmonics and 2 MegaBytes* for datalogging.
V-Switch™ key 4 (-V4): Multifunction measurement with harmonics, 2 MegaBytes* for datalogging, and limit and control functions.
V-Switch™ key 5 (-V5): Multifunction measurement with harmonics, 3 MegaBytes* for datalogging, limit and control functions, and 64 samples per cycle waveform recorder.
V-Switch™ key 6 (-V6): Multifunction measurement with harmonics, 4 MegaBytes* for datalogging, limit and control functions, and 512 samples per cycle waveform recorder.

* NOTE: Because the memory is flash-based rather than NVRAM (non-volatile random-access memory), some sectors are reserved for overhead, erase procedures, and spare sectors for long-term wear reduction.

Obtaining a V-Switch™ Key:

Contact EIG's inside sales staff at sales@electroind.com or by calling (516) 334-0870 (USA) and provide the following information:

1. Serial Number or Numbers of the meters you are upgrading. Use the number(s), with leading zeros, shown in the Communicator EXT Device Status screen (from the Communicator EXT Main screen, click Tools>Device Status).
2. Desired V-Switch™ key.
3. Credit Card or Purchase Order Number.

EIG will issue you the V-Switch™ key.

Enabling the V-Switch™ Key:

1. Open Communicator EXT.
2. Power up your meter.
3. Connect to the Shark® 200 meter through Communicator EXT (see Chapter 5).
4. Click **Tools>Change V-Switch** from the Title Bar. A screen opens, requesting the encrypted key.
5. Enter the V-Switch™ key provided by EIG.
6. Click the **OK** button.
   The V-Switch™ key is enabled and the meter is reset.

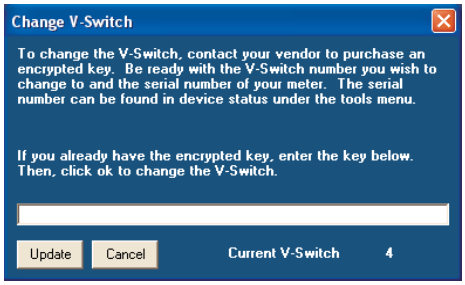
Change V-Switch
To change the V-Switch, contact your vendor to purchase an encrypted key. Be ready with the V-Switch number you wish to change to and the serial number of your meter. The serial number can be found in device status under the tools menu.
If you already have the encrypted key, enter the key below. Then, click ok to change the V-Switch.
Update
Cancel
Current V-Switch
4

NOTE: For more details on software configuration, refer to the *Communicator EXT User's Manual.*

2.1.4: Measured Values

The Shark® 200 meter provides the following Measured Values all in Real-Time Instantaneous, and some additionally as Average, Maximum and Minimum values.

Shark® 200 Meter's Measured Values

Measured Values	Instantaneous	Avg	Max	Min
Voltage L-N	X		X	X
Voltage L-L	X		X	X
Current per Phase	X	X	X	X
Current Neutral	X	X	X	X
WATT(A,B,C,Tot.)	X	X	X	X
VAR (A,B,C,Tot.)	X	X	X	X
VA (A,B,C,Tot.)	X	X	X	X
PF (A,B,C,Tot.)	X	X	X	X
+Watt-Hour (A,B,C,Tot.)	X			
-Watt-Hour (A,B,C,Tot.)	X			
Watt-Hour Net	X			
+VAR-Hour (A,B,C,Tot.)	X			
-VAR-Hour (A,B,C,Tot.)	X			
VAR-Hour Net (A,B,C,Tot.)	X			
VA-Hour (A,B,C,Tot.)	X			
Frequency	X		X	X
Harmonics to the 40th Order	X			
%THD	X		X	X
Voltage Angles	X			
Current Angles	X			
% of Load Bar	X			
Waveform Scope	X			

2.1.5: Utility Peak Demand

The Shark® 200 meter provides user-configured **Block** (Fixed) Window or **Rolling** Window Demand modes. This feature enables you to set up a customized Demand profile. **Block Window Demand** mode records the average demand for time intervals that you define (usually 5, 15 or 30 minutes). **Rolling Window Demand** mode functions like multiple, overlapping Block Window Demands. You define the subintervals at which an average of demand is calculated. An **example** of Rolling Window Demand mode would be a 15-minute Demand block using 5-minute subintervals, thus providing a new demand reading every 5 minutes, based on the last 15 minutes.

Utility Demand Features can be used to calculate Watt, VAR, VA and PF readings. Voltage provides an Instantaneous Max and Min reading which displays the highest surge and lowest sag seen by the meter. All other parameters offer Max and Min capability over the user-selectable averaging period.

2.2: Specifications

Power Supply

Range:	D2 Option: Universal, (90 to 265) VAC @50/60Hz or (100 to 370) VDC D Option: (18-60) VDC
Power Consumption:	(5 to 10)VA, (3.5 to 7)W - depending on the meter's hardware configuration

Voltage Inputs

(For Accuracy Specifications, see Section 2.4 of this chapter.)

Absolute Maximum Range:	Universal, Auto-ranging: Phase to Reference (Va, Vb, Vc to Vref): (20 to 576)VAC Phase to Phase (Va to Vb, Vb to Vc, Vc to Va): (0 to 721)VAC
Supported hookups:	3 Element Wye, 2.5 Element Wye, 2 Element Delta, 4 Wire Delta
Input Impedance:	1M Ohm/Phase
Burden:	0.36VA/Phase Max at 600 Volts; 0.014VA at 120 Volts
Pickup Voltage:	20VAC
Connection:	7 Pin 0.400" Pluggable Terminal Block AWG#12 -26/ (0.129 -3.31) mm^2
Fault Withstand:	Meets IEEE C37.90.1
Reading:	Programmable Full Scale to any PT Ratio

Current Inputs

(For Accuracy Specifications, see Section 2.4 of this chapter.)

Class 10:	5A Nominal, 10A Maximum
Class 2:	1A Nominal, 2A Maximum
Burden:	0.005VA Per Phase Max at 11 Amps
Pickup Current:	0.1% of nominal (0.2% of nominal if using Current Only mode, that is, there is no connection to the voltage inputs.)
Connections:	O Lug or U Lug Electrical Connection (Diagram 4.1) Pass-through Wire, 0.177" / 4.5mm Maximum Diameter (Diagram 4.2) Quick Connect, 0.25" Male Tab (Diagram 4.3)
Fault Withstand:	100A/10sec., 300A/3sec., 500A/1sec.
Reading:	Programmable Full Scale to any CT Ratio
Continuous Current Withstand:	20 Amps for Screw Terminated or Pass Through Connections

KYZ/RS485 Port Specifications

RS485 Transceiver; meets or exceeds EIA/TIA-485 Standard:

Type:	Two-wire, half duplex
Min. Input Impedance:	96kΩ
Max. Output Current:	±60mA

Wh Pulse

KYZ output contacts (and infrared LED light pulses through face plate):
(See Section 6.4 of Chapter 6 for Kh values.)

Pulse Width:	90ms
Full Scale Frequency:	~3Hz
Contact type:	Solid State – SPDT (NO – C – NC)
Relay type:	Solid state
Peak switching voltage:	DC ±350V
Continuous load current:	120mA
Peak load current:	350mA for 10ms
On resistance, max.:	35Ω
Leakage current:	1µA@350V
Isolation:	AC 3750V
Reset State:	(NC - C) Closed; (NO - C) Open

Infrared LED:

Peak Spectral Wavelength:	940nm
Reset State:	Off

Internal Schematic:

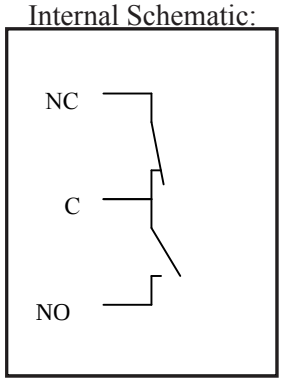

(De-energized State)

Output timing:

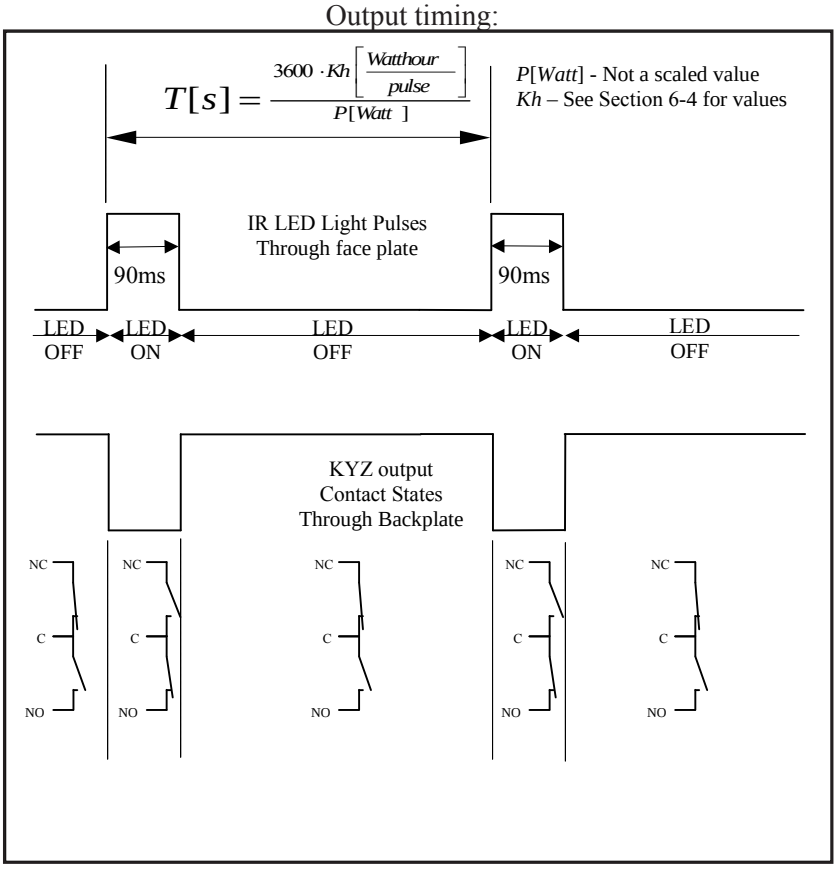

Isolation

All Inputs and Outputs are galvanically isolated to 2500 Vac

Environmental Rating

Storage:	$(-20 \text{ to } +70)^0$ C
Operating:	$(-20 \text{ to } +70)^0$ C
Humidity:	to 95% RH Non-condensing
Faceplate Rating:	NEMA12 (Water Resistant), Mounting Gasket Included

Measurement Methods

Voltage, Current:	True RMS
Power:	Sampling at over 400 Samples per Cycle on All Channels

Update Rate

Watts, VAR and VA:	Every 6 cycles (e.g., 100 ms @ 60 Hz)
All other parameters:	Every 60 cycles (e.g., 1 s @ 60 Hz) 1 second for current only measurement, if reference voltage is not available

Communication

Standard:

1. RS485 Port through Back Plate
2. IrDA Port through Face Plate
3. Energy Pulse Output through Back Plate and Infrared LED through Faceplate

Optional, through I/O card slot

1. INP100S - 100BaseT Ethernet Card
2. FOSTS - Fiber Optic Output ST Terminated Card
3. FOVPS - Fiber Optic Output Versatile Link Terminated Card

Protocols:	Modbus RTU, Modbus ASCII, DNP 3.0
Com Port Baud Rate:	9,600 to 57,600 bps
Com Port Address:	001-247
Data Format:	8 Bit, No Parity
Shark® 200T transducer	Default Initial Communication Baud 9600 (See Chapter 5)

Mechanical Parameters

Dimensions: see Chapter 3.

Weight: (Without Option Card)	2 pounds/ 0.9kg (ships in a 6”/152.4mm cube container)

2.3: Compliance

- UL Listing: USL/CNL E250818
- CE (EN61326-1, FCC Part 15, Subpart B, Class A)
- IEC 687 (0.2% Accuracy)
- ANSI C12.20 (0.2% Accuracy)
- ANSI (IEEE) C37.90.1 Surge Withstand
- ANSI C62.41 (Burst)
- IEC 1000-4-2 - ESD
- IEC 1000-4-3 - Radiated Immunity
- IEC 1000-4-4 - Fast Transient
- IEC1000-4-5 - Surge Immunity

2.4: Accuracy

(For full Range specifications see Section 2.2 of this chapter.)

For 23^{o} C, 3 Phase balanced Wye or Delta load, at 50 or 60 Hz (as per order), 5A (Class 10) nominal unit:

Parameter	Accuracy	Accuracy Input Range[1]
Voltage L-N [V]	0.1% of reading	(69 to 480)V
Voltage L-L [V]	0.2% of reading **2**	(120 to 600)V
Current Phase [A]	0.1% of reading **1, 3**	(0.15 to 5) A
Current Neutral (calculated) [A]	2% of Full Scale **1**	(0.15 to 5) A @ (45 to 65) Hz
Active Power Total [W]	0.2% of reading **1, 2**	(0.15 to 5) A @ (69 to 480) V @ +/- (0.5 to 1) lag/lead PF
Active Energy Total [Wh]	0.2% of reading **1, 2**	(0.15 to 5) A @ (69 to 480) V @ +/- (0.5 to 1) lag/lead PF
Reactive Power Total [VAR]	0.2% of reading **1, 2**	(0.15 to 5) A @ (69 to 480) V @ +/- (0 to 0.8) lag/lead PF
Reactive Energy Total [VARh]	0.2% of reading **1, 2**	(0.15 to 5) A @ (69 to 480) V @ +/- (0 to 0.8) lag/lead PF
Apparent Power Total [VA]	0.2% of reading **1, 2**	(0.15 to 5) A @ (69 to 480) V @ +/- (0.5 to 1) lag/lead PF
Apparent Energy Total [VAh]	0.2% of reading **1, 2**	(0.15 to 5) A @ (69 to 480) V @ +/- (0.5 to 1) lag/lead PF
Power Factor	0.2% of reading **1, 2**	(0.15 to 5) A @ (69 to 480) V @ +/- (0.5 to 1) lag/lead PF
Frequency [Hz]	+/- 0.03 Hz	(45 to 65) Hz
Total Harmonic Distortion [%]	+/- 2% **1, 4**	(0.5 to 10)A or (69 to 480)V, measurement range (1 to 99.99)%
Load Bar	+/- 1 segment	(0.005 to 6) A

1 • For 2.5 element programmed units, degrade accuracy by an additional 0.5% of reading.
- For 1A (Class 2) Nominal, degrade accuracy by an additional 0.5% of reading.
- For 1A (Class 2) Nominal, the input current range for accuracy specification is 20% of the values listed in the table.

2 For unbalanced voltage inputs where at least one crosses the 150V autoscale threshold (for example, 120V/120V/208V system), degrade the accuracy to 0.4% of reading.

3 With reference voltage applied (VA, VB, or VC). Otherwise, degrade accuracy to 0.2%. See hookup diagrams 8, 9, and 10 in Chapter 4.

4 At least one voltage input (minimum 20 Vac) must be connected for THD measurement on current channels.

Chapter 3
Mechanical Installation

3.1: Introduction

The Shark® 200 meter can be installed using a standard ANSI C39.1 (4" Round) or an IEC 92mm DIN (Square) form. In new installations, simply use existing DIN or ANSI punches. For existing panels, pull out old analog meters and replace them with the Shark® 200 meter. The various models use the same installation. See Section 3.4 for Shark® 200T transducer installation. See Chapter 4 for wiring diagrams.

NOTE: The drawings shown below and on the next page give you the meter dimensions in inches and millimeters (mm shown in brackets) Tolerance is +/- 0.1" [2.54 mm].

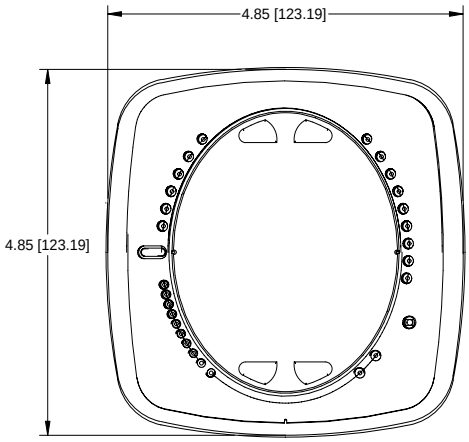

Figure 3.1: Meter Face

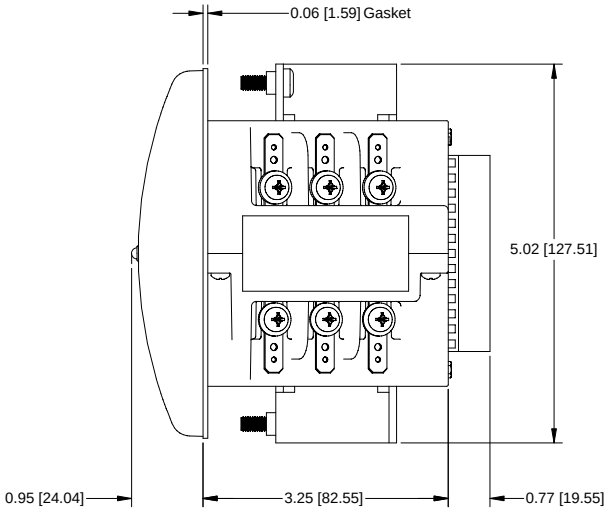

Figure 3.2: Meter Dimensions

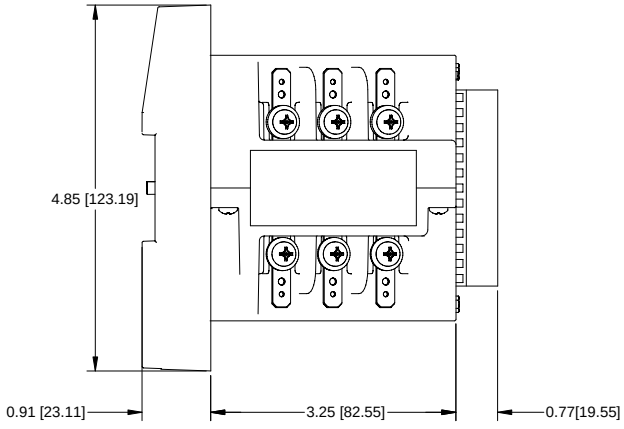

Fig. 3.3: Transducer Dimensions

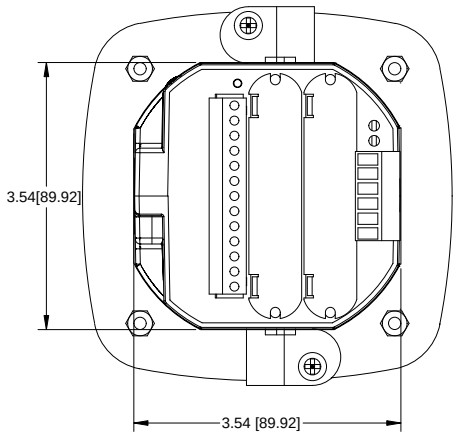

Fig. 3.4: Meter Back Face

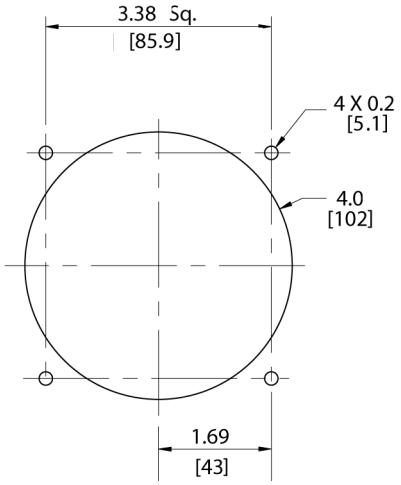

Figure 3.5: ANSI Mounting Panel Cutout

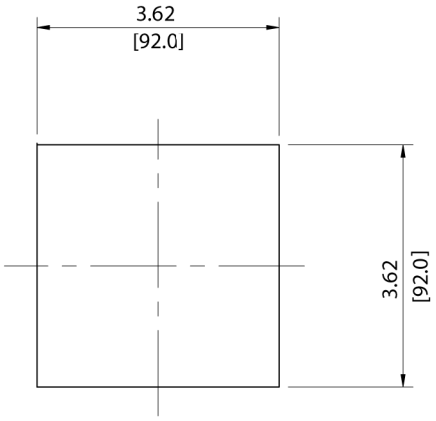

Figure 3.6: DIN Mounting Cutout

Recommended Tools for Shark® 200 Meter Installation: #2 Phillips screwdriver, small adjustable wrench and wire cutters.

The Shark® 200 meter is designed to withstand harsh environmental conditions; however **it is recommended** you install it in a dry location, free from dirt and corrosive substances. (See Environmental Specifications in Chapter 2.)

3.2: ANSI Installation Steps

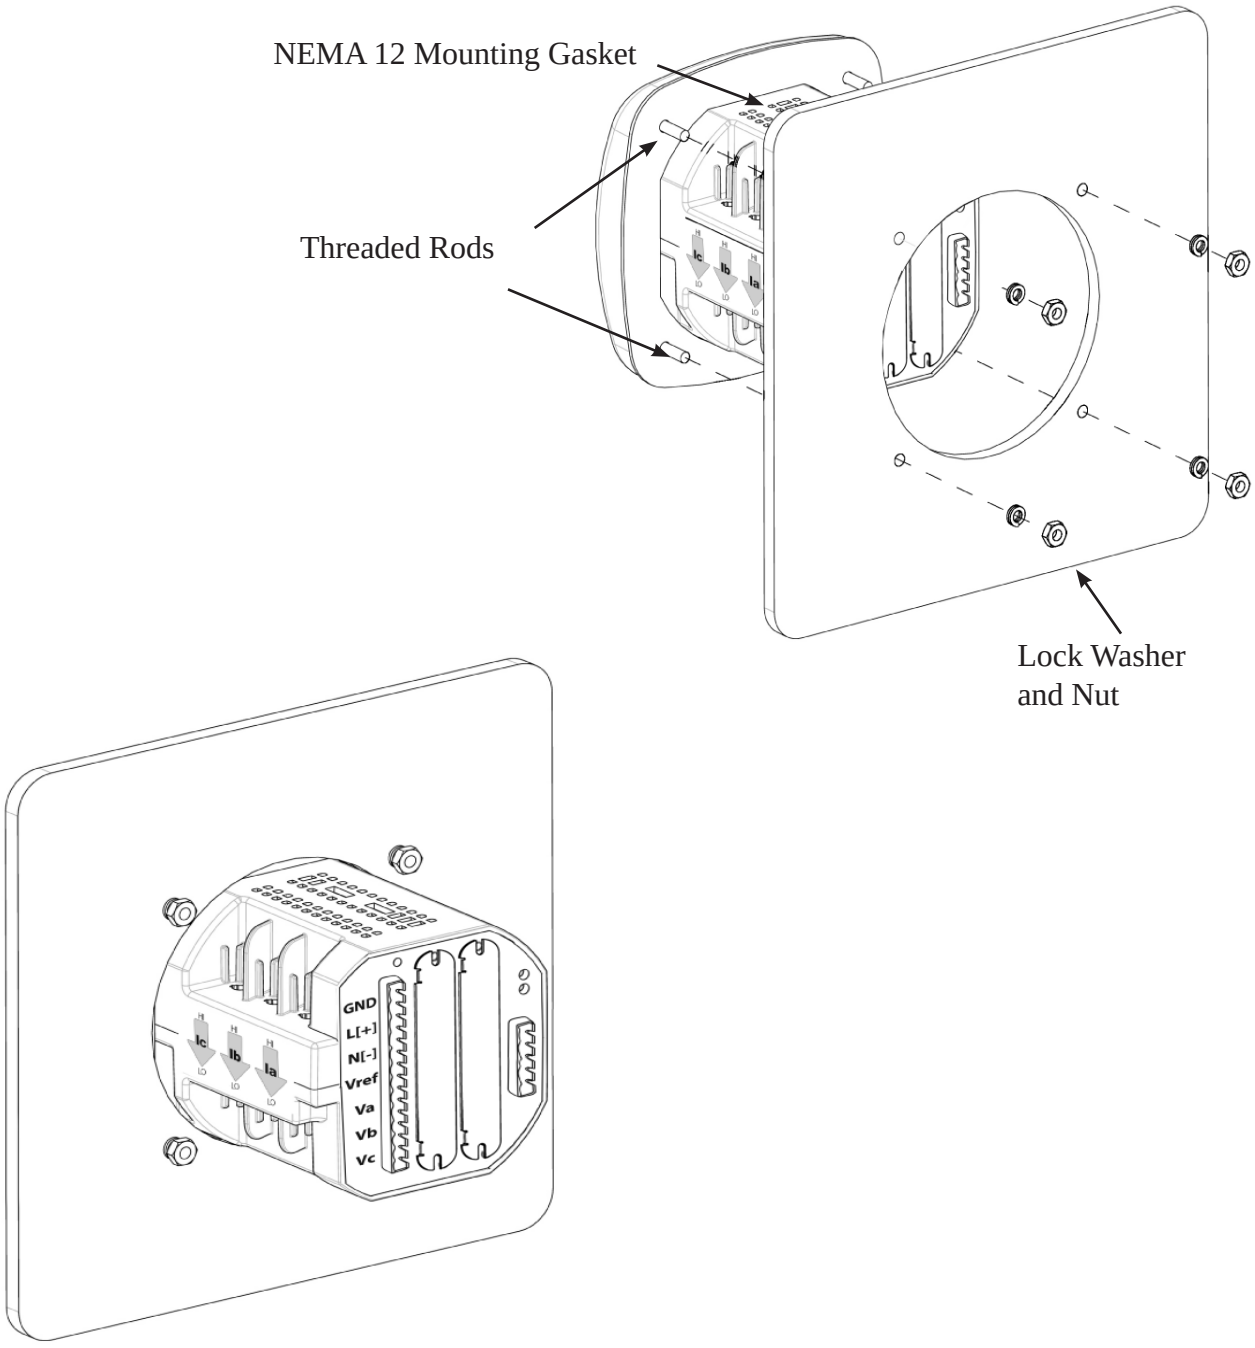

Figure 3.7: ANSI Mounting Procedure

1. Insert 4 threaded rods by hand into the back of meter. Twist until secure.
2. Slide NEMA 12 Mounting Gasket onto back of meter with rods in place.
3. Slide meter with Mounting Gasket into panel.
4. Secure from back of panel with lock washer and nut on each threaded rod.
   Use a small wrench to tighten. Do not overtighten. The maximum installation torque is 0.4 Newton-Meter.

3.3: DIN Installation Steps

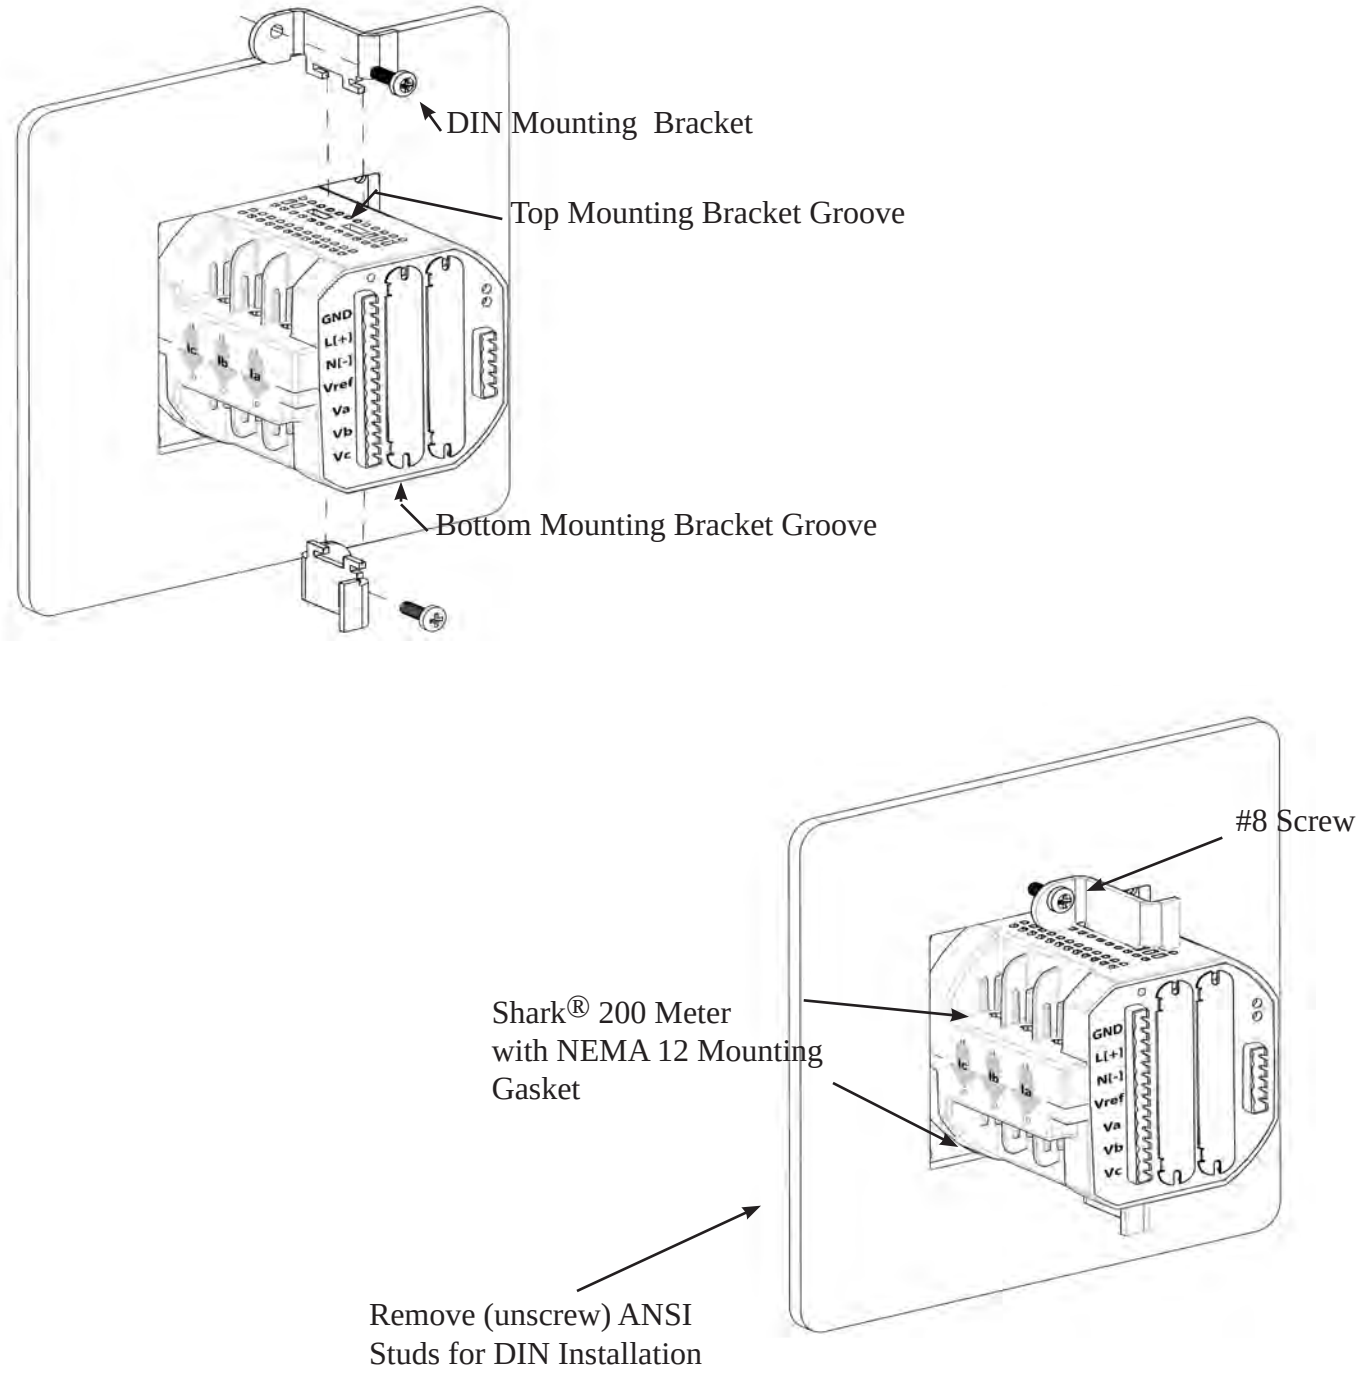

Figure 3.8: DIN Mounting Procedure

1. Slide meter with NEMA 12 Mounting Gasket into panel. (Remove ANSI Studs, if in place.)
2. From back of panel, slide 2 DIN Mounting Brackets into grooves in top and bottom of meter housing. Snap into place.
3. Secure meter to panel with lock washer and a #8 screw through each of the 2 mounting brackets. Tighten with a #2 Phillips screwdriver. Do not overtighten. The maximum installation torque is 0.4 Newton-Meter.

3.4: Shark® 200T Transducer Installation

The Shark® 200T transducer is installed using DIN Rail Mounting.

Specs for DIN Rail Mounting:	International Standards DIN 46277/3
DIN Rail (Slotted) Dimensions:	0.297244" x 1.377953" x 3" (inches)
	7.55mm x 35mm x 76.2mm (millimeters)

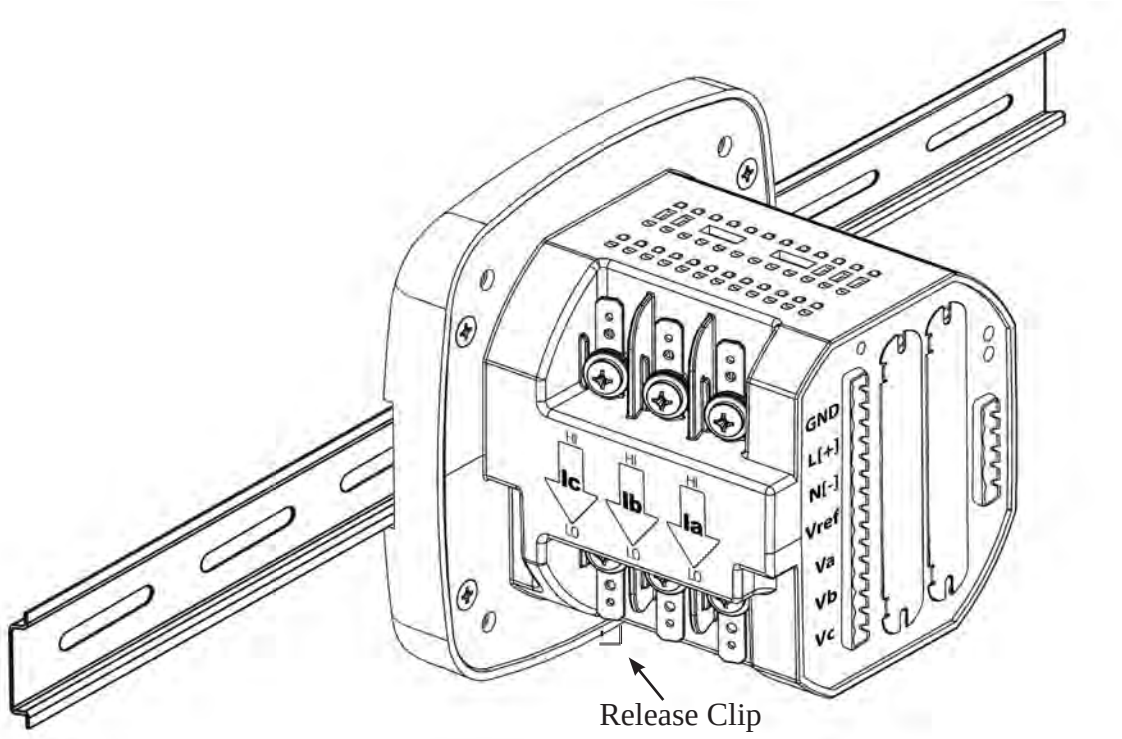

Figure 3.9: DIN Rail Mounting Procedure

1. Slide top groove of meter onto the DIN Rail.
2. Press gently until the meter clicks into place.

NOTES:

- To remove the meter from the DIN Rail, pull down on the Release Clip to detach the unit from the rail.
- If mounting with the DIN Rail provided, use the Black Rubber Stoppers (also provided).

NOTE ON DIN RAILS:
DIN Rails are commonly used as a mounting channel for most terminal blocks, control devices, circuit protection devices and PLCs. DIN Rails are made of cold rolled steel electrolitically plated and are also available in aluminum, PVC, stainless steel and copper.

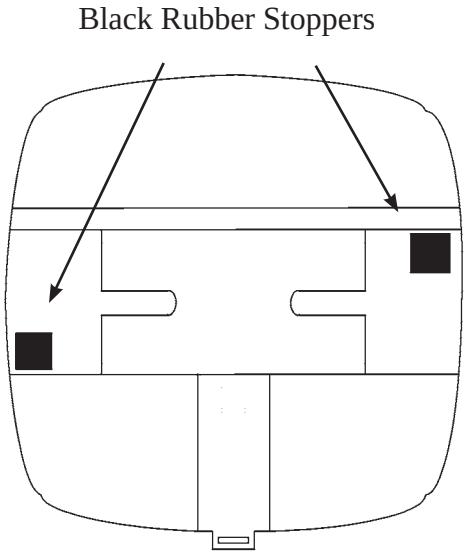

Figure 3.10: DIN Rail Detail

Chapter 4
Electrical Installation

4.1: Considerations When Installing Meters

Installation of the Shark® 200 meter must be performed by only qualified personnel who follow standard safety precautions during all procedures. Those personnel should have appropriate training and experience with high voltage devices. Appropriate safety gloves, safety glasses and protective clothing is recommended.

During normal operation of the Shark® 200 meter, dangerous voltages flow through many parts of the meter, including: Terminals and any connected CTs (Current Transformers) and PTs (Potential Transformers), all I/O Modules (Inputs and Outputs) and their circuits. All Primary and Secondary circuits can, at times, produce lethal voltages and currents. Avoid contact with any current-carrying surfaces.

Do not use the meter or any I/O Output Device for primary protection or in an energy-limiting capacity. The meter can only be used as secondary protection. Do not use the meter for applications where failure of the meter may cause harm or death. Do not use the meter for any application where there may be a risk of fire.

All meter terminals should be inaccessible after installation.

Do not apply more than the maximum voltage the meter or any attached device can withstand. Refer to meter and/or device labels and to the Specifications for all devices before applying voltages. Do not HIPOT/Dielectric test any Outputs, Inputs or Communications terminals.

EIG recommends the use of Shorting Blocks and Fuses for voltage leads and power supply to prevent hazardous voltage conditions or damage to CTs, if the meter needs to be removed from service. CT grounding is optional.

NOTES:

- IF THE EQUIPMENT IS USED IN A MANNER NOT SPECIFIED BY THE MANUFACTURER, THE PROTECTION PROVIDED BY THE EQUIPMENT MAY BE IMPAIRED.

- THERE IS NO REQUIRED PREVENTIVE MAINTENANCE OR INSPECTION NECESSARY FOR SAFETY. HOWEVER, ANY REPAIR OR MAINTENANCE SHOULD BE PERFORMED BY THE FACTORY.

DISCONNECT DEVICE: The following part is considered the equipment disconnect device. A SWITCH OR CIRCUIT-BREAKER SHALL BE INCLUDED IN THE END-USE EQUIPMENT OR BUILDING INSTALLATION. THE SWITCH SHALL BE IN CLOSE PROXIMITY TO THE EQUIPMENT AND WITHIN EASY REACH OF THE OPERATOR. THE SWITCH SHALL BE MARKED AS THE DISCONNECTING DEVICE FOR THE EQUIPMENT.

4.2: CT Leads Terminated to Meter

The Shark® 200 meter is designed to have Current Inputs wired in one of three ways. Diagram 4.1 shows the most typical connection where CT Leads are terminated to the meter at the Current Gills. This connection uses Nickel-Plated Brass Studs (Current Gills) with screws at each end. This connection allows the CT wires to be terminated using either an "O" or a "U" lug. Tighten the screws with a #2 Phillips screwdriver. The maximum installation torque is 1 Newton-Meter.

Other current connections are shown in Figures 4.2 and 4.3. Voltage and RS485/KYZ Connection is shown in Figure 4.4

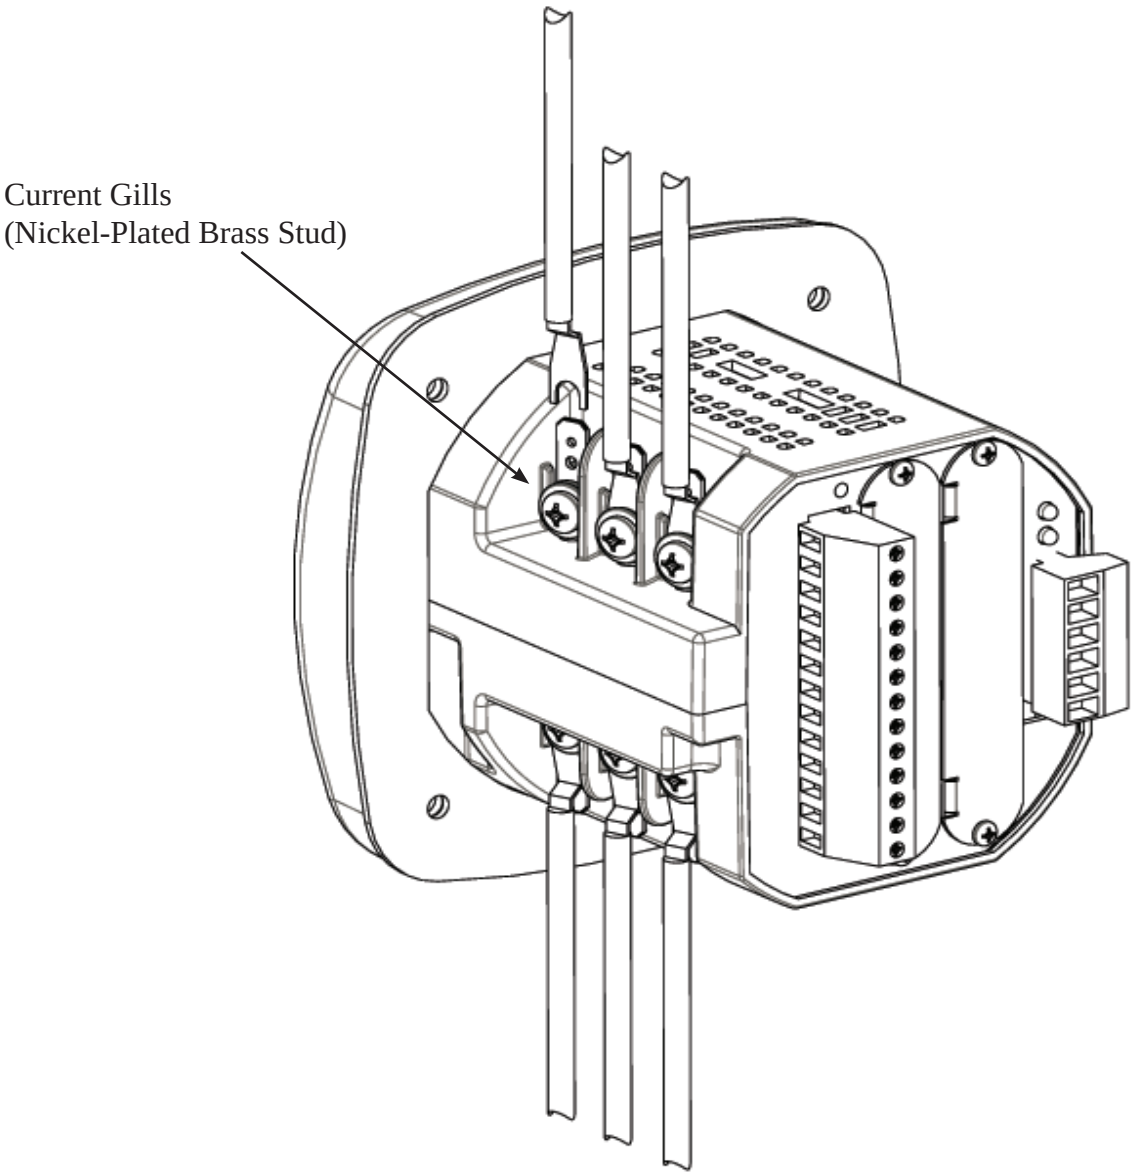

Figure 4.1: CT Leads terminated to Meter, #8 Screw for Lug Connection

Wiring Diagrams are shown in section 4.8 of this chapter.

Communications Connections are detailed in Chapter 5.

4.3: CT Leads Pass Through (No Meter Termination)

The second method allows the CT wires to pass through the CT Inputs without terminating at the meter. In this case, remove the Current Gills and place the CT wire directly through the CT opening. The opening will accomodate up to 0.177" / 4.5mm maximum diameter CT wire.

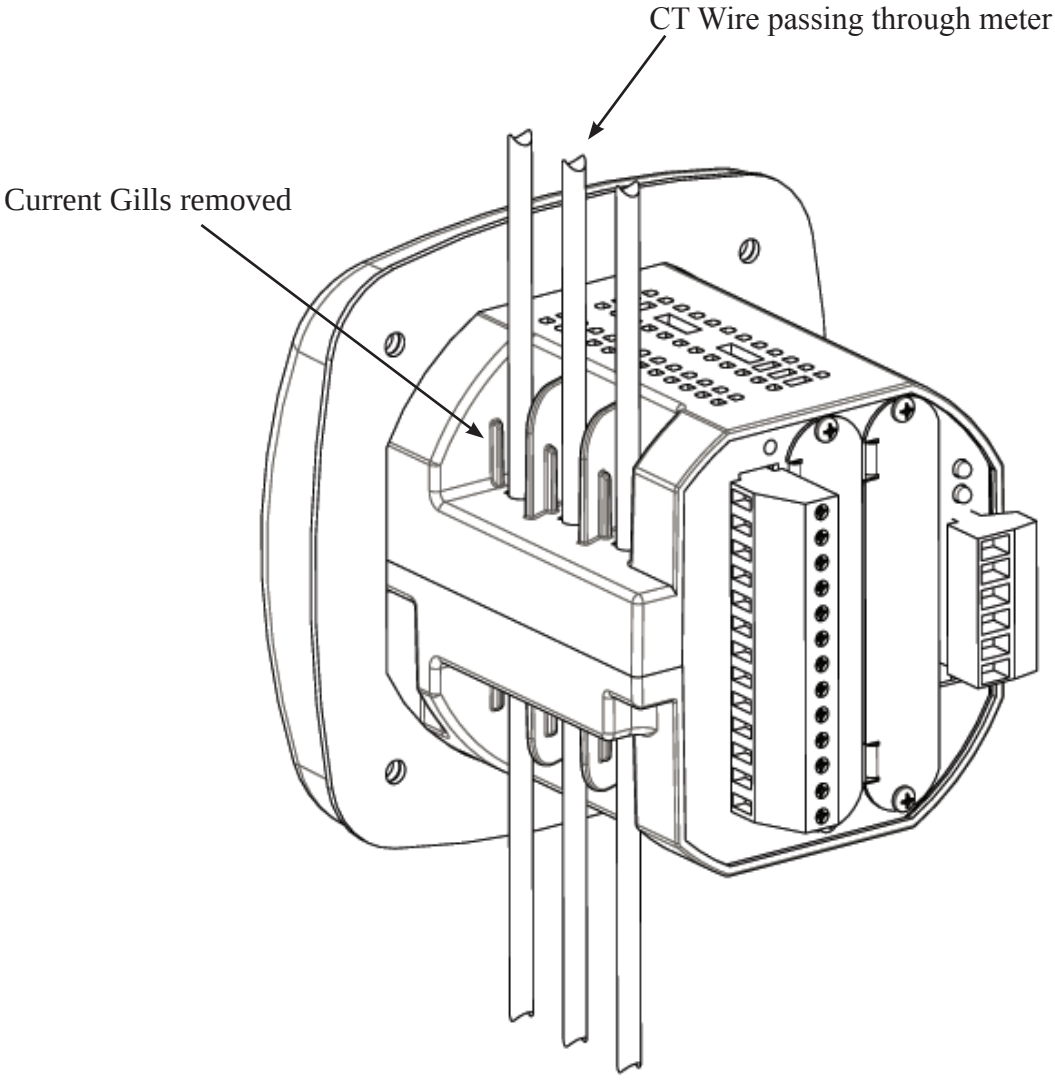

Figure 4.2: Pass-Through Wire Electrical Connection

4.4: Quick Connect Crimp-on Terminations

For Quick Termination or for Portable Applications, a 0.25” Quick Connect Crimp-on Connectors can also be used.

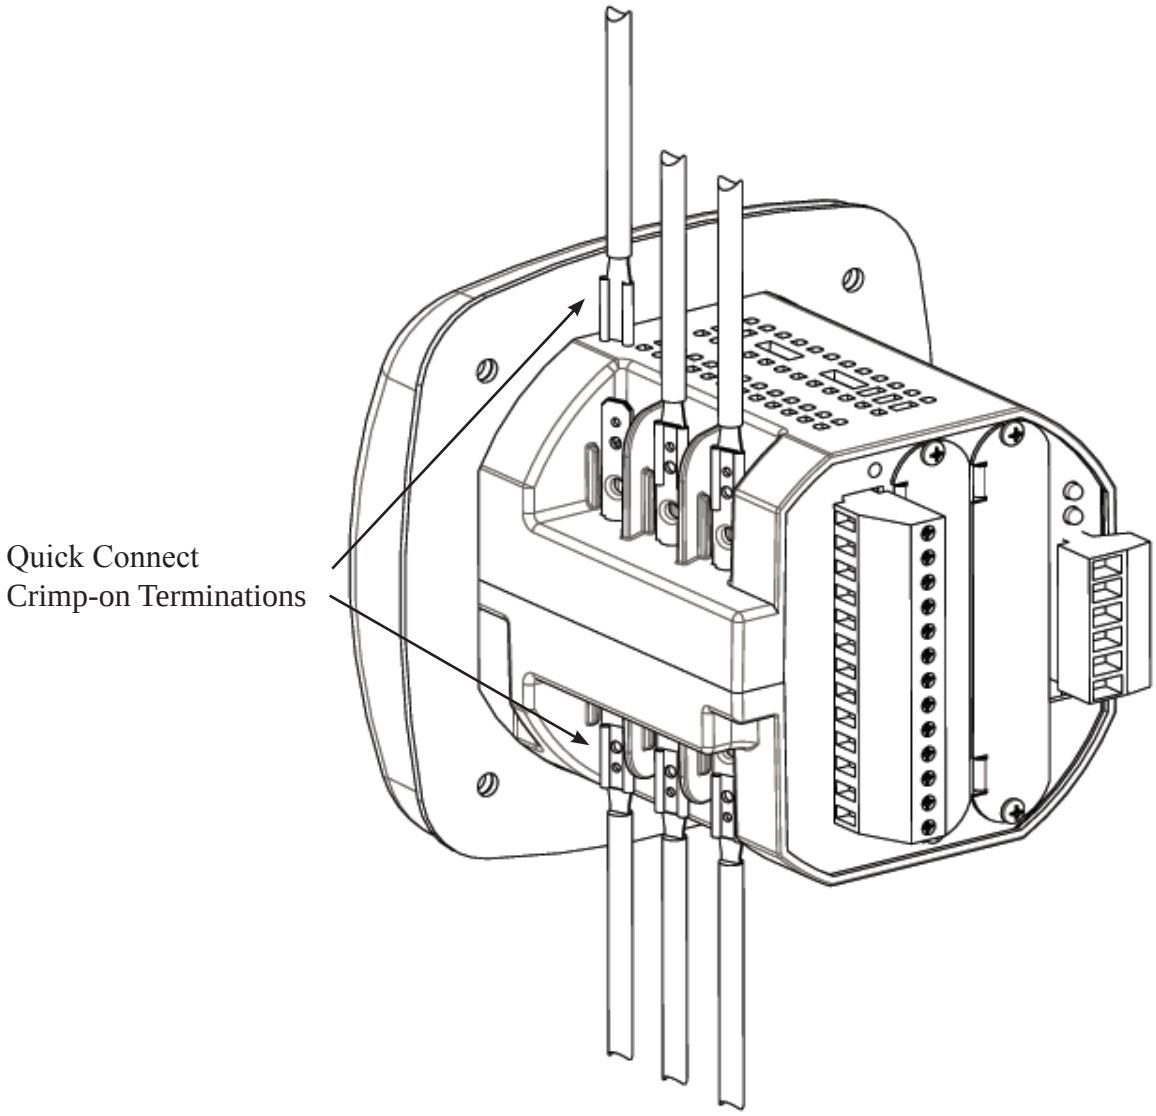

Figure 4.3: Quick Connect Electrical Connection

4.5: Voltage and Power Supply Connections

Voltage Inputs are connected to the back of the unit via a optional wire connectors. The connectors accomodate AWG# 12 -26/ (0.129 - 3.31)mm^2.

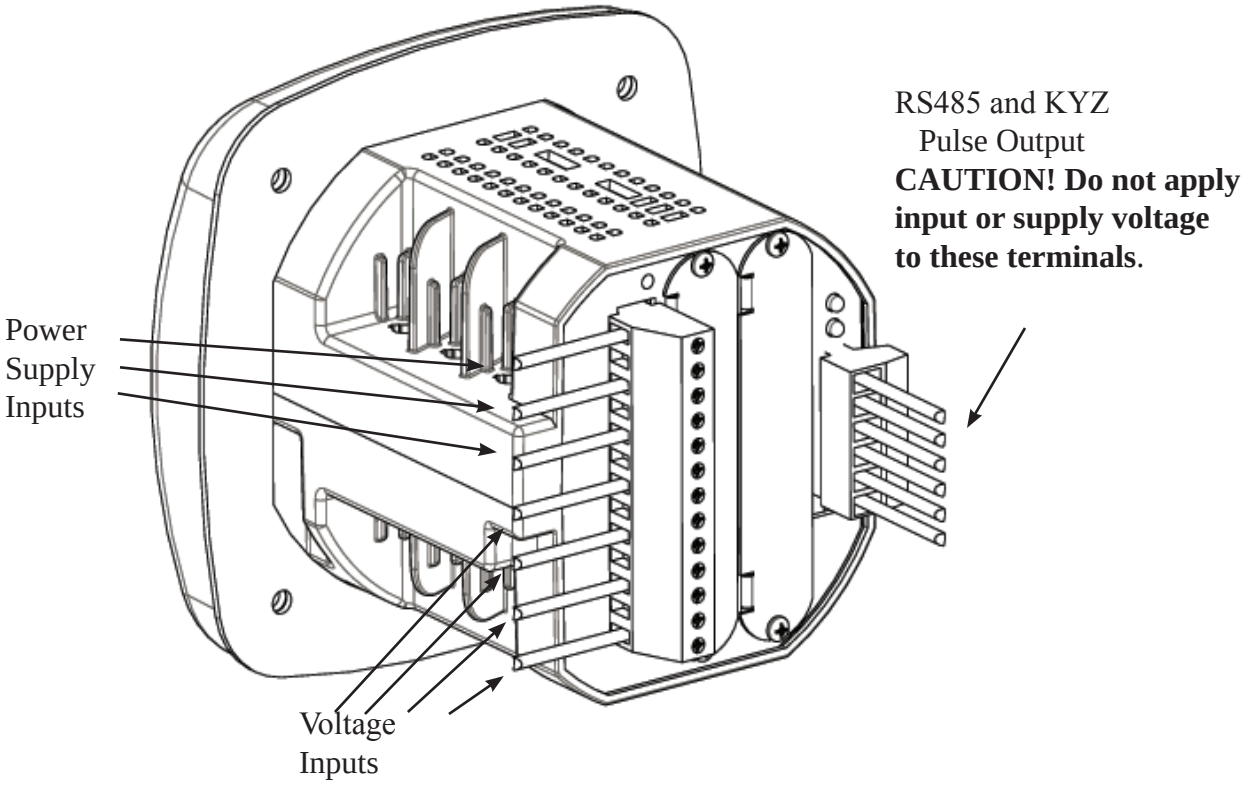

Figure 4.4: Voltage Connection

4.6: Ground Connections

The meter's Ground Terminals should be connected directly to the installation's protective earth ground. Use AWG# 12/2.5 mm^2 wire for this connection.

4.7: Voltage Fuses

EIG recommends the use of fuses on each of the sense voltages and on the control power, even though the wiring diagrams in this chapter do not show them.

Use a 0.1 Amp fuse on each voltage input.
Use a 3 Amp Slow Blow fuse on the power supply.

4.8: Electrical Connection Diagrams

The following pages contain electrical connection diagrams for the Shark® 200 meter. Choose the diagram that best suits your application. Be sure to maintain the CT polarity when wiring.

The diagrams are presented in the following order:

1. Three Phase, Four-Wire System Wye/Delta with Direct Voltage, 3 Element
   a. Example of Dual-Phase Hookup
   b. Example of Single Phase Hookup
2. Three Phase, Four-Wire System Wye with Direct Voltage, 2.5 Element
3 Three-Phase, Four-Wire Wye/Delta with PTs, 3 Element
4. Three-Phase, Four-Wire Wye with PTs, 2.5 Element
5. Three-Phase, Three-Wire Delta with Direct Voltage
6. Three-Phase, Three-Wire Delta with 2 PTs
7. Three-Phase, Three-Wire Delta with 3 PTs
8. Current Only Measurement (Three Phase)
9. Current Only Measurement (Dual Phase)
10. Current Only Measurement (Single Phase)

1. Service: WYE/Delta, 4-Wire with No PTs, 3 CTs

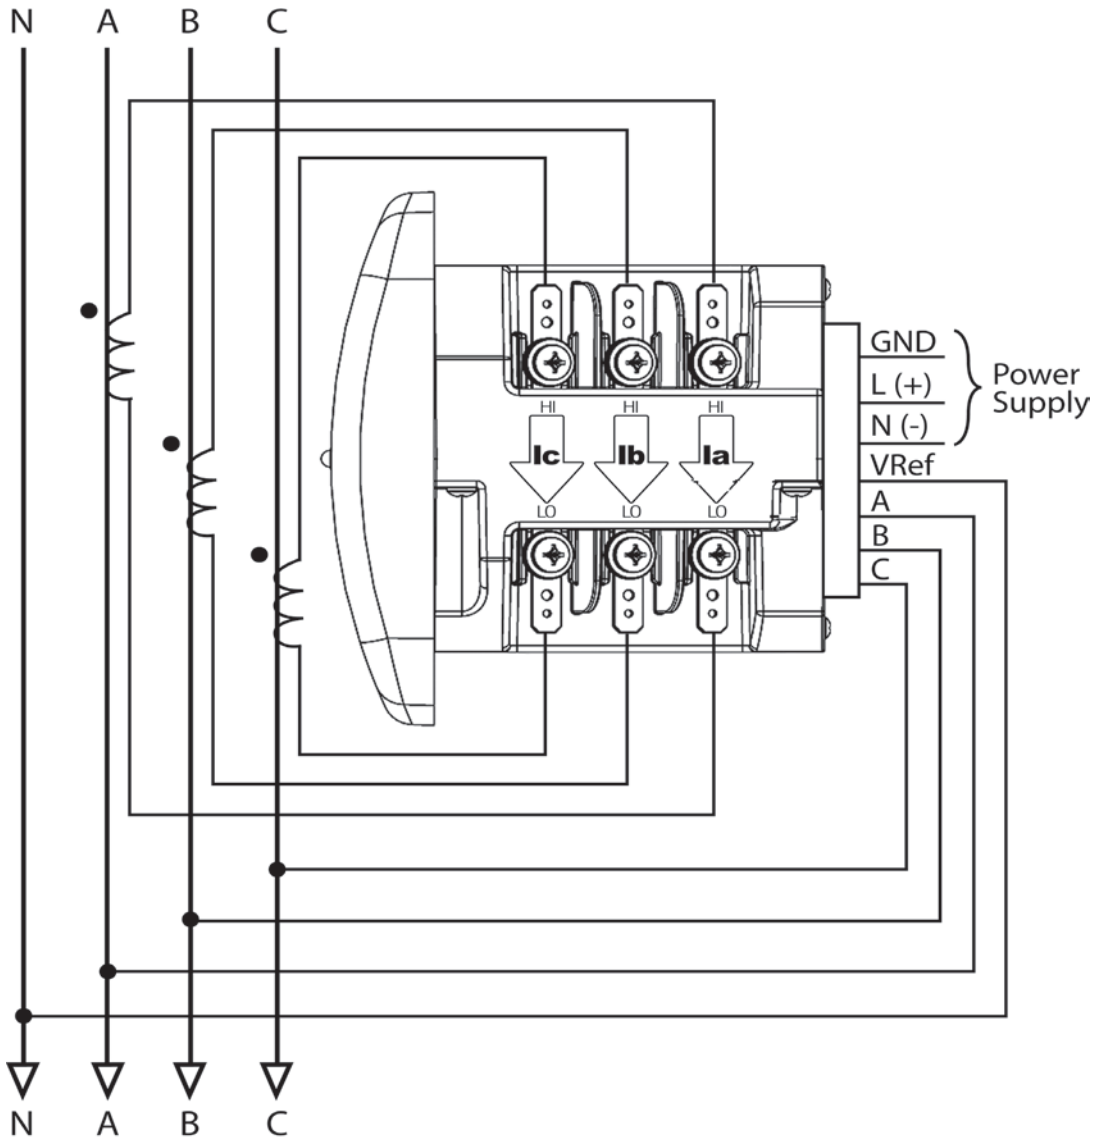

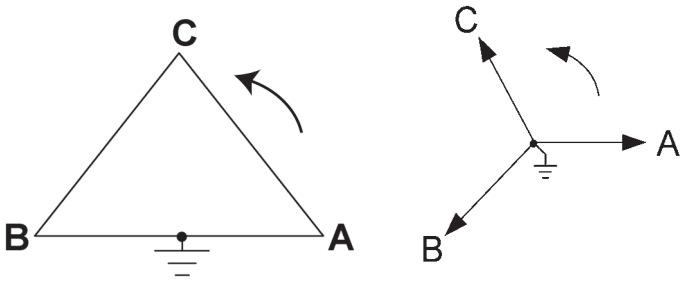

Select: "3 EL WYE" (3 Element Wye) from the Shark® meter's Front Panel Display. (See Chapter 6.)

1a. Example of Dual Phase Hookup

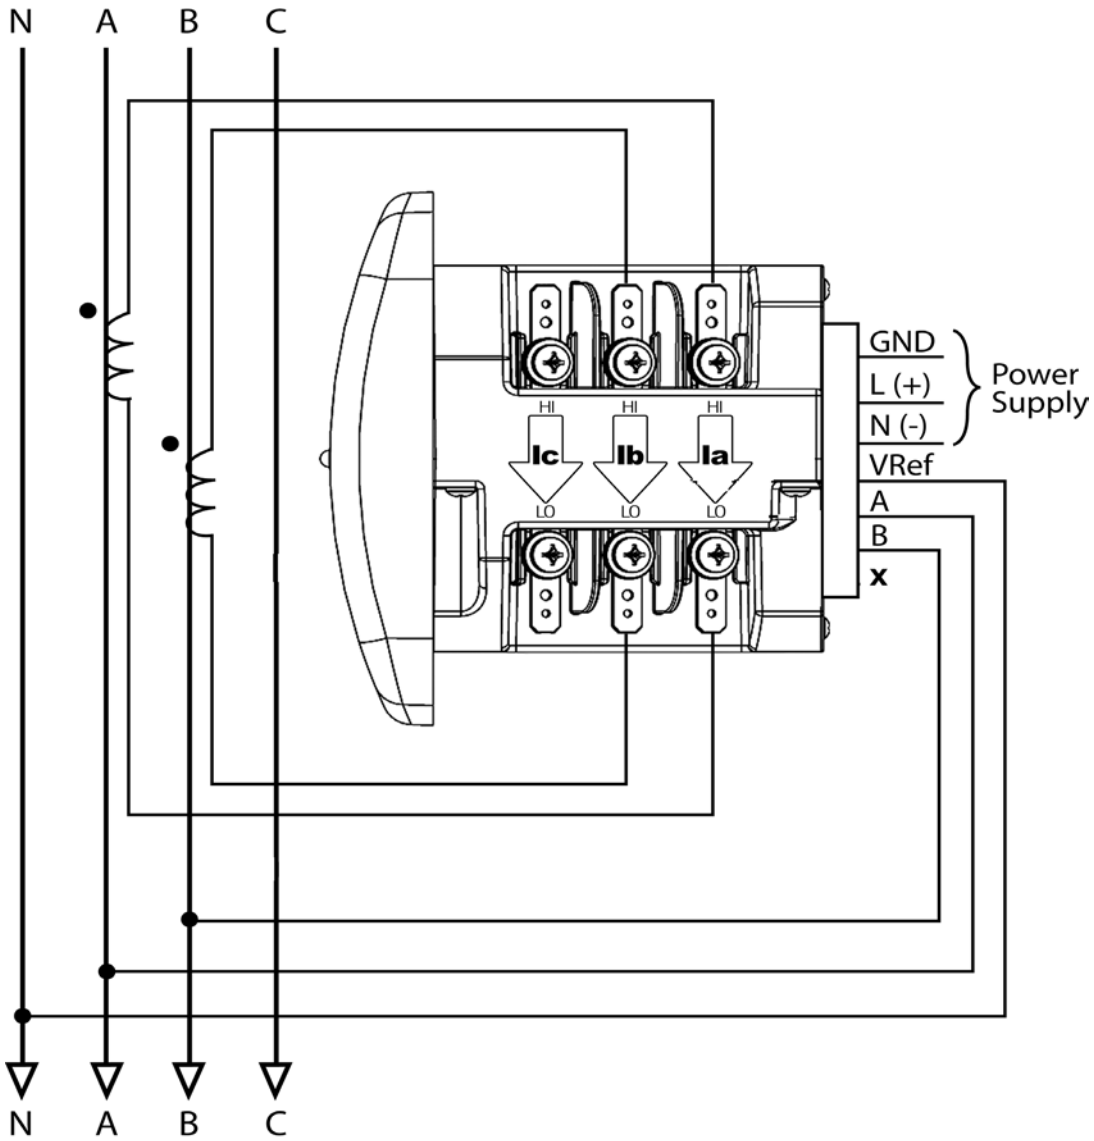

1b. Example of Single Phase Hookup

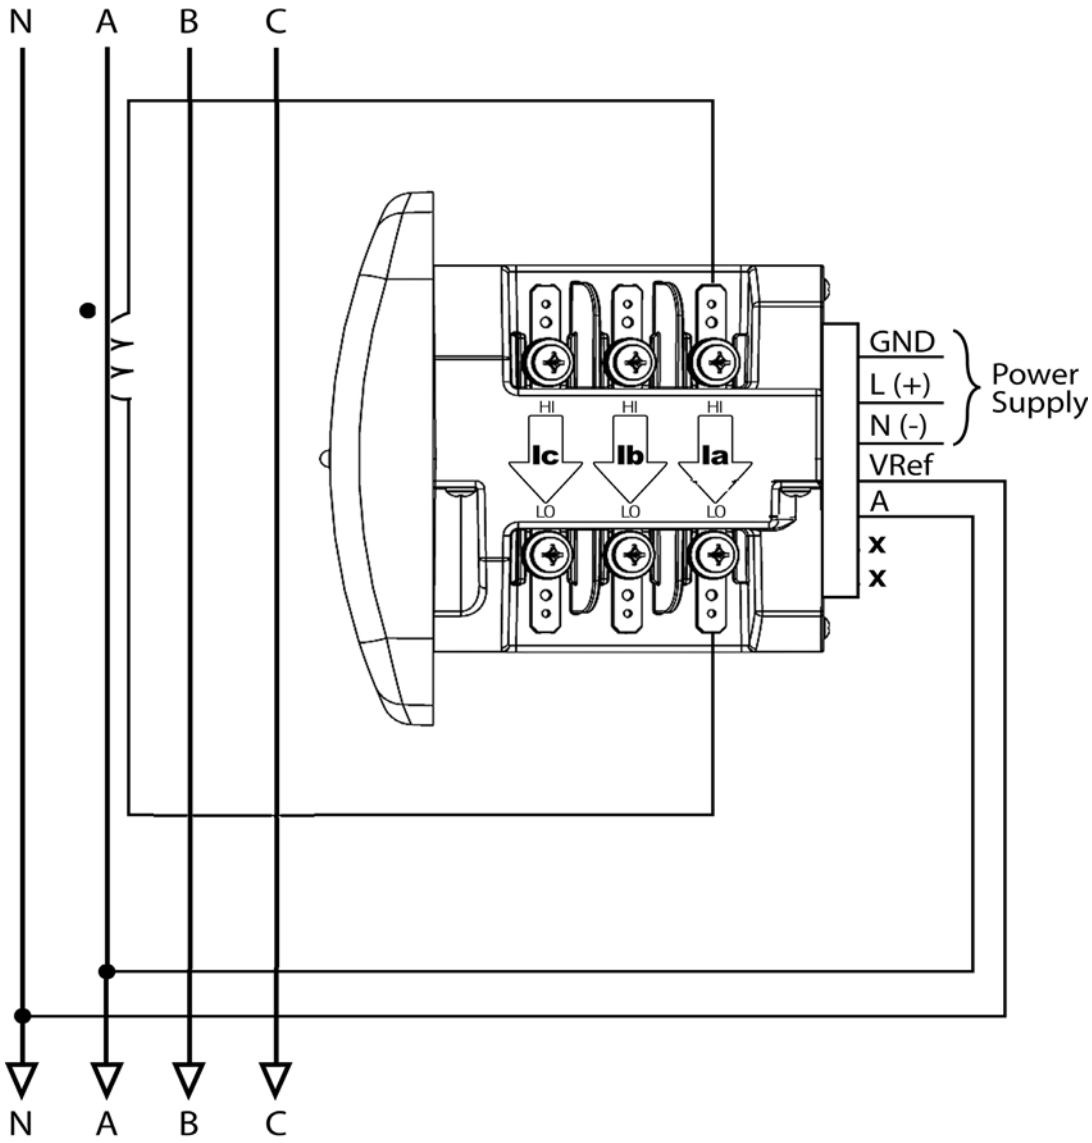

2. Service: 2.5 Element WYE, 4-Wire with No PTs, 3 CTs

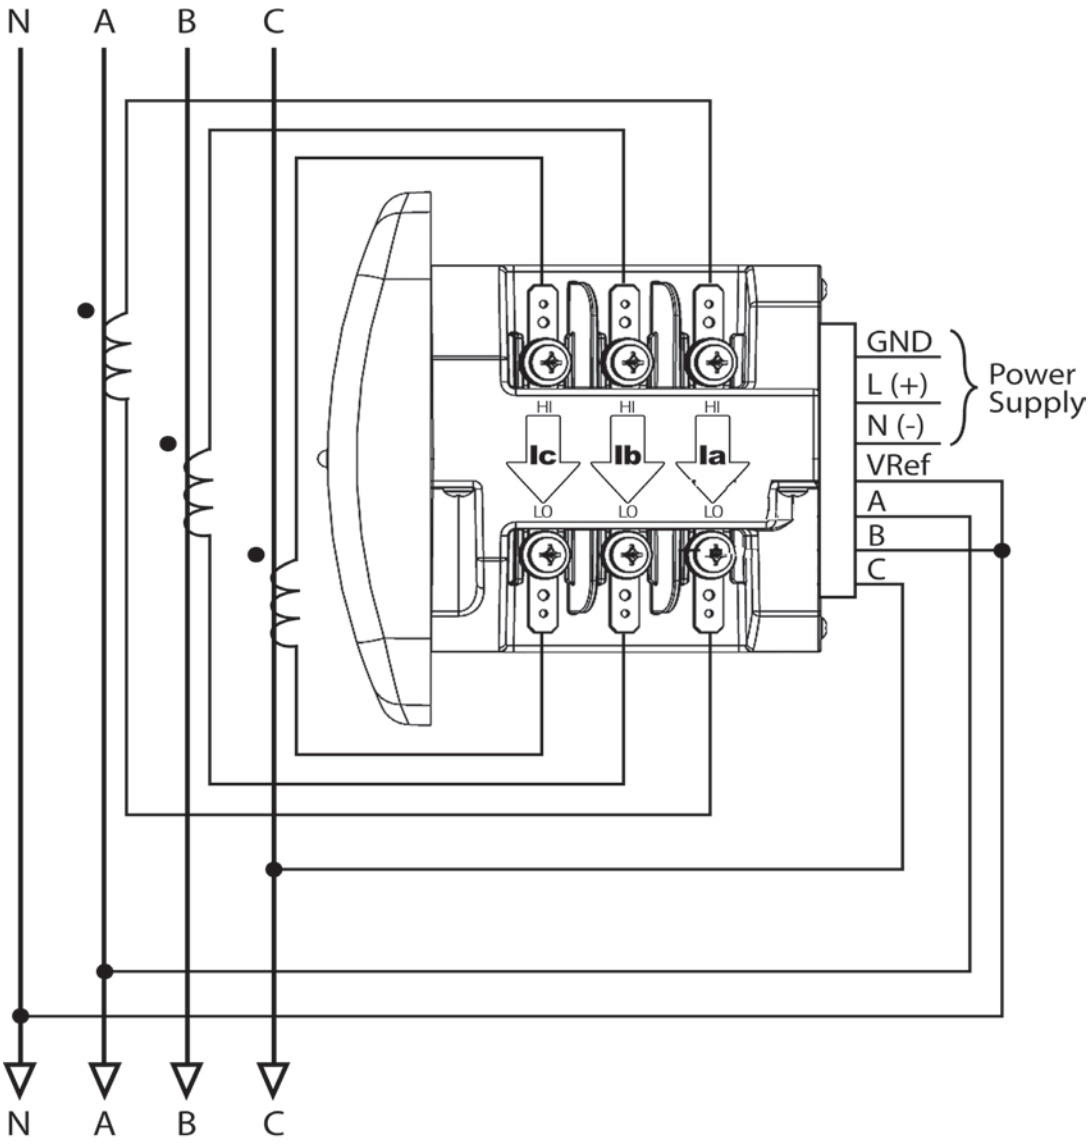

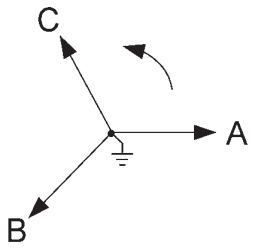

Select: "2.5 EL WYE" (2.5 Element Wye) from the Shark® meter's Front Panel Display. (See Chapter 6.)

3. Service: WYE/Delta, 4-Wire with 3 PTs, 3 CTs

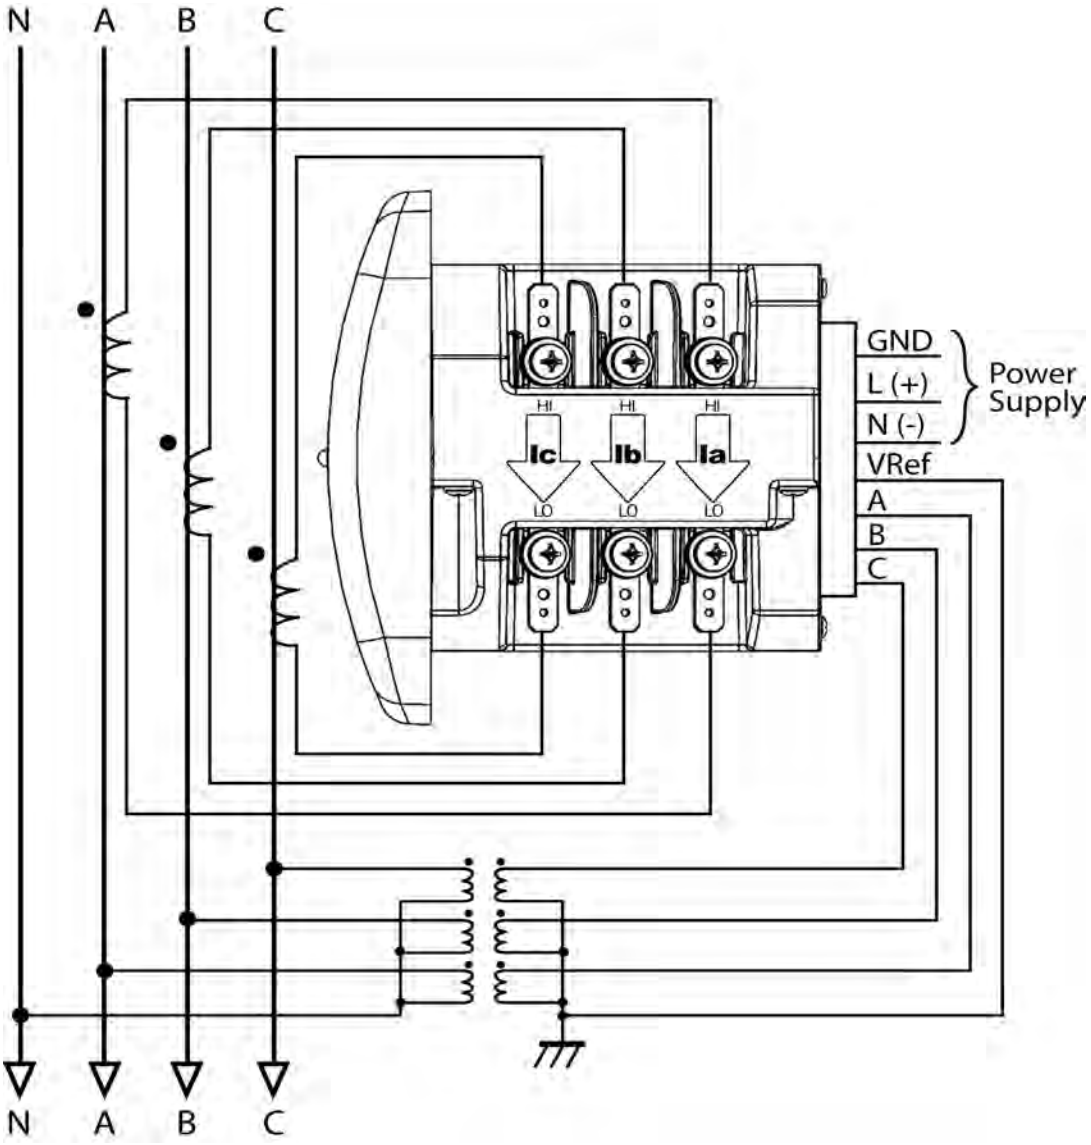

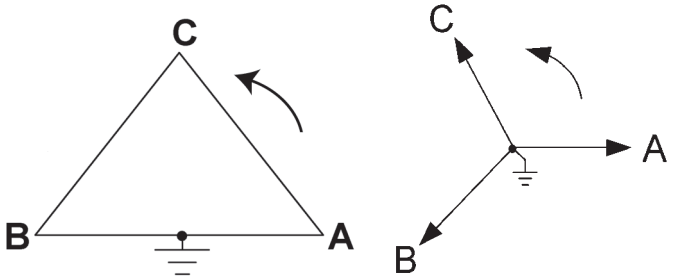

Select: " 3 EL WYE " (3 Element Wye) from the Shark® meter's Front Panel Display. (See Chapter 6.)

4. Service: 2.5 Element WYE, 4-Wire with 2 PTs, 3 CTs

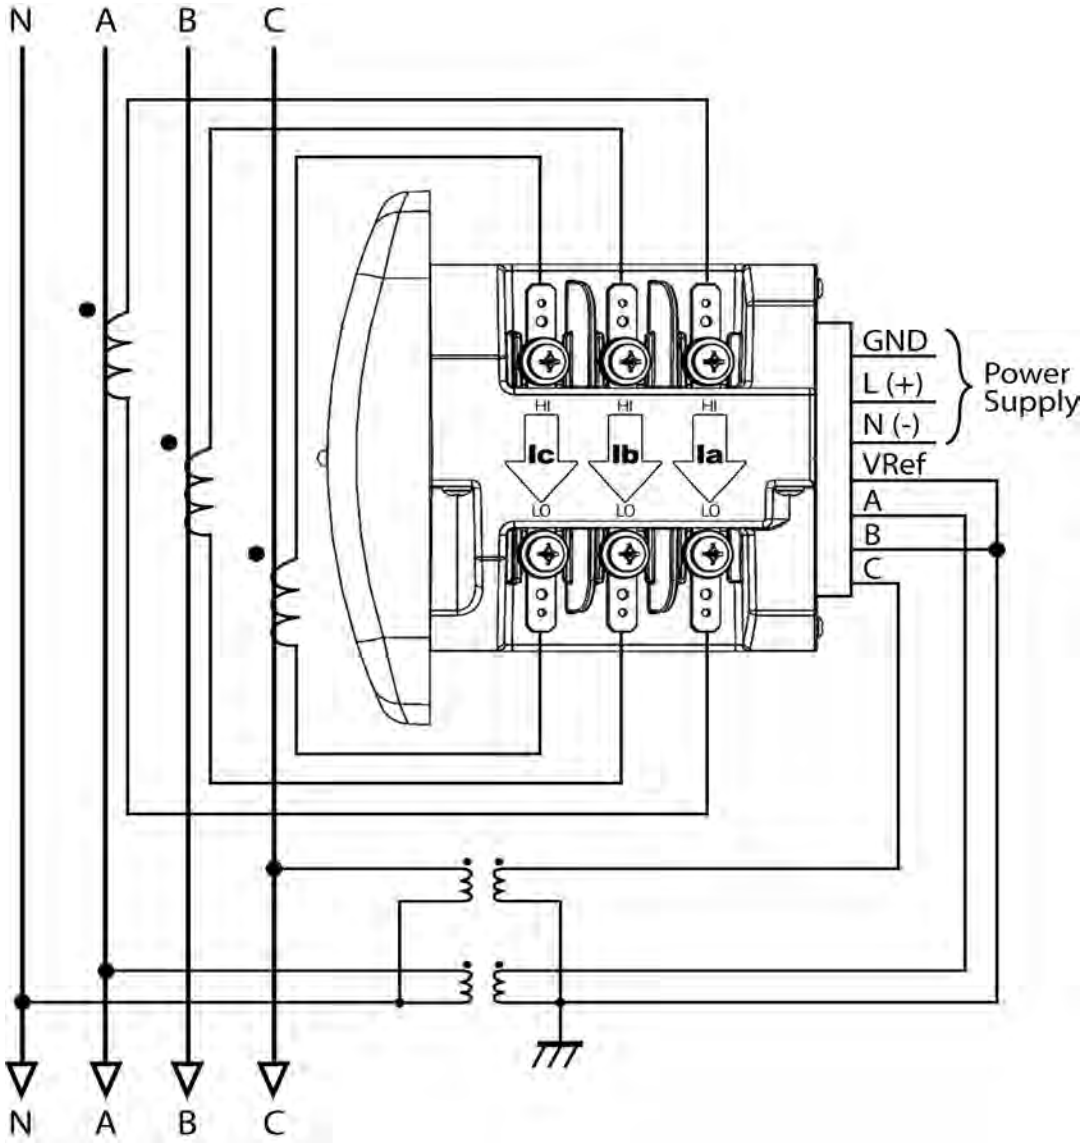

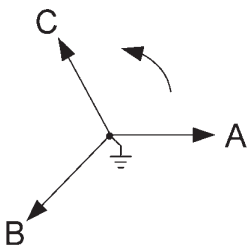

Select: "2.5 EL WYE" (2.5 Element Wye) from the Shark® meter's Front Panel Display. (See Chapter 6.)

5. Service: Delta, 3-Wire with No PTs, 2 CTs

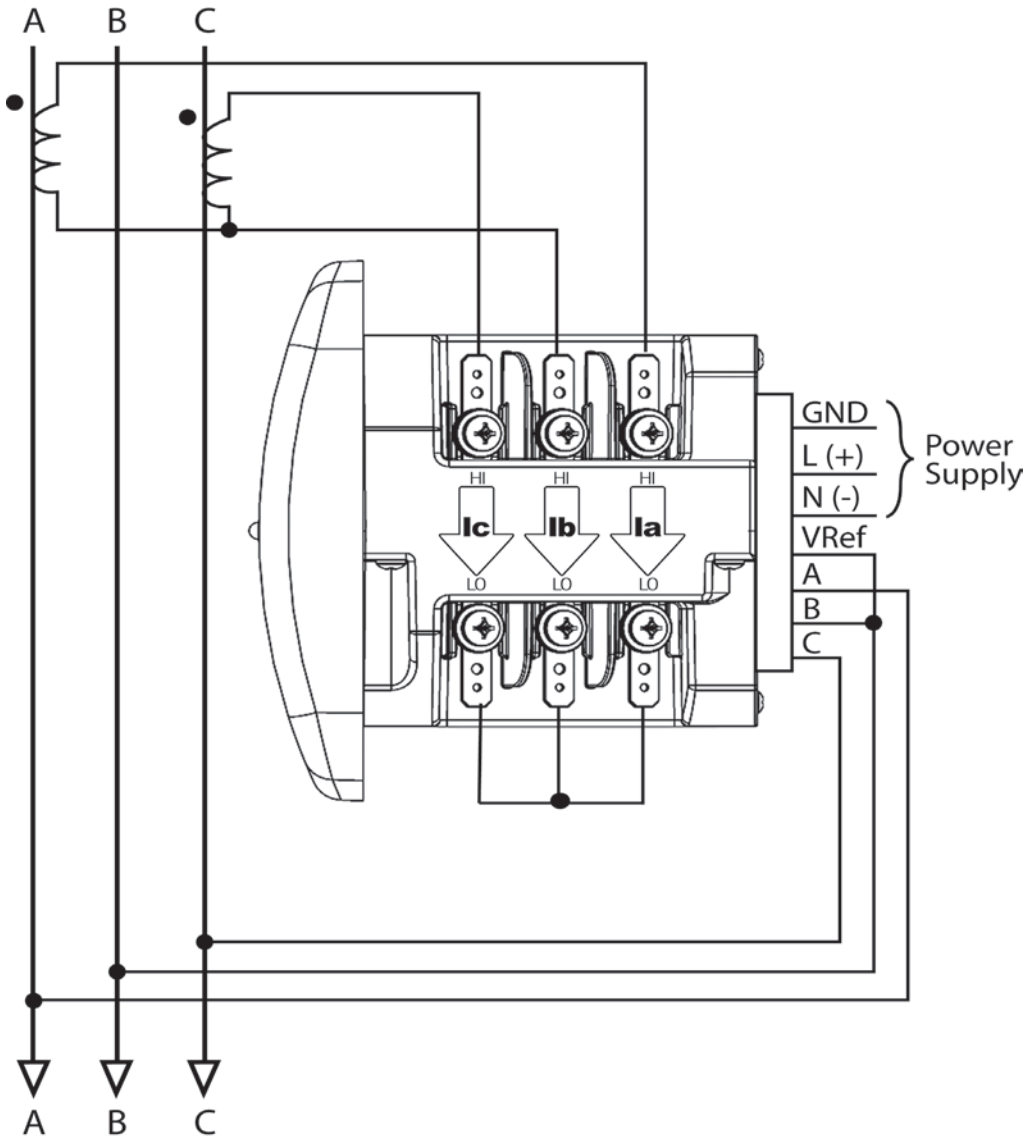

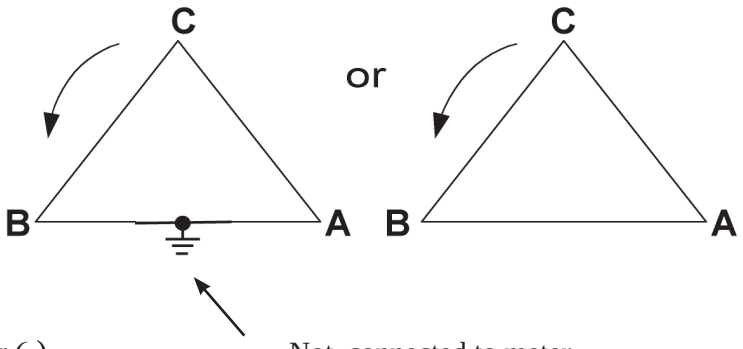

Select: "2 CT DEL" (2 CT Delta) from the Shark® meter's Front Panel Display. (See Chapter 6.)

Not connected to meter

6. Service: Delta, 3-Wire with 2 PTs, 2 CTs

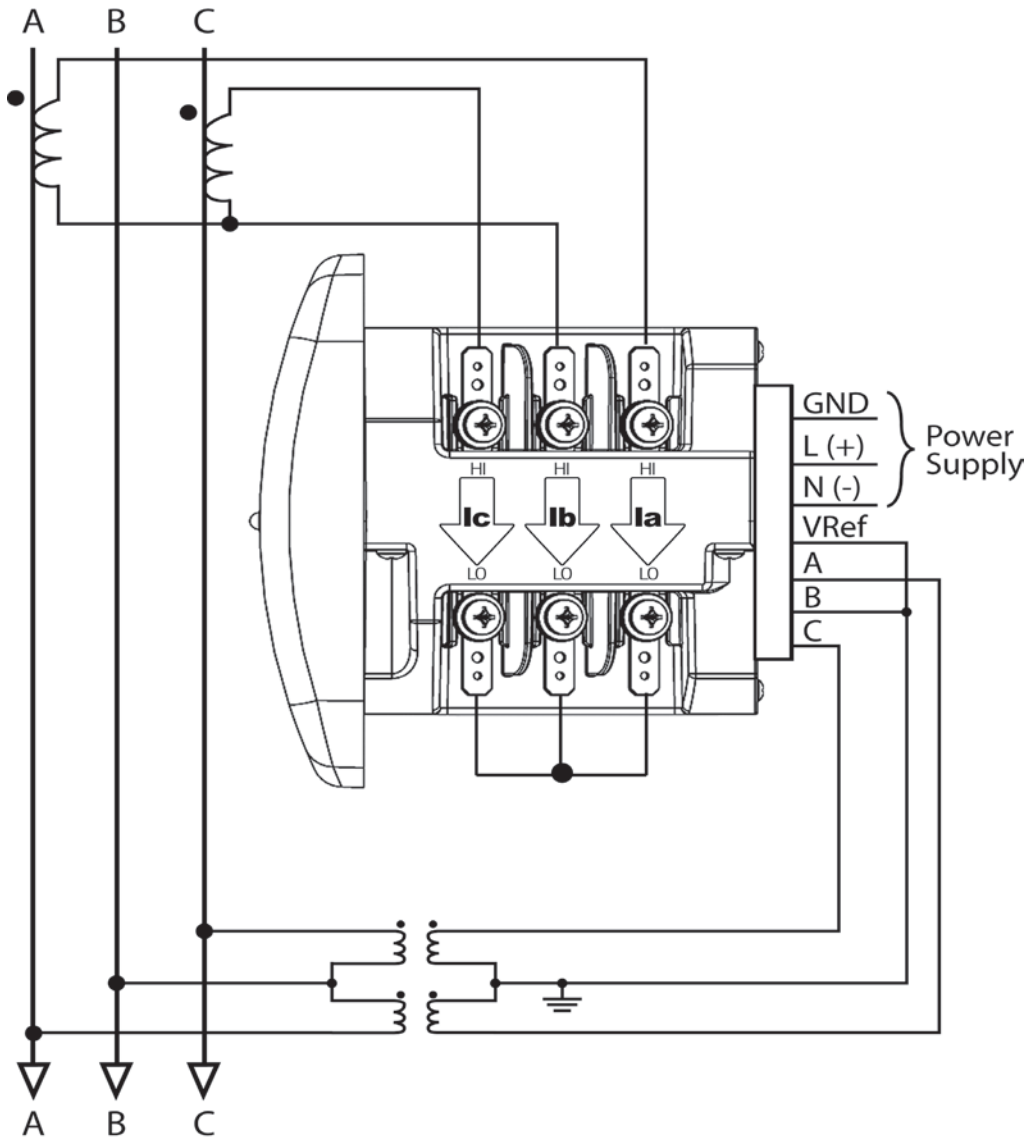

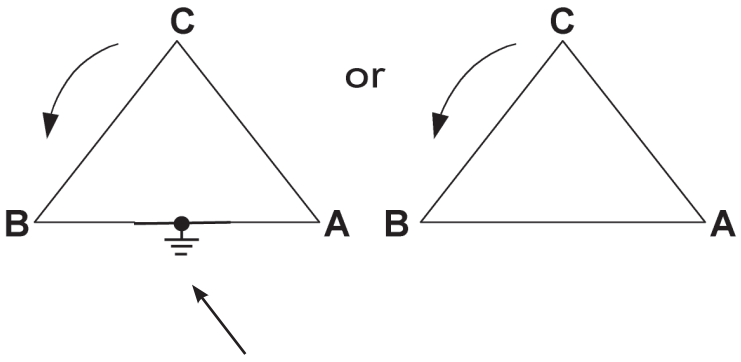

Select: "2 CT DEL" (2 CT Delta) from the Shark® meter's Front Panel Display. (See Chapter 6.)

Not connected to meter

7. Service: Delta, 3-Wire with 2 PTs, 3 CTs

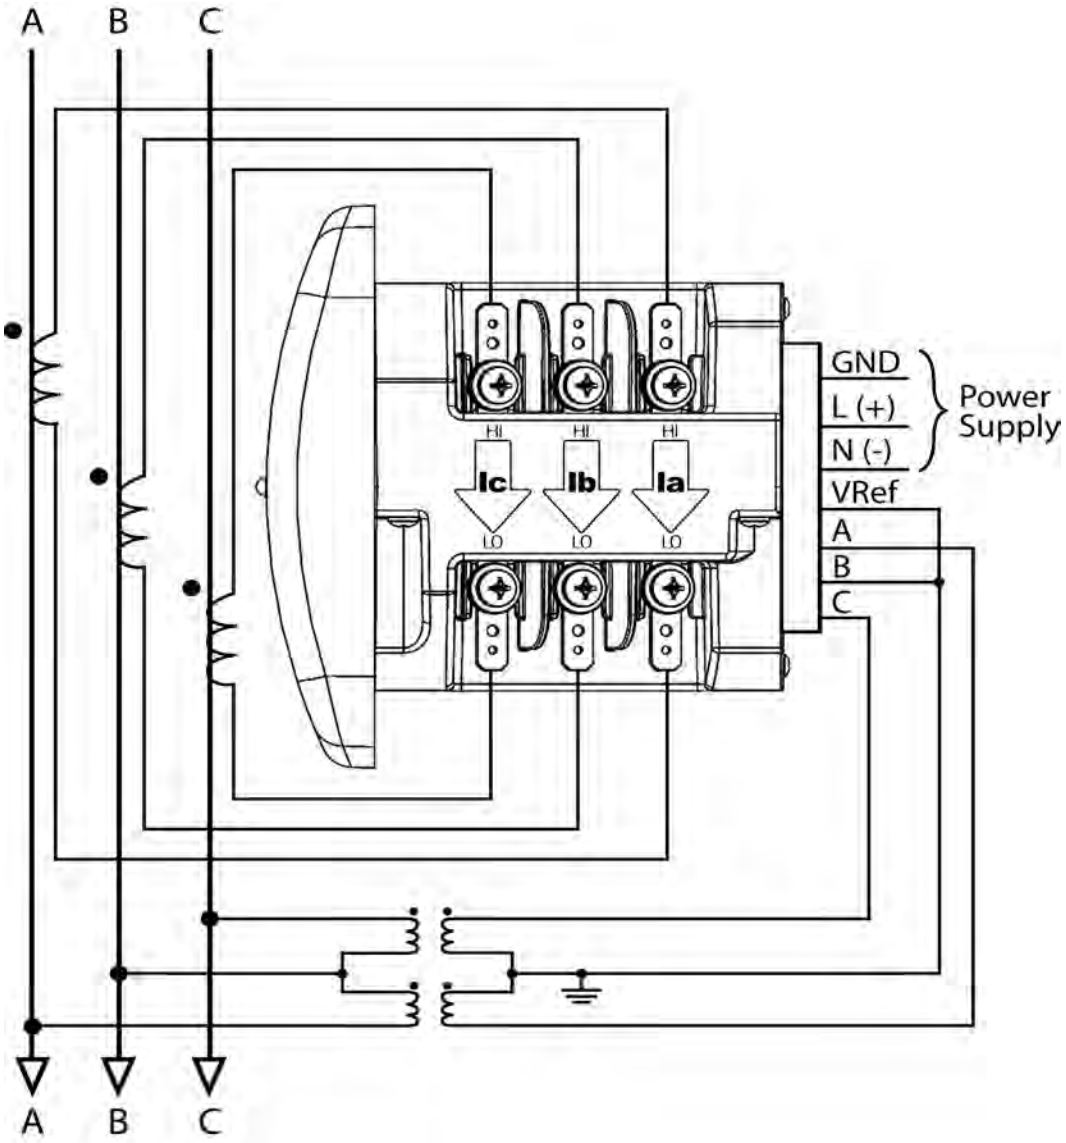

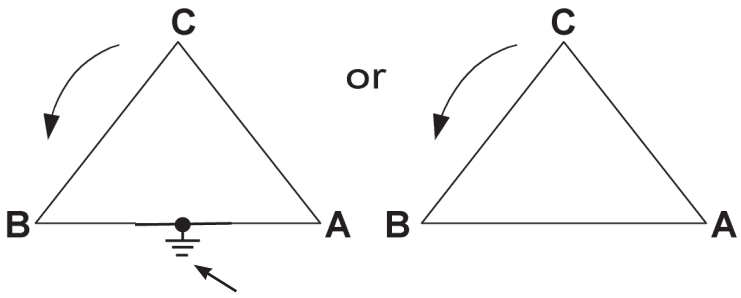

Select: "2 CT DEL" (2 CT Delta) from the Shark® meter's Front Panel Display. (See Chapter 6.)

Not connected to meter

NOTE: The third CT for hookup is optional and is for Current Measurement only.

8. Service: Current Only Measurement (Three Phase)

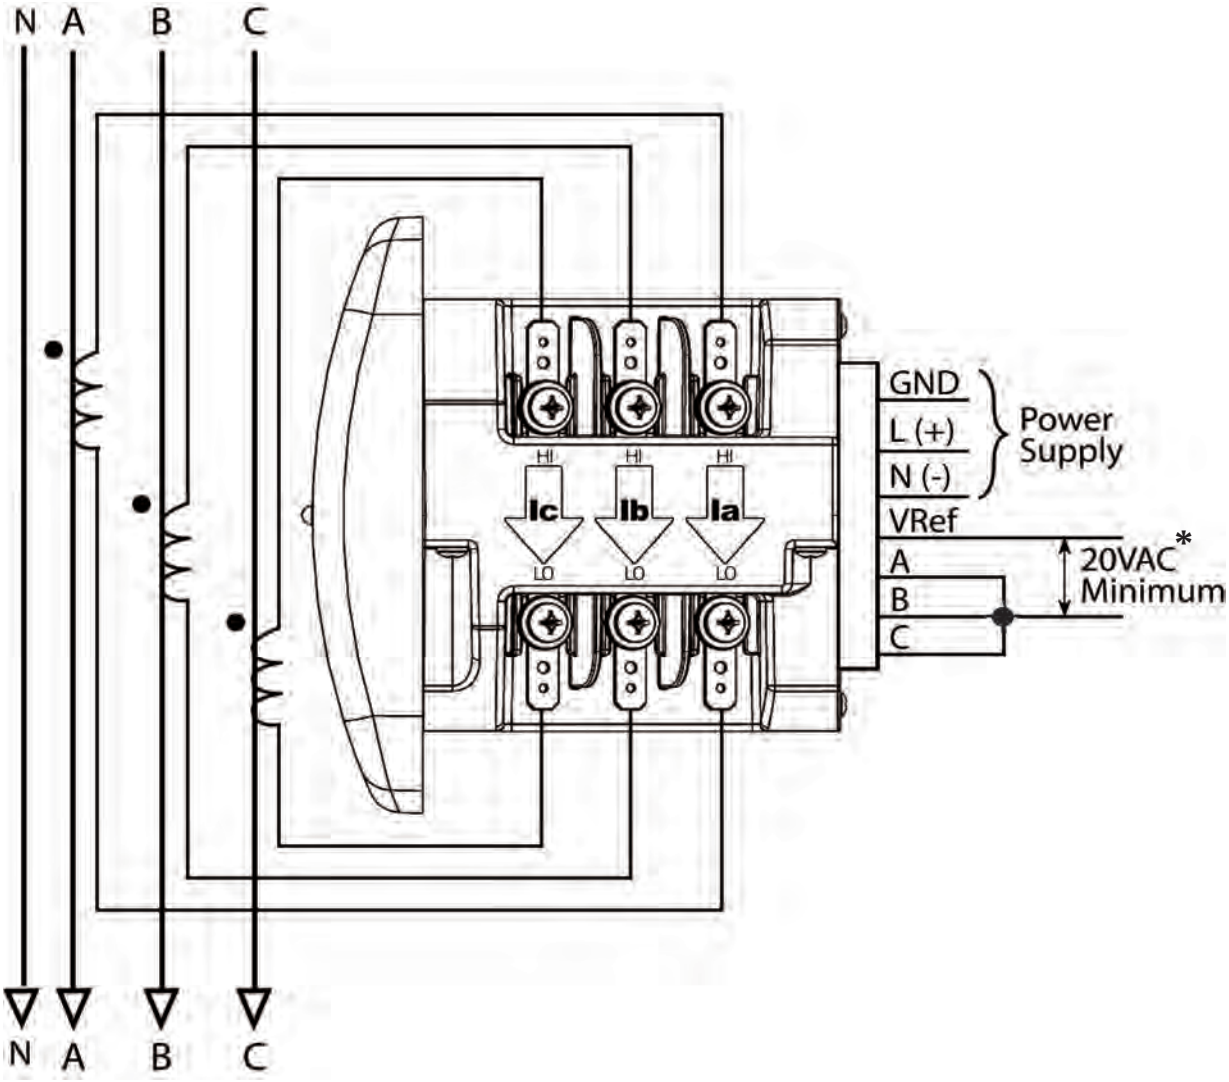

Select: "3 EL WYE" (3 Element Wye) from the Shark® meter's Front Panel Display. (See Chapter 6.)

* For improved accuracy, this connection is recommended, but not required.

9. Service: Current Only Measurement (Dual Phase)

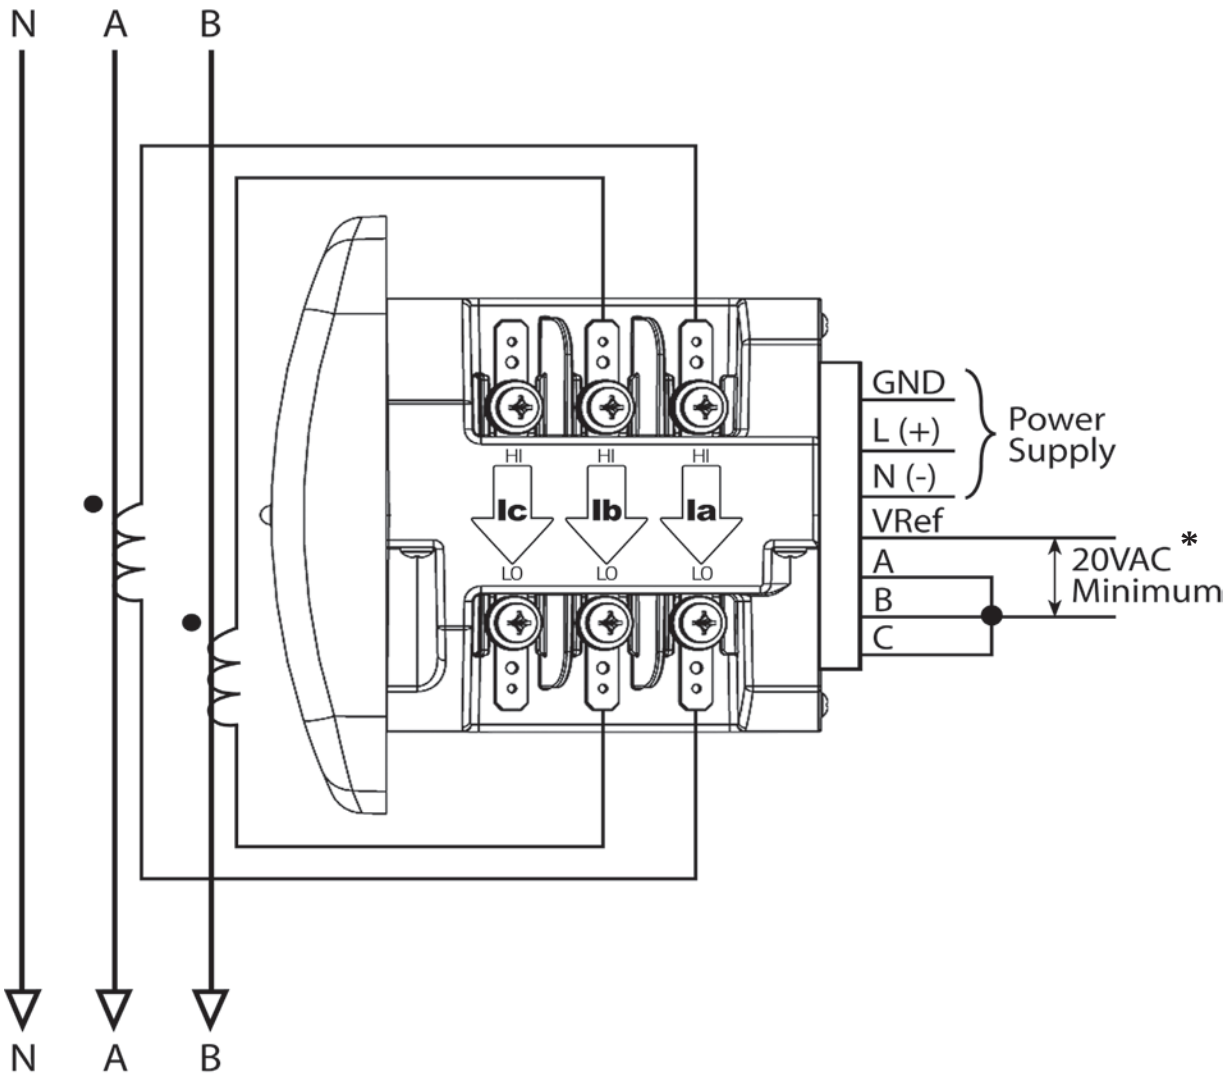

Select: " 3 EL WYE " (3 Element Wye) from the Shark® meter's Front Panel Display. (See Chapter 6.)

* For improved accuracy, this connection is recommended, but not required.

10. Service: Current Only Measurement (Single Phase)

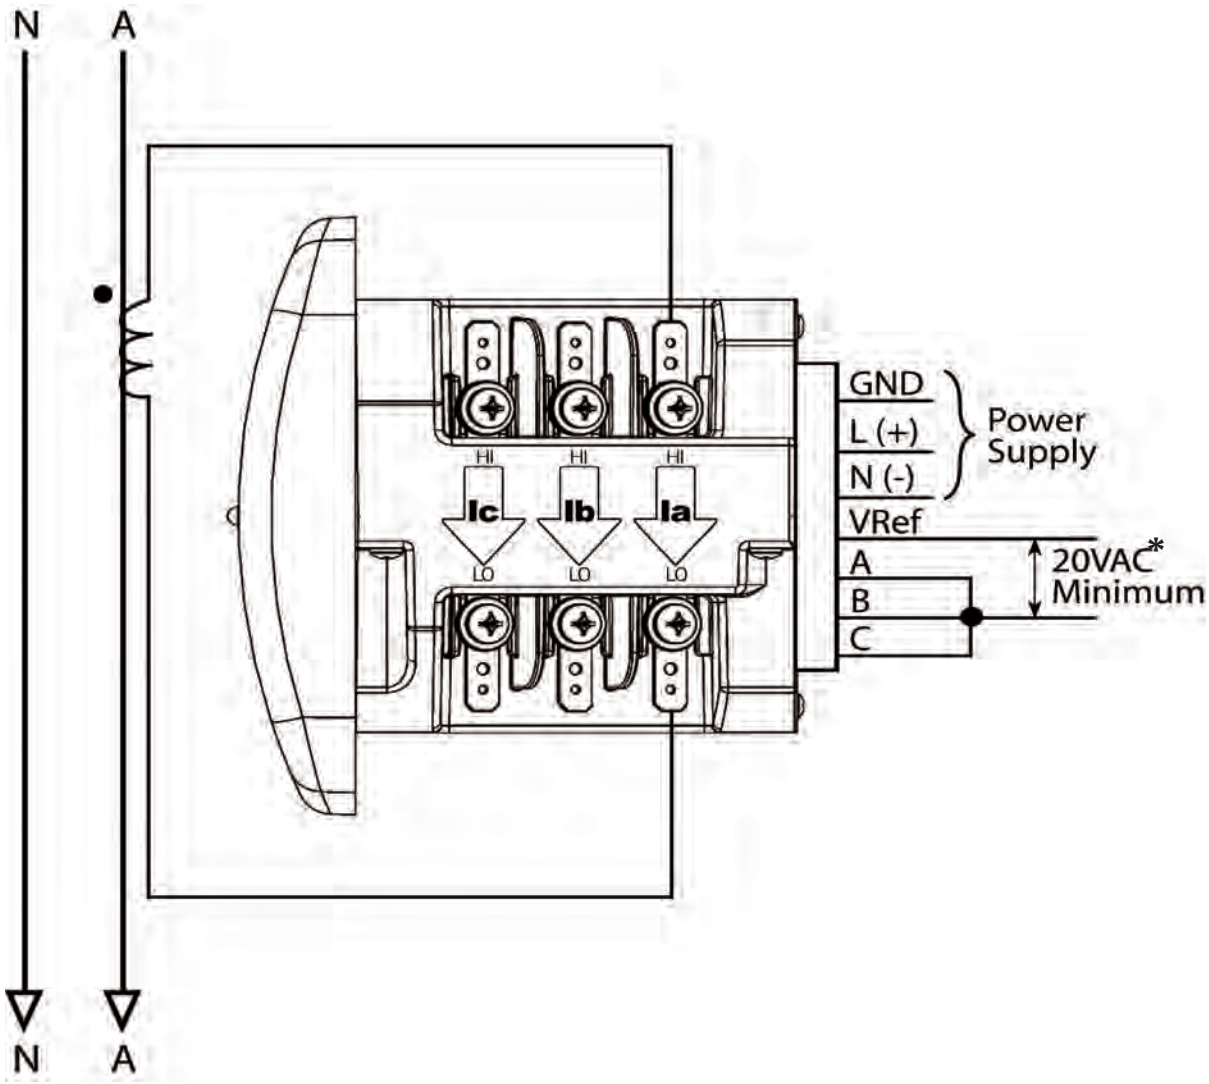

Select: "3 EL WYE" (3 Element Wye) from the Shark® meter's Front Panel Display. (See Chapter 6.)

* For improved accuracy, this connection is recommended, but not required.
NOTE: The diagram shows a connection to Phase A, but you can also connect to Phase B or Phase C.

Chapter 5
Communication Installation

5.1: Shark® 200 Meter Communication

The Shark® 200 meter provides two independent Communication Ports. The first port, Com 1, is an Optical IrDA Port. The second port, Com 2, provides RS485 communication speaking Modbus ASCII, Modbus RTU, and DNP 3.0 protocols. Additionally, the Shark® 200 meter has two optional communication cards: the Fiber Optic Communication Card and the 10/100BaseT Ethernet Communication Card. See Chapter 7 for more information on these options.

5.1.1: IrDA Port (Com 1)

The Shark® 200 meter's Com 1 IrDA Port is on the face of the meter. The IrDA Port allows the unit to be set up and programmed using a PDA or remote laptop without the need for a communication cable. Just point at the meter with an IrDA-equipped PC or PDA and configure it.

NOTES:

- Settings for Com 1 (IrDA Port) are as follows:
  - Address: 1
  - Baud Rate: 57.6k
  - Protocol: Modbus ASCII
- Additional settings can be made through Communicator EXT software.
- Refer to **Appendix D** for instructions on using EIG's **USB to IrDA Adapter**.

5.1.2: RS485 / KYZ Output (Com 2)

Com 2 provides a combination RS485 and an Energy Pulse Output (KYZ pulse).

See Chapter 2, Section 2.2 for the KYZ Output Specifications; see Chapter 6, Section 6.4 for Pulse Constants.

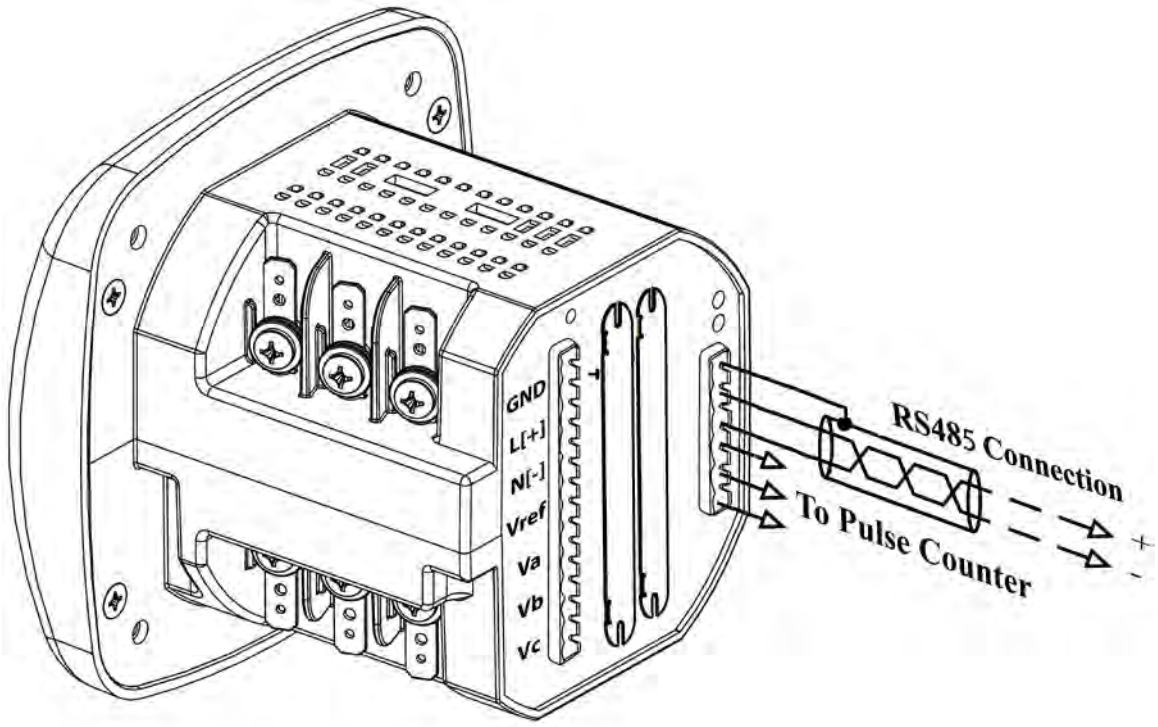

Figure 5.1: Shark® 200 Meter Back with RS485 Communication Installation

RS485 allows you to connect one or multiple Shark® 200 meters to a PC or other device, at either a local or remote site. All RS485 connections are viable for up to 4000 feet (1219.20 meters).

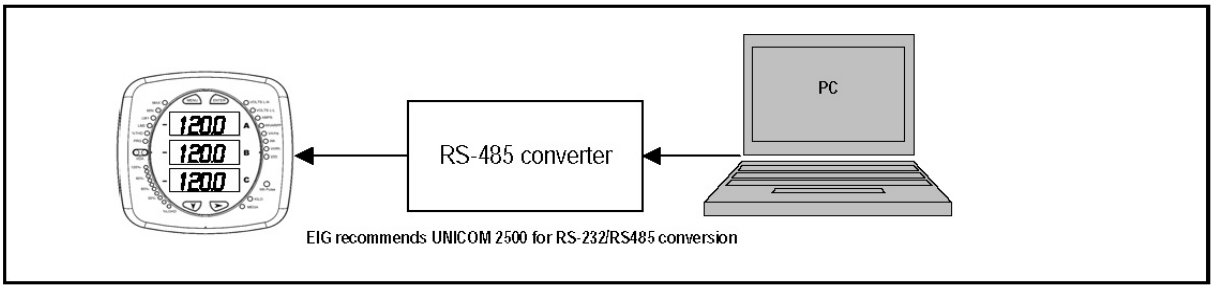

Figure 5.2: Shark® 200 Meter Connected to a PC via RS485 bus

As shown in Figure 5.2, to connect a Shark® 200 meter to a PC, you need to use an RS485 to RS232 converter, such as EIG's Unicom 2500. See Section 5.1.2.1 for information on using the Unicom 2500 with the Shark® 200 meter.

Figure 5.3 shows the detail of a 2-wire RS485 connection.

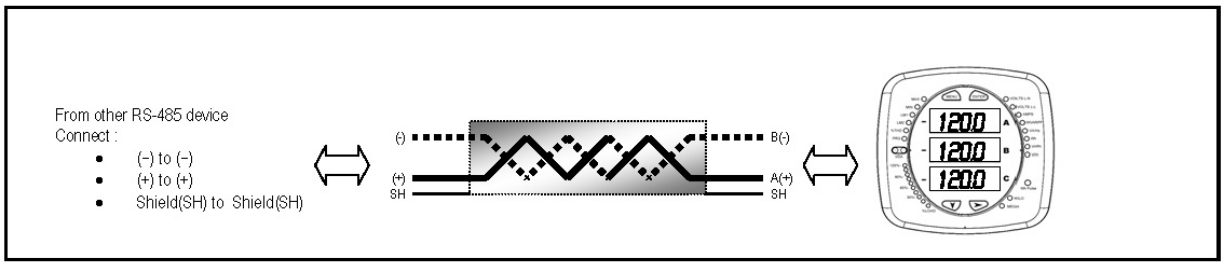

Figure 5.3: 2-wire RS485 Connection

NOTES:

For All RS485 Connections:

- Use a shielded twisted pair cable and ground the shield, preferably at one location only.
- Establish point-to-point configurations for each device on a RS485 bus: connect (+) terminals to (+) terminals; connect (-) terminals to (-) terminals.
- You may connect up to 31 meters on a single bus using RS485. Before assembling the bus, each meter must have a unique address: refer to Chapter 5 of the *Communicator EXT 3.0 User's Manual* for instructions.
- Protect cables from sources of electrical noise.
- Avoid both "Star" and "Tee" connections (see Figure 5.5).
- **No more than two cables** should be connected **at any one point** on an RS485 network, whether the connections are for devices, converters, or terminal strips.
- Include all segments when calculating the total cable length of a network. If you are **not** using an RS485 repeater, the maximum length for cable connecting all devices is 4000 feet (1219.20 meters).
- Connect shield to RS485 Master and individual devices as shown in Figure 5.4. You may also connect the shield to earth-ground at one point.
- **Termination Resistors** ($\mathbf{R_T}$) may be needed on both ends for longer length transmission lines. However, since the meter has some level of termination internally, Termination Resistors may not be needed. When they are used, the value of the Termination Resistors is determined by the electrical parameters of the cable.

Figure 5.4 shows a representation of an RS485 Daisy Chain connection. Refer to Section 5.1.2.1 for details on RS485 connection for the Unicom 2500.

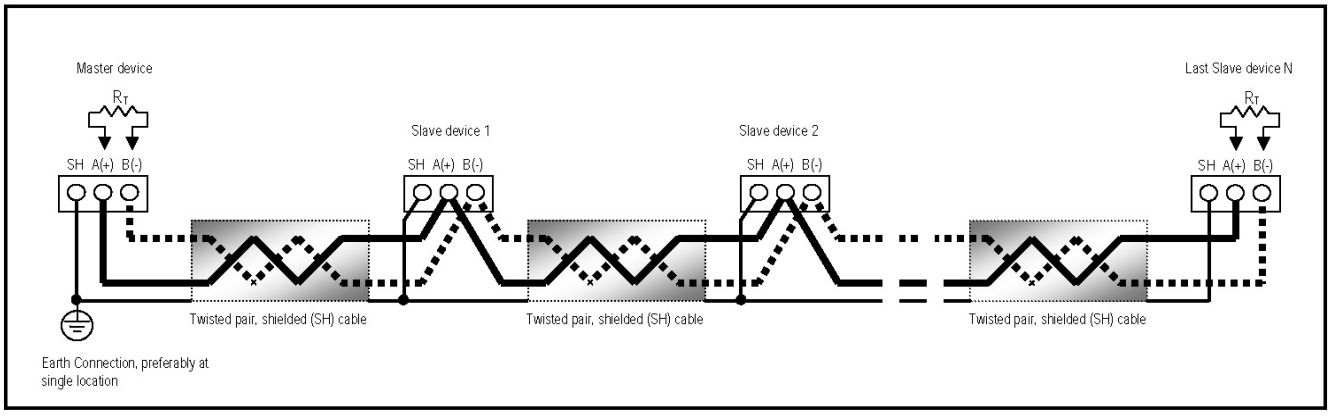

Figure 5.4: RS485 Daisy Chain Connection

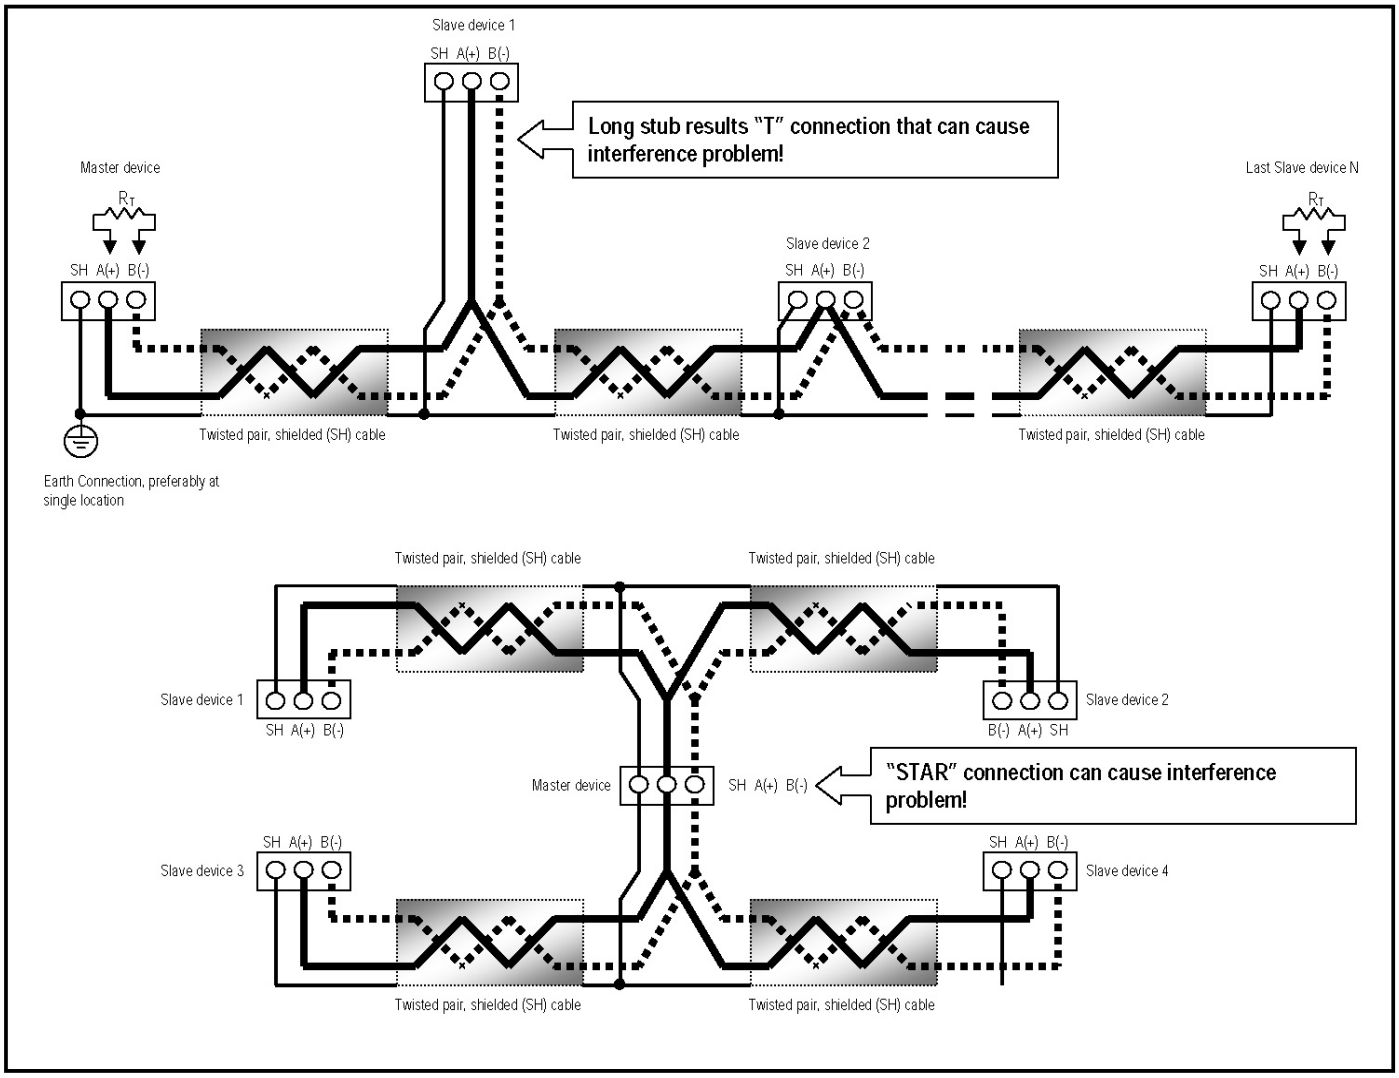

Figure 5.5: Incorrect "T" and "Star" Topologies

5.1.2.1: Using the Unicom 2500

The Unicom 2500 provides RS485/RS232 and Fiber Optic/RS232 conversion. In doing so it allows a Shark® 200 meter with either RS485 communication or the optional Fiber Optic Communication Card to communicate with a PC. See the *Unicom 2500 Installation and Operation Manual* for additional information.
Figure 5.6 illustrates the Unicom 2500 connections for RS485 and Fiber Optics.

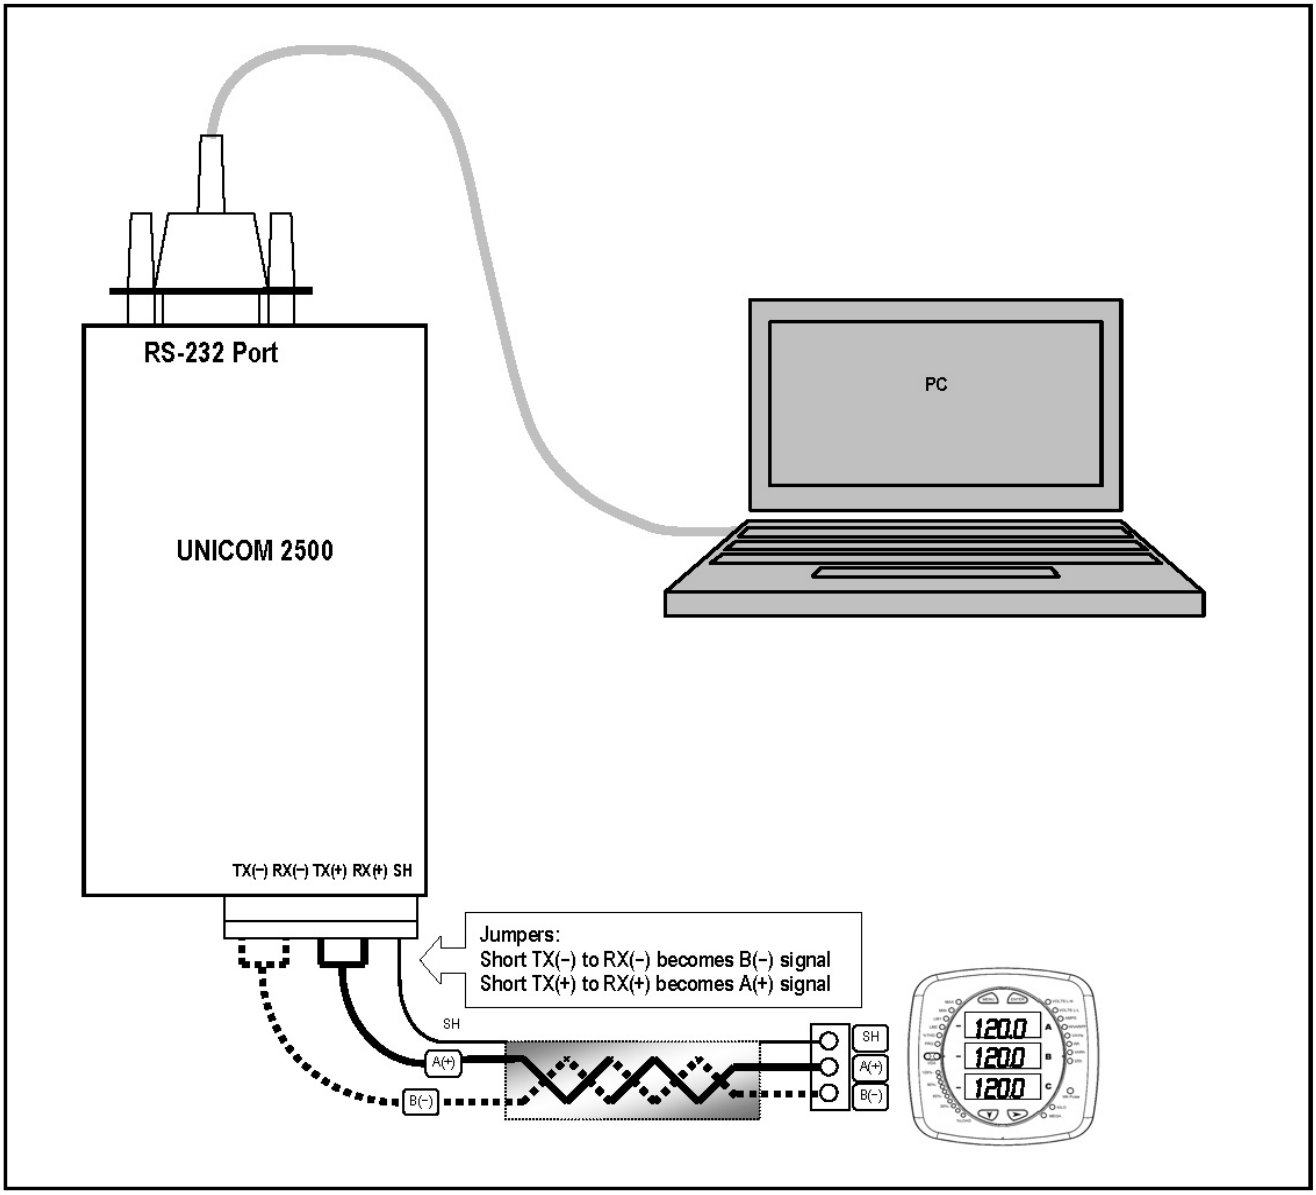

Figure 5.6: Unicom 2500 with Connections

The Unicom 2500 can be configured for either 4-wire or 2-wire RS485 connections. Since the Shark® 200 meter uses a 2-wire connection, you need to add jumper wires to convert the Unicom 2500 to the 2-wire configuration. As shown in Figure 5.9, you connect the "RX -" and "TX -" terminals with a jumper wire to make the "B(-)" terminal,and connect the "RX +" and "TX +" terminals with a jumper wire to make the "A(+)" terminal.

5.2: Shark® 200T Transducer Communication and Programming Overview

The Shark® 200T transducer does not include a display on the front face of the meter; there are no buttons or IrDA Port on the face of the meter. Programming and communication utilize the RS485 connection on the back face of the meter shown in section 5.1.2. Once a connection is established, Communicator EXT 3.0 software can be used to program the meter and communicate to Shark® 200T transducer slave devices.

Meter Connection

To provide power to the meter, attach an **Aux cable** to GND, L(+) and N(-) Refer to Section 4.8, Figure 1. The **RS485 cable** attaches to SH, B(-) and A(+) as shown in Section 5.1.2.

5.2.1: Factory Default Settings

When the Shark® 200T transducer is powered up, for 10 seconds you can connect to the meter using the Factory Initial Default Settings (even if the Device Profile has been changed). After 10 seconds, the Device Profile reverts to the actual Device Profile in use. This is one way that you can always connect to the meter.

Factory Initial Default Settings

Baud Rate:	9600
Port:	COM1
Protocol:	Modbus RTU

How to Connect:

1. Open Communicator EXT software.
2. Click the **Connect** icon on the Title bar.

Connect Icon

The **Connect** screen opens, showing the **Default** settings. Make sure your settings are the same as shown here. Use the drop-down menus to make any necessary changes to the settings.

3. Click the **Connect** button. If you have a problem connecting, you may have to disconnect power to the meter, reconnect power, and click the **Connect** button, again.

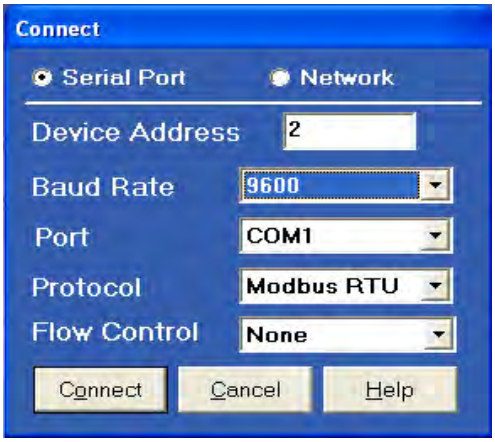

The **Device Status** screen appears, confirming connection to your meter.

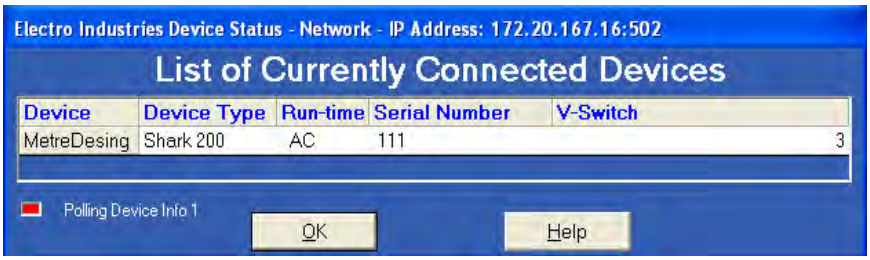

4. Click **OK**.

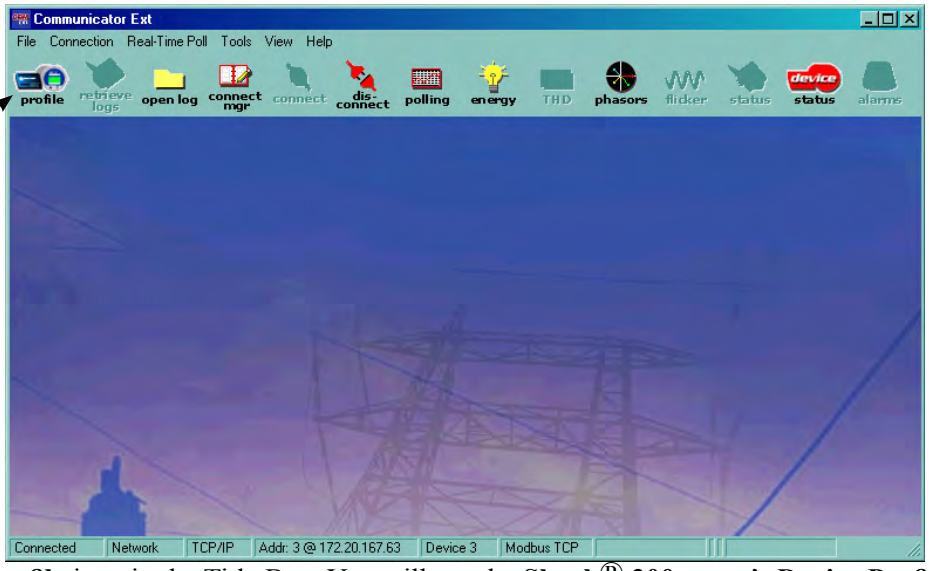

5. Click the **Profile** icon in the Title Bar. You will see the **Shark® 200** meter's **Device Profile** screen. The Menu on the left side of the screen allows you to navigate between settings screens (see below).

6. Click **Communications**. You will see the screen shown on the right.
Make any necessary changes to settings.

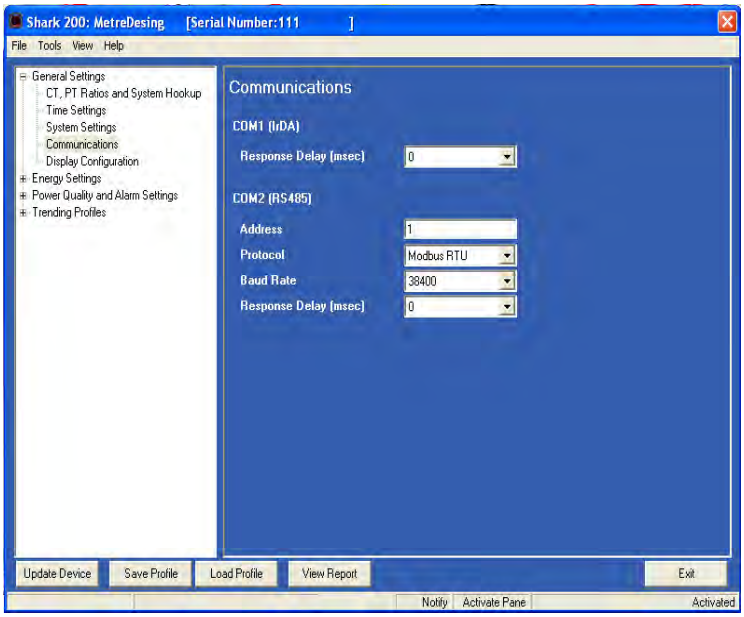

Valid Communication Settings are as follows:

COM1 (IrDA)
Response Delay (**0-750 msec**)

COM2 (RS485)
Address (**1-247**)
Protocol (**Modbus RTU**, **Modbus ASCII** or **DNP**)
Baud Rate (**9600** to **57600**)
Response Delay (**0-750 msec**)

7. When changes are complete, click the **Update Device** button to send a new profile to the meter.

8. Click **Exit** to Exit the **Device Profile** or click other menu items to change other aspects of the Device Profile (see following section, 5.2.2).

5.2.2: Shark® 200 Meter Device Profile Settings

IMPORTANT! Modification to the Device Profile may cause improper Option Card operation due to changed Scaling, etc. **Verify** or **update Programmable Settings** related to any **Option Cards** installed in the Shark® 200 meter.

NOTE: Only the basic Shark® 200 meter Device Profile Settings are explained in this manual. Refer to Chapter 5 of the *Communicator EXT 3.0 User's Manual* for detailed instructions on configuring all settings of the meter's Device Profile.

CT, PT Ratios and System Hookup

The screen fields and acceptable entries are as follows:

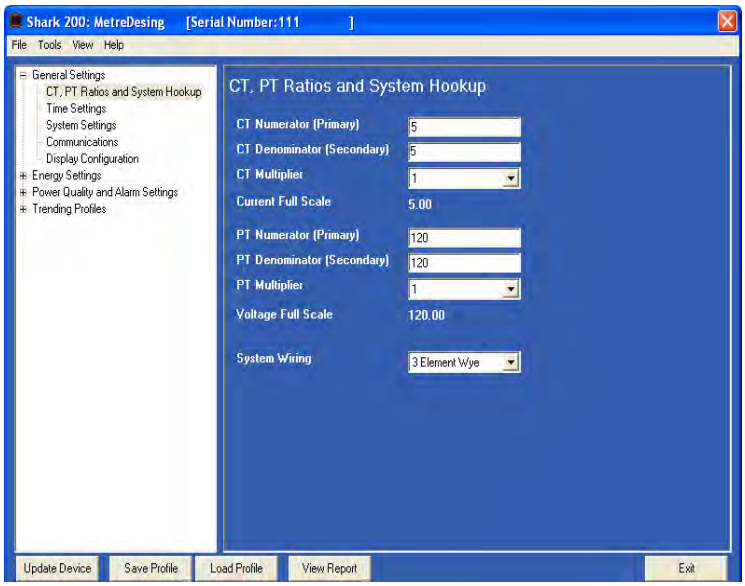

CT Ratios
CT Numerator (Primary)**: 1 - 9999**
CT Denominator (Secondary)**: 5 or 1 Amp**
NOTE: This field is display only.
CT Multiplier**: 1, 10 or 100**
Current Full Scale**: Display only.**

PT Ratios
PT Numerator (Primary)**: 1 - 9999**
PT Denominator (Secondary)**: 40 - 600**
PT Multiplier: **1, 10, 100, or 1000**
Voltage Full Scale: **Display only.**

System Wiring
3 Element Wye; 2.5 Element Wye; 2 CT Delta

NOTE: Voltage Full Scale = PT Numerator x PT Multiplier

Example:

A 14400/120 PT would be entered as:

PT Num:	1440
PT Denom:	120
Multiplier:	10

This example would display a 14.40kV.

Example CT Settings:

200/5 Amps:	Set the Ct-n value for 200, Ct-Multiplier value for 1
800/5 Amps:	Set the Ct-n value for 800, Ct-Multiplier value for 1
2,000/5 Amps:	Set the Ct-n value for 2000, Ct-Multiplier value for 1
10,000/5 Amps:	Set the Ct-n value for 1000, Ct-Multiplier value for 10

Example PT Settings:

277/277 Volts:	Pt-n value is 277, Pt-d value is 277, Pt-Multiplier is 1
14,400/120 Volts:	Pt-n value is 1440, Pt-d value is 120, Pt-Multiplier value is 10
138,000/69 Volts:	Pt-n value is 1380, Pt-d value is 69, Pt-Multipier value is 100
345,000/115 Volts:	Pt-n value is 3450, Pt-d value is 115, Pt-Multiplier value is 100
345,000/69 Volts:	Pt-n value is 345, Pt-d value is 69, Pt-Multiplier value is 1000

.

NOTE: Settings are the same for Wye and Delta configurations.

Display Configuration

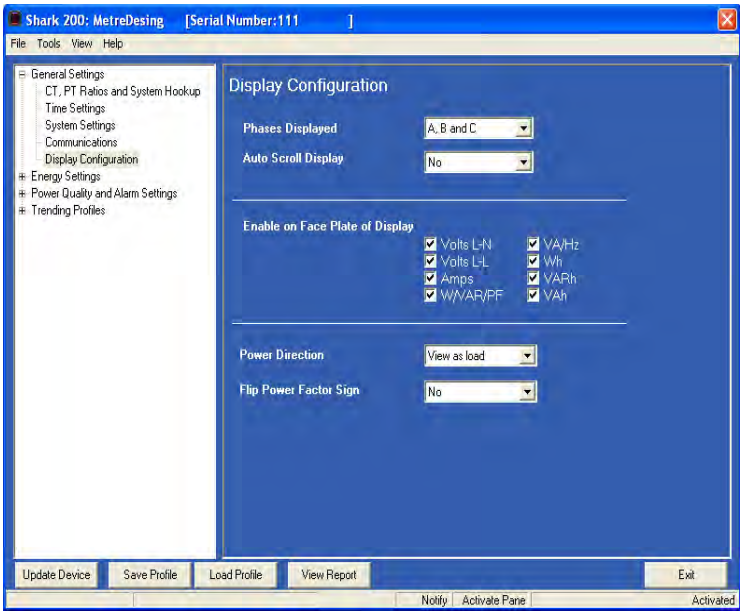

The settings on this screen determine the display configuration of the meter's faceplate.

The screen fields and acceptable entries are as follows:

Phases Displayed**: A; A and B; A, B, and C.** This field determines which phases display on the faceplate.

Auto Scroll Display**: Yes** or **No.** This field enables or disables the scrolling of selected readings on the faceplate. If enabled, the readings scroll every **5 seconds.**

Enable on Face Plate of Display**:** Check the boxes of the **Readings you want displayed** on the faceplate of the meter. **You must select at least one reading.**

Power Direction: **View as Load** or **View as Generator**
Flip Power Factor Sign**: Yes or No.**

NOTE: For a Shark® 200T transducer, the Display Configuration does not apply as there is no display.

Energy, Power Scaling, and Averaging

The screen fields and acceptable entries are as follows:

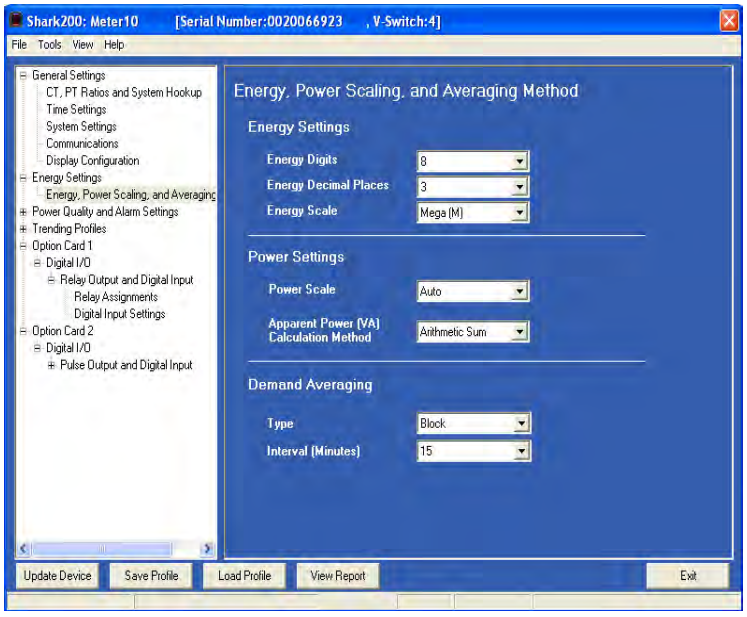

Energy Settings
Energy Digits: **5; 6; 7; 8**
Energy Decimal Places: **0 - 6**
Energy Scale: unit; **kilo (K)**; **Mega (M)**
For **Example**: a reading for **Digits: 8**; **Decimals: 3**; **Scale: K** would be formatted: **00123.456k**

Power Settings:
Power Scale: **Auto**; **unit**; **kilo (K)**; **Mega (M)**
Apparent Power (VA) Calculation Method:
Arithmetic Sum; Vector Sum

Demand Averaging:
Type: **Block** or **Rolling**
Interval (Block demand) **or** Sub-Interval (Rolling demand) in minutes: **5**; **15**; **30**; **60**
Number of Subintervals: **1**; **2**; **3**; **4**
Interval Window**:** This field is display only. It is the product of the values entered in the **Sub-Interval** and **Number of Subintervals** fields**.**
NOTE: You will only see the **Number of Subintervals** and **Interval Window** fields if you select **Rolling Demand.**

System Settings

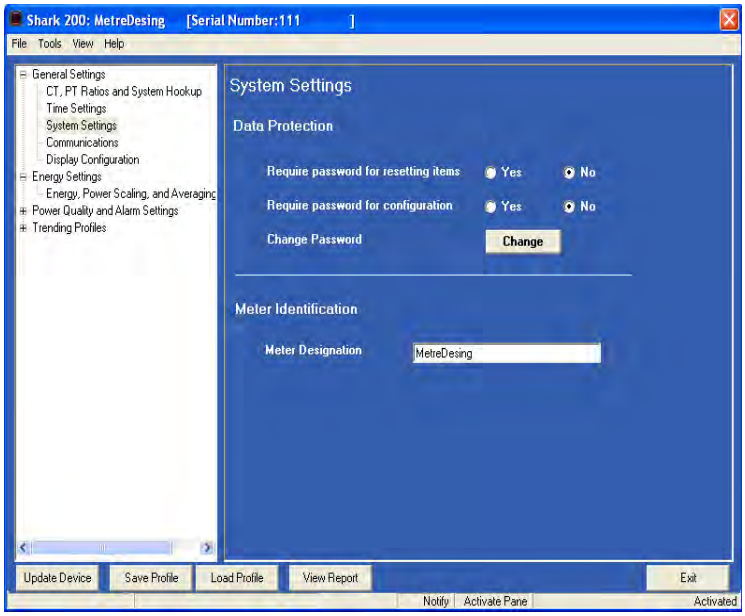

From this screen, you can do the following:

Enable or **Disable Password** for **Reset** (Reset Max/Min Energy Settings, Energy Accumulators, and the Individual Logs) and/or **Configuration** (Device Profile): click the radio button next to **Yes** or **No**.

NOTES:

- The **default** of the meter is **Password Disabled**.
- Enabling Password protection prevents unauthorized tampering with devices. When a user attempts to make a change that is under Password protection, Communicator EXT opens a screen asking for the password. If the correct Password is not entered, the change will not take place.

IMPORTANT! You must set up a password before enabling Password Protection. Click the **Change** button next to **Change Password** if you have not already set up a password.

Change the **Password**: click the **Change** button. You will see the **Enter the New Password** screen.

1. Type in the new password (0 - 9999).
2. Retype the password.
3. Click Change. The new password will be saved and the meter will restart.

   NOTE: If Password Protection has already been enabled for Configuration and you attempt to change the password, you will see the **Enter Password** screen after you click **Change**. Enter the old password and click **OK** to proceed with the password change.

Change the **Device Designation**: input a new meter designation into this field.

Limits

Limits are transition points used to divide acceptable and unacceptable measurements. When a value goes above or below the limit, an out-of-limit condition occurs. The current settings for Limits are shown in the screen.

You can set and configure up to eight Limits for the Shark® 200 meter.

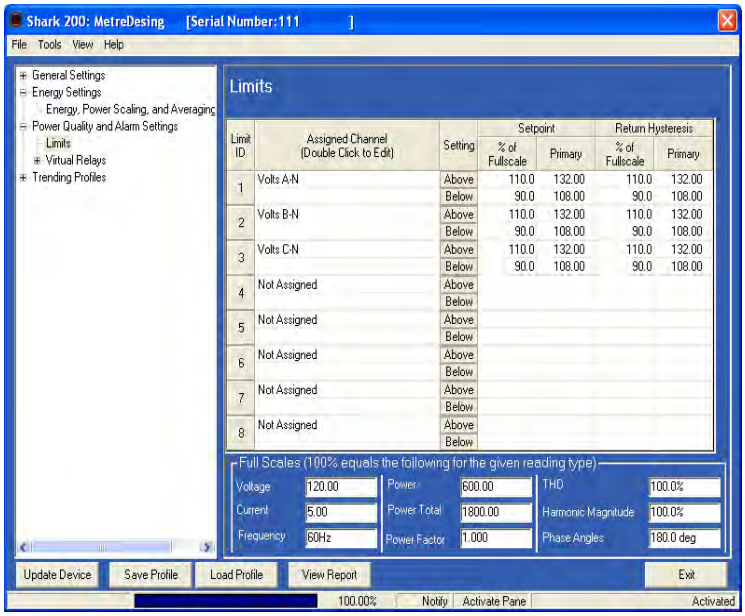

To **Set** or **Change** a **Limit**:

1. Select a limit by double-clicking on the Assigned Channel field.
2. You will see the screen on the right. Select a Group and an Item for the Limit.
3. Click OK.

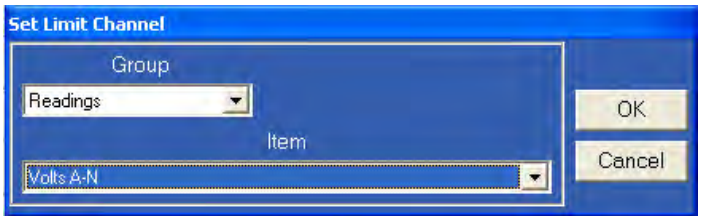

To **Configure** a **Limit**:

Double-click on the Field to set the following values:

Above and **Below Set Point**: % of Full Scale (the point at which the reading goes out of limit)
Examples: 100% of 120V Full Scale = 120V
90% of 120V Full Scale = 108V

Above and **Below Return Hysteresis**: (the point at which the reading goes back within limit)

Examples: Above Set Point = 110% (Out of Limit above 132V)
Above Return Hysteresis = 105% (Stay Out of Limit until below 126V)

Below Set Point = 90% (Out of Limit below 108V)
Below Return Hysteresis = 95% (Stay Out of Limit until above 114V)

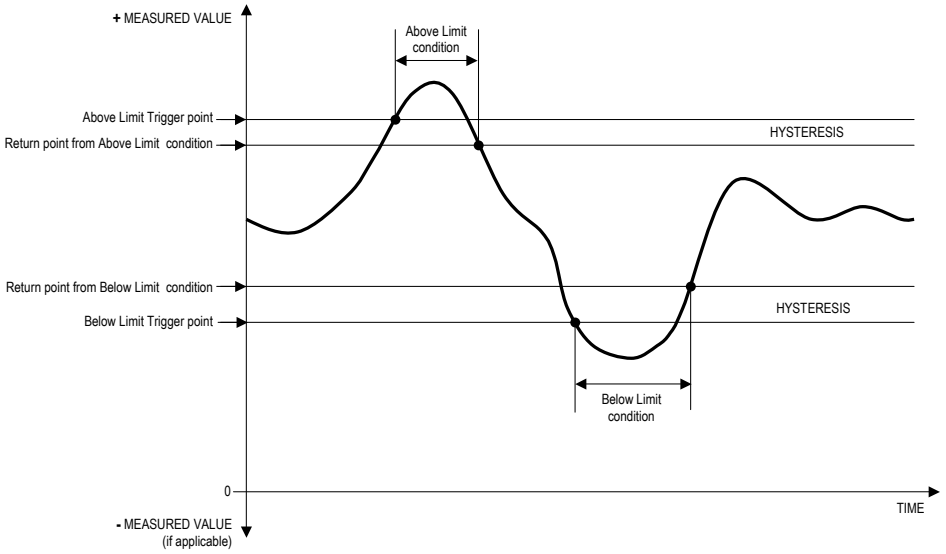

The **Primary** fields are display only. They show what the set point and return hysteresis value are for each limit.

NOTES:

- If you are entering **negative limits**, be aware that the negative value affects the way the above and below limits function, since negative numbers are processed as **signed values**.
- If the Above Return Hysteresis is greater than the Above Set Point, the Above Limit is Disabled; if the Below Return Hysteresis is less than the Below Set Point, the Below Limit is Disabled. You may want to use this feature to disable either Above or Below Limit conditions for a reading.

When you have finished making changes to the Device Profile, click **Update Device** to send a new Profile to the meter.

NOTE: Use Communicator EXT to communicate with the device and perform required tasks. Refer to Chapter 5 of the *Communicator EXT User's Manual* for additional instructions on configuring the Shark® 200 meter settings.

Chapter 6
Using the Shark® 200 Meter

6.1: Introduction

You can use the **Elements** and **Buttons** on the Shark® 200 meter's face to view meter readings, reset and/or configure the meter, and perform related functions. The following sections explain the Elements and Buttons and detail their use.

6.1.1: Understanding Meter Face Elements

The meter face features the following elements:

- **Reading Type Indicator:**
  Indicates Type of Reading
- **Parameter Designator:**
  Indicates Reading Displayed
- **Watt-Hour Test Pulse:**
  Energy Pulse Output to Test Accuracy
- **Scaling Factor:**
  Kilo or Mega multiplier of Displayed Readings
- **% of Load Bar:**
  Graphic Display of Amps as % of the Load
  (Refer to Section 6.3 for additional information.)
- **IrDA Communication Port:**
  Com 1 Port for Wireless Communication

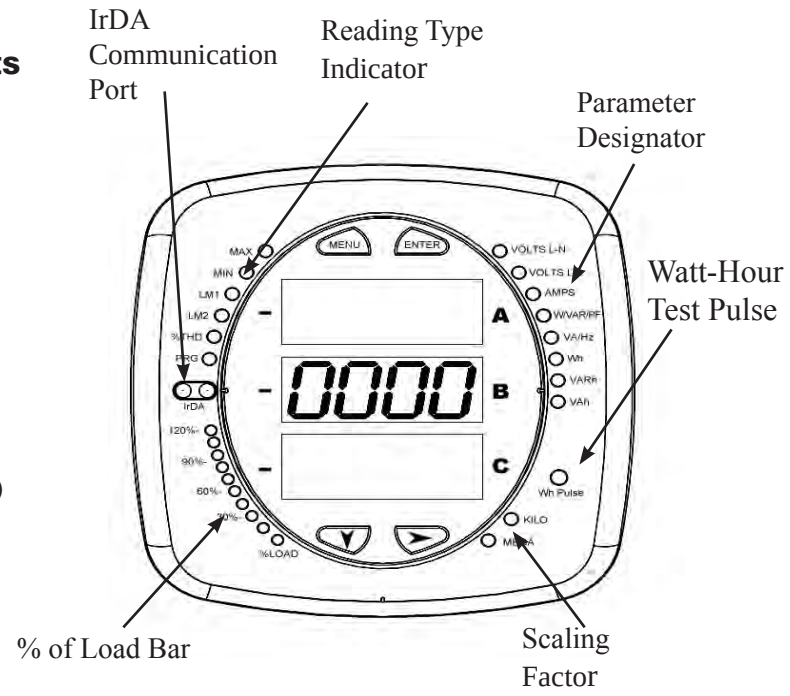

Figure 6.1: Face Plate with Elements

6.1.2: Understanding Meter Face Buttons

The meter face has **Menu**, **Enter**, **Down** and **Right** buttons, which allow you to perform the following functions:

- View Meter Information
- Enter Display Modes
- Configure Parameters (may be Password Protected)
- Perform Resets (may be Password Protected)
- Perform LED Checks
- Change Settings
- View Parameter Values
- Scroll Parameter Values
- View Limit States

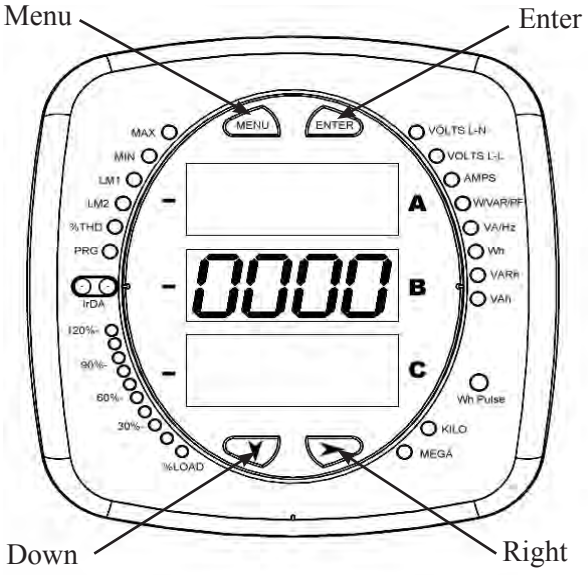

Figure 6.2: Face Plate with Buttons

6.2: Using the Front Panel

You can access **four** modes using the Shark® 200 meter's front panel buttons:

- **Operating Mode** (Default)
- **Reset Mode**
- **Configuration Mode**
- **Information Mode**. **Information Mode** displays a sequence of screens that show model information, such as **Frequency**, **Amps, V-Switch,** etc.

Use the **Menu**, **Enter**, **Down** and **Right** buttons to navigate through each mode and its related screens.

NOTES:

- *Appendix A* contains the complete Navigation Map for the front panel display modes and their screens.
- The meter can also be configured using software; see the *Communicator EXT User's Manual* for instructions.

6.2.1: Understanding Startup and Default Displays

Upon Power Up, the meter displays a sequence of screens:

- **Lamp Test Screen** where all LEDs are lit
- **Lamp Test Screen** where all digits are lit
- **Firmware Screen** showing build number
- **Error Screen** (if an error exists).

After startup, if auto-scrolling is enabled, the Shark® 200 meter scrolls the parameter readings on the right side of the front panel. The Kilo or Mega LED lights, showing the scale for the Wh, VARh and VAh readings. Figure 6.3 shows an example of a Wh reading.

The Shark® 200 meter continues to provide scrolling readings until one of the buttons on the front panel is pressed, causing the meter to enter one of the other Modes.

Figure 6.3: Wh Reading

6.2.2: Using the Main Menu

1. Press the **Menu** button. The Main Menu screen appears.
   - The **Reset: Demand** mode (**rStd**) appears in the A window. Use the **Down** button to scroll, causing the **Reset: Energy** (**rStE**), **Configuration** (**CFG**), **Operating** (**OPr**), **and Information** (**InFo**) modes to move to the **A window**.
   - The mode that is currently flashing in the A window is the "**Active**" mode, which means it is the mode that can be configured.

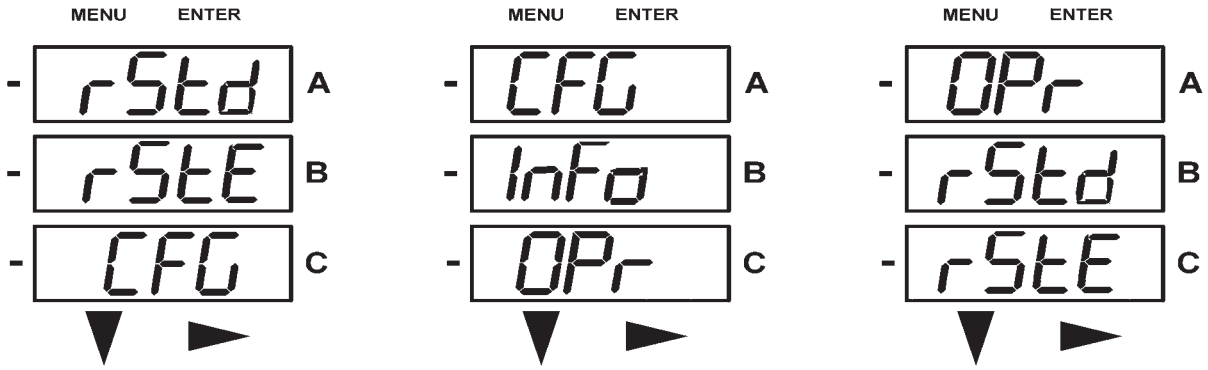

For example: Press **Down Twice** - **CFG** moves to A window. Press **Down Twice** - **OPr** moves to A window.

2. Press the **Enter** button from the Main Menu to view the **Parameters** screen for the mode that is currently active.

6.2.3: Using Reset Mode

Reset Mode has **two options:**

- **Reset: Demand** (**rStd**): resets the Max and Min values.
- **Reset: Energy** (**rStE**): resets the energy accumulator fields.

Press the **Enter** button while either **rStd** or **rStE** is in the A window. The **Reset Demand No or Reset Energy No** screen appears.

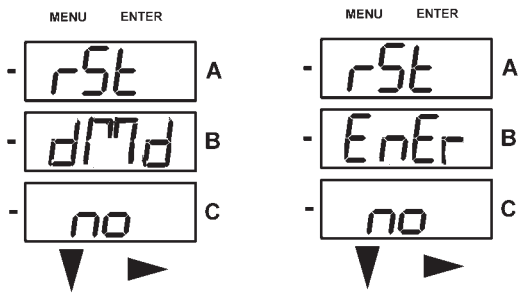

- If you press the **Enter** button again, the Main Menu appears, with **the next mode** in the A window. (The **Down** button does not affect this screen.)

- If you press the **Right** button, the **Reset Demand YES** or **Reset Energy YES** screen appears.
  Press **Enter** to perform a reset.
  NOTE: If Password Protection is enabled for Reset, you must enter the four digit Password before you can reset the meter. (See Chapter 5 in the *Communicator EXT User's Manual* for information on Password Protection.)
  To enter a password, follow the instructions in Section 6.2.4.

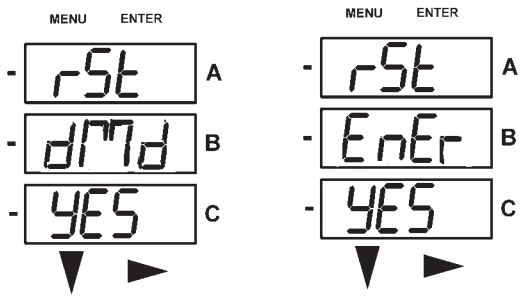

CAUTION! Reset Demand YES resets **all** Max and Min values.

Once you have performed a reset, the screen displays either "**rSt dMd donE**" or "**rSt EnEr donE**"and then resumes auto-scrolling parameters.

6.2.4: Entering a Password

If Password Protection has been enabled in the software for Reset and/or Configuration (see Chapter 5 in the *Communicator EXT User's Manual* for information), a screen appears requesting a Password when you try to reset the meter and/or configure settings through the front panel.

- **PASS** appears in the A window and 4 dashes appear in the B window. The leftmost dash is flashing.

1. Press the **Down** button to scroll numbers from 0 to 9 for the flashing dash. When the correct number appears for that dash, use the the **Right** button to move to the next dash.

   Example: The left screen, below, shows four dashes. The right screen shows the display after the first two digits of the password have been entered.

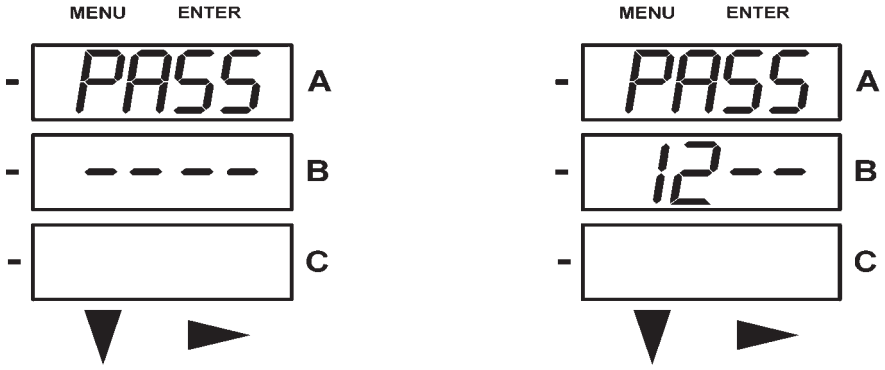

2. When all 4 digits of the password have been selected, press the **Enter** button.

- If you are in **Reset Mode** and the correct Password has been entered, "**rSt dMd donE**" or "**rSt EnEr donE**"appears and the screen resumes auto-scrolling parameters.
- If you are in **Configuration Mode** and the correct Password has been entered, the display returns to the screen that required a password.

- If an incorrect Password has been entered, "**PASS ---- FAIL**" appears and:
  - The previous screen is redisplayed, if you are in **Reset Mode**.
  - The previous Operating Mode screen is redisplayed, if you are in **Configuration Mode**.

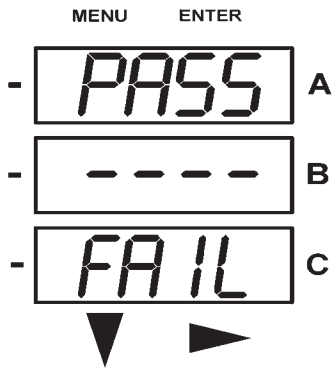

6.2.5: Using Configuration Mode

Configuration Mode follows Reset: Energy on the Main Menu.

To access **Configuration Mode**:

1. Press the **Menu** button while the meter is auto-scrolling parameters.
2. Press the **Down** button until the Configuration Mode option (**CFG**) is in the A window.
3. Press the **Enter** button. The **Configuration Parameters** screen appears.
4. Press the **Down** button to scroll through the configuration parameters: **Scroll (SCrL)**, **CT**, **PT**, **Connection (Cnct)** and **Port**. The parameter currently 'Active," i.e., configurable, flashes in the A window.
5. Press the **Enter** button to access the Setting screen for the currently active parameter.

   NOTE: **You can use the Enter button to scroll through all of the Configuration parameters and their Setting screens, in order.**

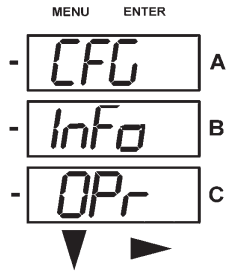

Press **Enter** when CFG is in A window -

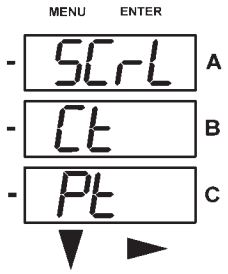

Parameter screen appears - Press **Down**-
Press **Enter** when Parameter you want is in A window

6. The parameter screen appears, showing the current settings. To change the settings:
   - Use either the **Down** button or the **Right** button to select an option.
   - To enter a number value, use the **Down** button to select the number value for a digit and the **Right** button to move to the next digit.

   NOTE: When you try to change the current setting and Password Protection is enabled for the meter, the Password screen appears. See **Section 6.2.4** for instructions on entering a password.
7. Once you have entered the new setting, press the **Menu** button twice.
8. The **Store ALL YES** screen appears. You can either:
   - Press the **Enter** button to **save** the new setting.
   - Press the **Right** button to access the **Store ALL no** screen; then press the Enter button to **cancel** the Save.
9. If you have saved the settings, the **Store ALL done** screen appears and the meter resets.

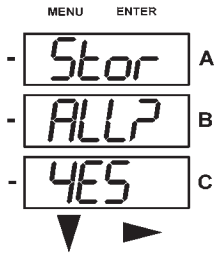

Press the Enter button to save the settings
Press the Right button for Stor All no screen

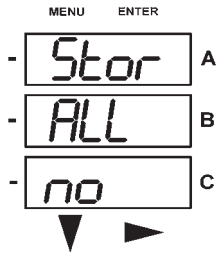

Press the Enter button to
Cancel the save

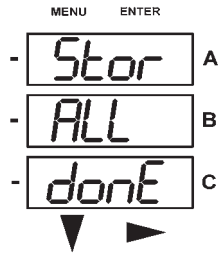

The settings have been saved

6.2.5.1: Configuring the Scroll Feature

When in **Auto Scroll** mode, the meter performs a scrolling display, showing each parameter for 7 seconds, with a 1 second pause between parameters. The parameters that the meter displays are determined by the following conditions:

- They have been selected through software. (Refer to the *Communicator EXT User's Manual* for instructions.)
- They are enabled by the installed V-Switch. Refer to Section 2.1.3 for information on V-Switches.

To enable or disable Auto-scrolling:

1. Press the **Enter** button when **SCrl** is in the A window.
   The **Scroll YES** screen appears.

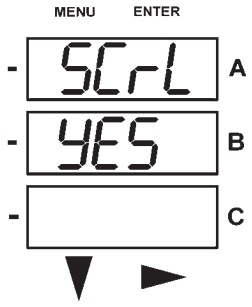

2. Press either the **Right** or **Down** button if you want to access the **Scroll no** screen.
   To return to the **Scoll YES** screen, press either button.

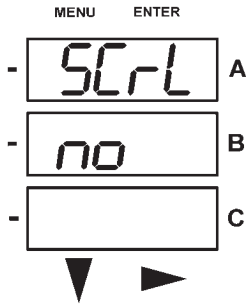

3. Press the **Enter** button on either the **Scroll YES** screen (to enable auto-scrolling) or the **Scroll no** screen (to disable auto-scrolling).
   The **CT- n** screen appears (this is the next Configuration mode parameter).

NOTE:

- To exit the screen without changing scrolling options, press the **Menu** button.
- To return to the Main Menu screen, press the **Menu** button twice.
- To return to the scrolling (or non-scrolling) parameters display, press the **Menu** button three times.

6.2.5.2: Configuring CT Setting

The CT Setting has three parts: **Ct-n** (numerator), **Ct-d** (denominator), and **Ct-S** (scaling).

1. Press the **Enter** button when Ct is in the A window.
   The **Ct-n** screen appears. You can either:
   - Change the value for the CT numerator.
   - Access one of the other CT screens by pressing the Enter button: press Enter once to access the **Ct-d** screen, twice to access the **Ct-S** screen.

   NOTE: The Ct-d screen is preset to a 5 amp or 1 amp value at the factory and cannot be changed.

   a. **To change the value for the CT numerator**

   From the Ct-n screen:
   - Use the **Down** button to select the number value for a digit.
   - Use the **Right** button to move to the next digit.

   b. **To change the value for CT scaling**

   From the Ct-S screen:
   Use the **Right** button or the **Down** button to choose the scaling you want. The Ct-S setting can be **1**, **10**, or **100**.

   NOTE: If you are prompted to enter a password, refer to Section 6.2.4 for instructions on doing so.

2. When the new setting is entered, press the **Menu** button twice.

3. The **Store ALL YES** screen appears. Press **Enter** to save the new CT setting.

Example CT Settings:

200/5 Amps:	Set the Ct-n value for 200 and the Ct-S value for 1.
800/5 Amps:	Set the Ct-n value for 800 and the Ct-S value for 1.
2,000/5 Amps:	Set the Ct-n value for 2000 and the Ct-S value for 1.
10,000/5 Amps:	Set the Ct-n value for 1000 and the Ct-S value for 10.

NOTES:
- The value for Amps is a product of the Ct-n value and the Ct-S value.
- Ct-n and Ct-S are dictated by primary current; Ct-d is secondary current.

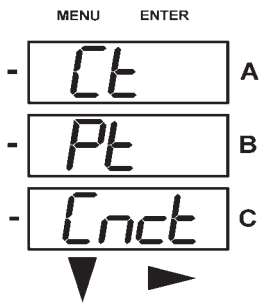

Press **Enter**

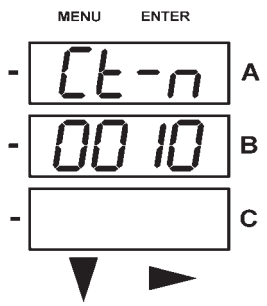

Use buttons to set Ct-n value

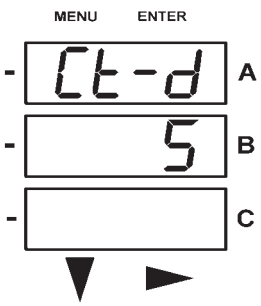

The Ct-d cannot be changed

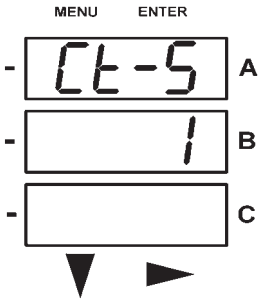

Use buttons to select scaling

6.2.5.3: Configuring PT Setting

The PT Setting has three parts: **Pt-n** (numerator), **Pt-d** (denominator), and **Pt-S** (scaling).

1. Press the **Enter** button when Pt is in the A window.
   The **PT-n** screen appears. You can either:
   - Change the value for the PT numerator.
   - Access one of the other PT screens by pressing the **Enter** button: press **Enter** once to access the **Pt-d** screen, twice to access the **Pt-S** screen.

   a. **To change the value for the PT numerator or denominator**

   From the Pt-n or Pt-d screen:
   - Use the **Down** button to select the number value for a digit.
   - Use the **Right** button to move to the next digit.

   b**. To change the value for the PT scaling**

   From the Pt-S screen:
   Use the **Right** button or the **Down** button to choose the scaling you want. The Pt-S setting can be **1**, **10**, **100, or 1000**.

   NOTE: If you are prompted to enter a password, refer to Section 6.2.4 for instructions on doing so.

2. When the new setting is entered, press the **Menu** button twice.

3. The **STOR ALL YES** screen appears. Press Enter to save the new PT setting.

Example Settings:

277/277 Volts:	Pt-n value is 277, Pt-d value is 277, Pt-S value is 1.
14,400/120 Volts:	Pt-n value is 1440, Pt-d value is 120, Pt-S value is 10.
138,000/69 Volts:	Pt-n value is 1380, Pt-d value is 69, Pt-S value is 100.
345,000/115 Volts:	Pt-n value is 3450, Pt-d value is 115, Pt-S value is 100.
345,000/69 Volts:	Pt-n value is 345, Pt-d value is 69, Pt-S value is 1000.

NOTE: Pt-n and Pt-S are dictated by primary voltage; Pt-d is secondary voltage.

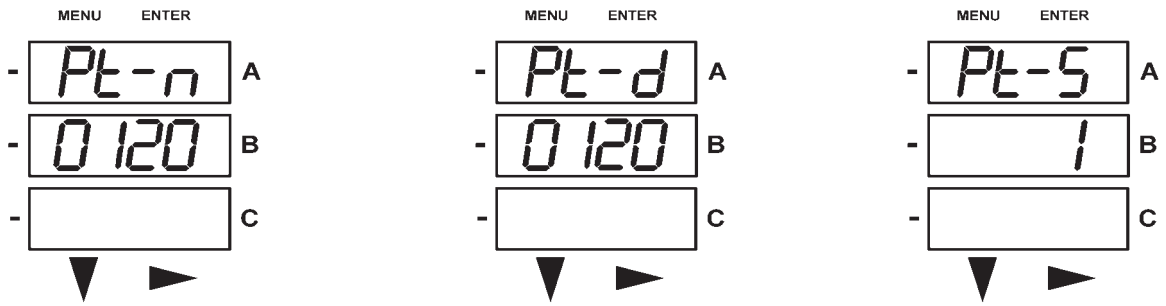

Use □

6.2.5.4: Configuring Connection Setting

1. Press the **Enter** button when **Cnct** is in the A window. The **Cnct** screen appears.
2. Press the **Right** button or **Down** button to select a configuration.
   The choices are:
   • 3 Element Wye (**3 EL WYE**)
   • 2.5 Element Wye (**2.5EL WYE**)
   • 2 CT Delta (**2 Ct dEL**)
   NOTE: If you are prompted to enter a password, refer to Section 6.2.4 for instructions on doing so.
3. When you have made your selection, press the **Menu** button twice.
4. The **STOR ALL YES** screen appears. Press **Enter** to save the setting.

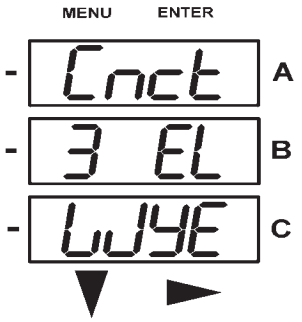

Use buttons to select configuration

6.2.5.5: Configuring Communication Port Setting

Port configuration consists of : **Address** (a three digit number), **Baud Rate** (9600; 19200; 38400; or 57600), and **Protocol** (DNP 3.0; Modbus RTU; or Modbus ASCII).

1. Press the **Enter** button when **POrt** is in the A window.
   The **Adr** (address) screen appears. You can either:
   • Enter the address.
   • Access one of the other Port screens by pressing the **Enter** button: press **Enter** once to access the **bAUd** screen (Baud Rate), twice to access the **Prot** screen (Protocol).

   a. **To enter the Address**
      From the Adr screen:
      • Use the **Down** button to select the number value for a digit.
      • Use the **Right** button to move to the next digit.

   b. **To select the Baud Rate:**
      From the bAUd screen:
      Use the **Right** button or the **Down** button to select the setting you want.

   c. **To select the Protocol**
      From the Prot screen:
      Press the **Right** button or the **Down** button to select the setting you want.

   NOTE: If you are prompted to enter a password, refer to Section 6.2.4 for instructions on doing so.
2. When you have finished making your selections, press the **Menu** button twice.
3. The **STOR ALL YES** screen appears. Press **Enter** to save the settings.

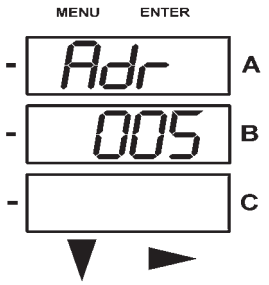

Use buttons to enter Address

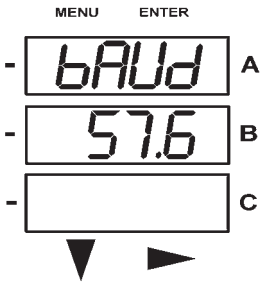

Use buttons to select Baud Rate

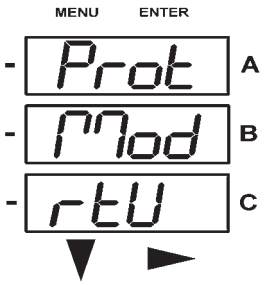

Use buttons to select Protocol

6.2.6: Using Operating Mode

Operating Mode is the Shark® 200 meter's default mode, that is, the standard front panel display. After Startup, the meter automatically scrolls through the parameter screens, if scrolling is enabled. Each parameter is shown for 7 seconds, with a 1 second pause between parameters. Scrolling is suspended for 3 minutes after any button is pressed.

1. Press the **Down** button to scroll all the parameters in **Operating Mode**. The currently "Active," i.e., displayed, parameter has the Indicator light next to it, on the right face of the meter.
2. Press the **Right** button to view additional readings for that parameter. The table below shows possible readings for Operating Mode. **Sheet 2** in *Appendix A* shows the Operating Mode Navigation Map.
   NOTE: Readings or groups of readings are skipped if not applicable to the meter type or hookup, or if they are disabled in the programmable settings.

OPERATING MODE PARAMETER READINGS

POSSIBLE READINGS

VOLTS L-N	VOLTS_LN	VOLTS_LN_ MAX	VOLTS_LN_ MIN			VOLTS_LN_ THD
VOLTS L-L	VOLTS_LL	VOLTS_LL_ MAX	VOLTS_LL_ MIN			
AMPS	AMPS	AMPS_ NEUTRAL	AMPS_ MAX	AMPS_MIN		AMPS_THD
W/VAR/PF	W_VAR_PF	W_VAR_ PF_MAX_ POS	W_VAR_ PF_MIN_ POS	W_VAR_ PF_MIN_ NEG		
VA/Hz	VA_FREQ	VA_FREQ_ MAX	VA_FREQ_ MIN			
Wh	KWH_REC	KWH_DEL	KWH_NET	KWH_TOT		
VARh	KVARH_ POS	KVARH_ NEG	KVARH_ NET	KVARH_ TOT		
VAh	KVAH					

6.3: Understanding the % of Load Bar

The 10-segment LED bargraph at the bottom left of the Shark® 200 meter's front panel provides a graphic representation of Amps. The segments light according to the load, as shown in the % Load Segment Table below.
When the Load is over 120% of Full Load, all segments flash "On" (1.5 secs) and "Off" (0.5 secs).

% of Load Segment Table

Segments	Load >= % Full Load
none	no load
1	1%
1-2	15%
1-3	30%
1-4	45%
1-5	60%
1-6	72%
1-7	84%
1-8	96%
1-9	108%
1-10	120%
All Blink	>120%

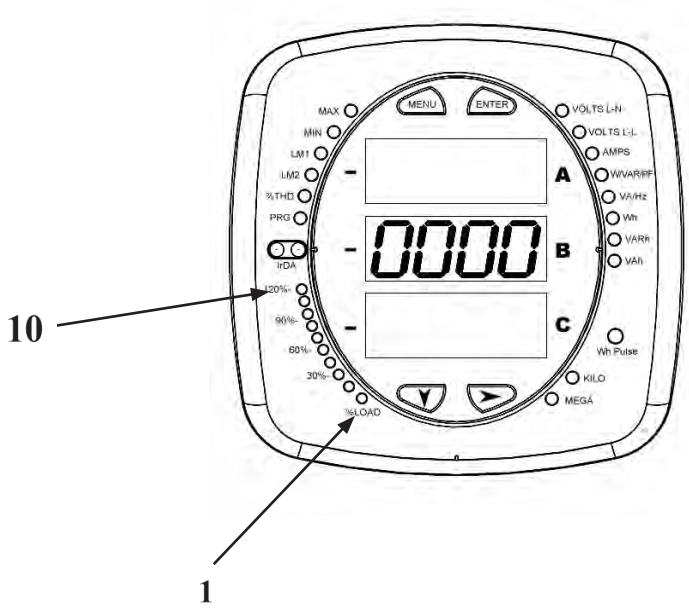

6.4: Performing Watt-Hour Accuracy Testing (Verification)

To be certified for revenue metering, power providers and utility companies must verify that the billing energy meter performs to the stated accuracy. To confirm the meter's performance and calibration, power providers use field test standards to ensure that the unit's energy measurements are correct. Since the Shark® 200 meter is a traceable revenue meter, it contains a utility grade test pulse that can be used to gate an accuracy standard. This is an essential feature required of all billing grade meters.

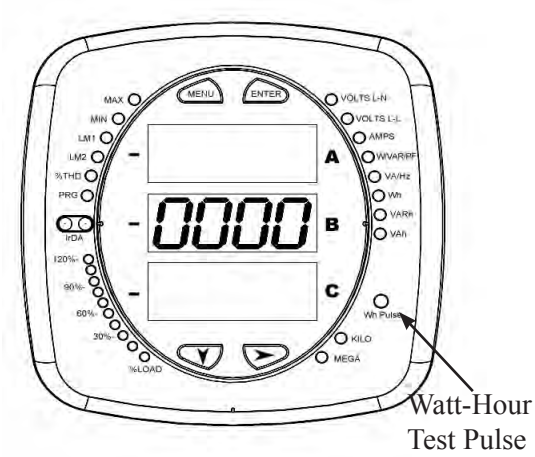

Figure 6.4: Watt-Hour Test Pulse

- Refer to Figure 6.5 for an example of how this process works.
- Refer to Table 6.1 for the Wh/Pulse Constants for Accuracy Testing.

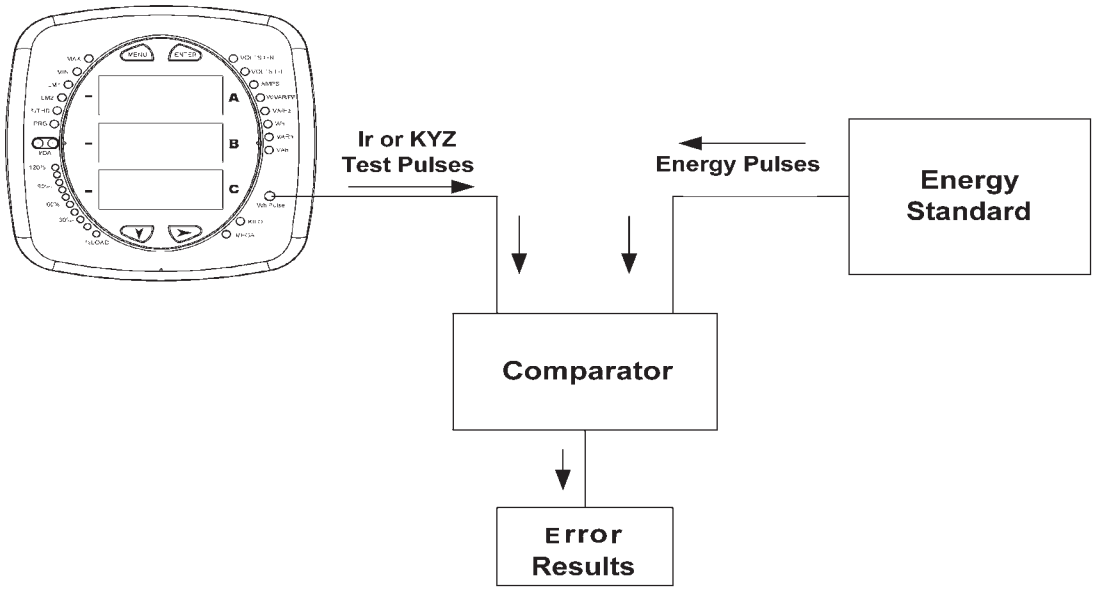

Figure 6.5: Using the Watt-Hour Test Pulse

Table 6.1: Infrared & KYZ Pulse Constants for Accuracy Testing - Kh Watthour per pulse

Input Voltage Level	Class 10 Models	Class 2 Models
Below 150V	0.500017776	0.1000035555
Above 150V	2.000071103	0.400014221

NOTES:

- Minimum pulse width is 90 milliseconds.
- Refer to Chapter 2, Section 2.2, for Wh Pulse specifications.

Chapter 7
Using the Shark® 200 Meter's I/O Option Cards

7.1: Overview

The Shark® 200 meter offers extensive **I/O expandability.** Using the **two** universal Option Card slots, the unit can be easily configured to accept new I/O Option cards even after installation, without your needing to remove the meter. The Shark® 200 meter auto-detects any installed Option cards. Up to **2 cards** of **any type** outlined in this chapter can be used per meter.

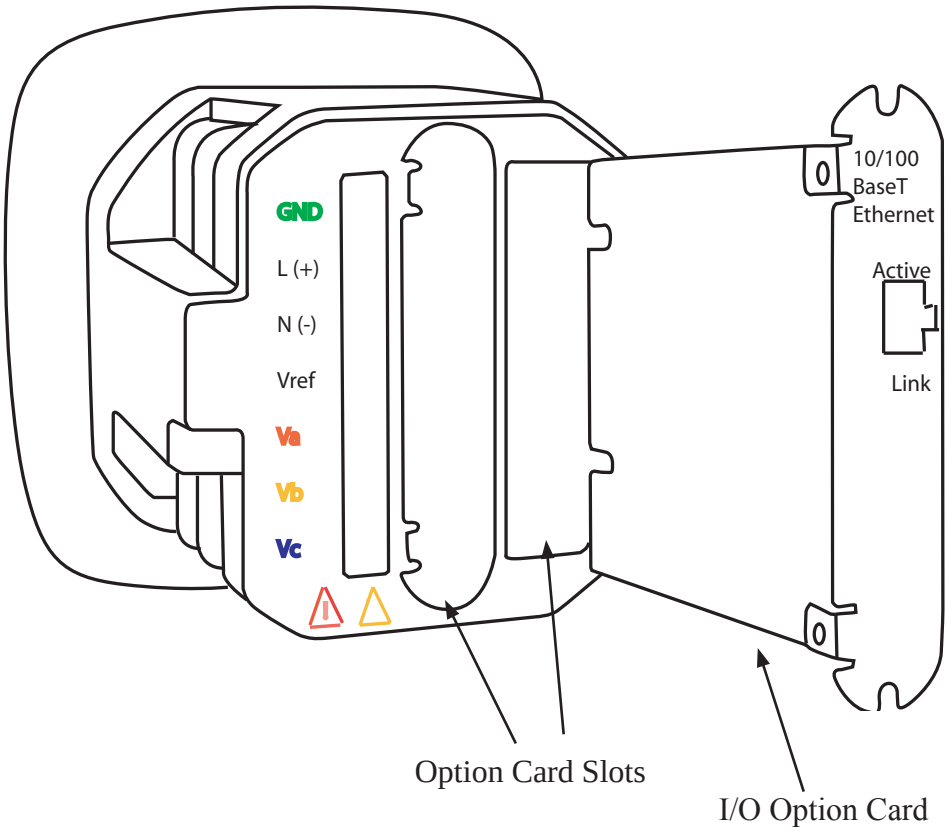

Figure 7.1: Shark® 200 Meter Back, Showing Option Card Slots and I/O Card

7.2: Installing Option Cards

The Option Cards are inserted in one of the two Option Card slots in the back of the Shark® 200 meter.
Note: Remove Voltage Inputs and power supply terminal to the meter before performing card installation.
1. Remove the screws at the top and the bottom of the Option Card slot covers.
2. There is a plastic "track" on the top and the bottom of the slot. The Option card fits into this track.

WARNING! For safety, remove these connections before installing Option Cards (GND, L, N, Vref, Va, Vb, Vc)

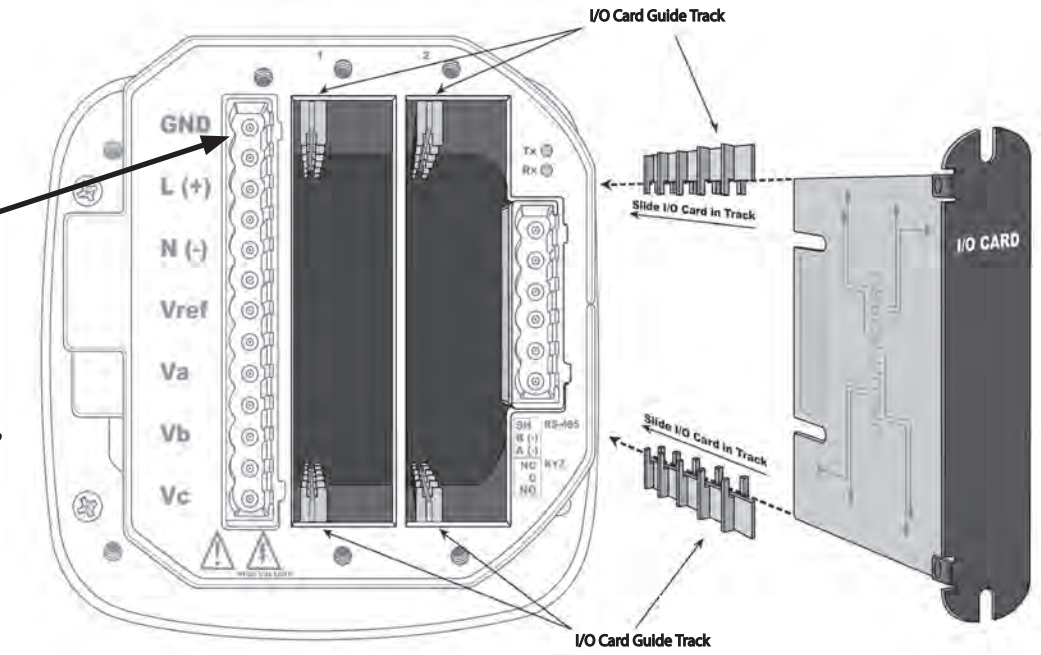

Figure 7.2: Detail of Guide Tracks

3. Slide the card inside the plastic track and insert it into the slot. You will hear a click when the card is fully inserted. **Be careful**, it is easy to miss the guide track.

CAUTIONS!
- Make sure the I/O card is inserted properly into the track to avoid damaging the card's components.
- For proper fit of cards, and to avoid damaging the unit, insert components in the following order:
    1. Option Card 1
    2. Option Card 2
    3. Detachable terminal block 1
    4. Detachable terminal block 2
    5. Communication connection for Port 2

7.3: Configuring Option Cards

CAUTION! FOR PROPER OPERATION, RESET ALL PARAMETERS IN THE UNIT AFTER HARDWARE MODIFICATION.

The Shark® 200 meter auto-detects any Option cards installed in it. Configure the Option cards through Communicator EXT software. Refer to Chapter 5 of the *Communicator EXT User's Manual* for detailed instructions.

The following sections describe the available Option cards.

7.4: 1mA Output Card (1mAOS)

The 1mA card transmits a standardized bi-directional 0-1mA signal. This signal is linearly proportional to real-time quantities measured by the Shark® 200 meter. The outputs are electrically isolated from the main unit.

7.4.1: Specifications:

The technical specifications at 25° C at 5kΩ load are as follows:

Number of outputs:	4 single ended
Power consumption:	1.2W internal
Signal output range:	(-1.2 to +1.2)mA
Max. load impedance:	10kΩ
Hardware resolution:	12 bits
Effective resolution:	14 bits with 2.5kHz PWM
Update rate per channel:	100ms
Output accuracy:	± 0.1 % of output range (2.4mA)
Load regulation	± 0.06 % of output range (2.4mA) load step of 5kΩ @ ± 1mA
Temperature coefficient	± 30nA/°C
Isolation:	AC 2500V system to outputs
Reset/Default output value:	0mA

The general specifications are as follows:

Operating temperature:	(-20 to +70) °C
Storage temperature:	(-40 to +80) °C
Relative air humidity:	Maximum 95%, non-condensing
EMC - Immunity Interference:	EN61000-4-2
Weight:	1.6oz
Dimensions (inch) W x H x L:	0.72 x 2.68 x 3.26
External connection:	AWG 12-26/(0.29 - 3.31) mm^2 5 pin, 0.200" pluggable terminal block

7.4.2: Default Configuration:

The Shark® 200 meter automatically recognizes the installed option card during Power Up. If you have not programmed a configuration for the card, the unit will default to the following outputs:

Channel 1 +Watts, +1800 Watts => +1mA
-Watts, - 1800 Watts => -1mA

Channel 2 +VARs, +1800 VARs => +1mA
- VARs, -1800 VARs => -1mA

Channel 3 Phase A Voltage WYE, 300 Volts => +1mA
Phase A Voltage Delta, 600 Volts => +1mA

Channel 4 Phase A Current, 10 Amps => +1mA

7.4.3: Wiring Diagram

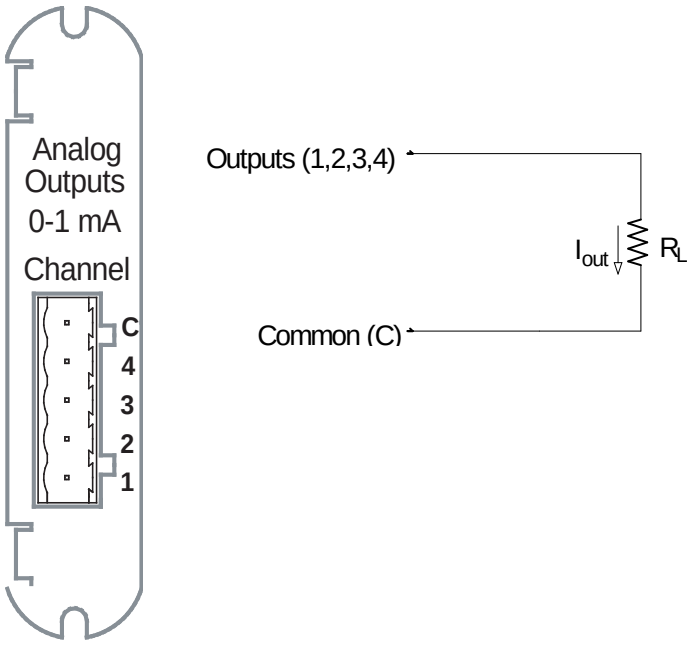

7.5: 20mA Output Card (20mAOS)

The 20mA card transmits a standardized 0-20 mA signal. This signal is linearly proportional to real-time quantities measured by the Shark® 200 meter. The current sources need to be loop powered. The outputs are electrically isolated from the main unit.

7.5.1: Specifications

The technical specifications at 25° C at 500Ω load are as follows:

Number of outputs:	4 single ended
Power consumption:	1W internal
Signal output range:	(0 to 24)mA
Max. load impedance:	850 Ω @ 24VDC
Hardware resolution:	12 bits
Effective resolution:	14 bits with 2.5kHz PWM
Update rate per channel:	100ms
Output accuracy:	± 0.1 % of output range (24mA)
Load regulation:	± 0.03 % of output range (24mA) load step of 200Ω @ 20mA
Temperature coefficient	± 300n A/°C
Isolation:	AC 2500V system to outputs
Maximum loop voltage:	28Vdc max.
Internal voltage drop:	3.4VDC @ 24mA
Reset/Default output value:	12mA

The general specifications are as follows:

Operating temperature:	(-20 to +70) °C
Storage temperature:	(-40 to +80) °C
Relative air humidity:	Maximum 95%, non-condensing
EMC - Immunity interference:	EN61000-4-2
Weight:	1.6oz
Dimensions (inch) W x H x L:	0.72 x 2.68 x 3.26
External connection:	AWG 12-26/(0.129 - 3.31)mm^2 5 pin, 0.200” pluggable terminal block

7.5.2: Default Configuration:

The Shark® 200 meter automatically recognizes the installed option card during Power Up. If you have not programmed a configuration for the card, the unit will default to the following outputs:

Channel 1
+Watts, +1800 Watts => 20mA
-Watts, -1800 Watts => 4mA
0 Watts => 12mA

Channel 2
+VARs, +1800 VARs => 20mA
- VARs, -1800 VARs => 4mA
0 VARs => 12mA

Channel 3
Phase A Voltage WYE, 300 Volts => 20mA
0 Volts => 4 mA
Phase A Voltage Delta, 600 Volts => 20mA

Channel 4
Phase A Current, 10 Amps => 20mA
0 Phase A Current, 0 Amps => 4 mA

7.5.3: Wiring Diagram

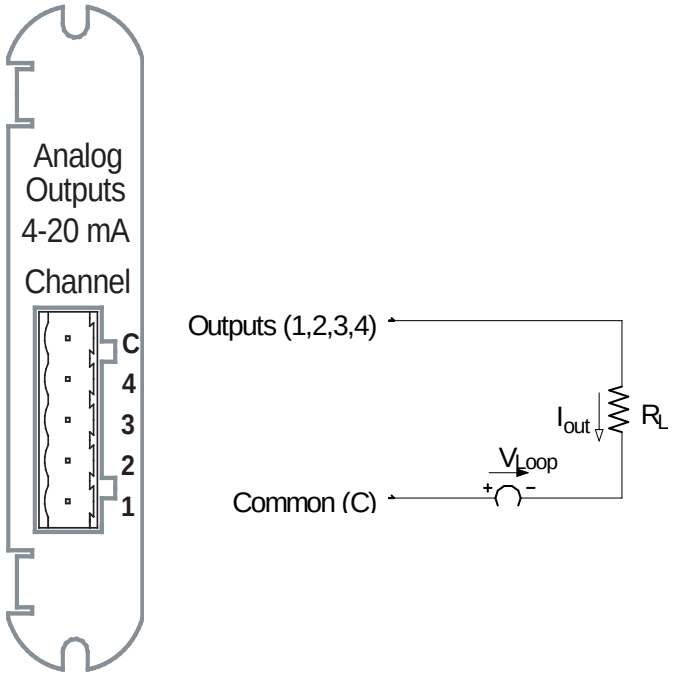

7.6: Digital Output (Relay Contact) / Digital Input Card (RO1S)

The Digital Output/Input card is a combination of relay contact outputs for load switching and dry/wet contact sensing digital inputs. The outputs are electrically isolated from the inputs and from the main unit.

7.6.1: Specifications

The technical specifications at 25 °C are as follows:

Power consumption:	0.320W internal
Relay outputs.	
Number of outputs:	2
Contact type:	Changeover (SPDT)
Relay type:	Mechanically latching
Switching voltage:	AC 250V / DC 30V
Switching power:	1250VA / 150W
Switching current:	5A
Switching rate max.:	10/s
Mechanical life:	5×10^7 switching operations
Electrical life:	10^5 switching operations at rated current
Breakdown voltage:	AC 1000V between open contacts
Isolation:	AC 3000V / 5000V surge system to contacts
Reset/Power down state:	No change - last state is retained
Inputs.	
Number of Inputs:	2
Sensing type:	Wet or dry contact status detection
Wetting voltage:	DC (12-24)V, internally generated
Input current:	2.5mA – constant current regulated
Minimum input voltage:	0V (input shorted to common)
Maximum input voltage:	DC 150V (diode protected against polarity reversal)
Filtering:	De-bouncing with 50ms delay time
Detection scan rate:	100ms
Isolation:	AC 2500V system to inputs

The general specifications are as follows:

Operating temperature:	(-20 to +70) °C
Storage temperature:	(-40 to +80) °C
Relative air humidity:	Maximum 95%, non-condensing
EMC - Immunity Interference:	EN61000-4-2
Weight:	1.5oz
Dimensions (inch) W x H x L:	0.72 x 2.68 x 3.26
External Connection:	AWG 12-26/(0.129 - 3.31)mm^2 9 pin, 0.200” pluggable terminal block

7.6.2: Wiring Diagram

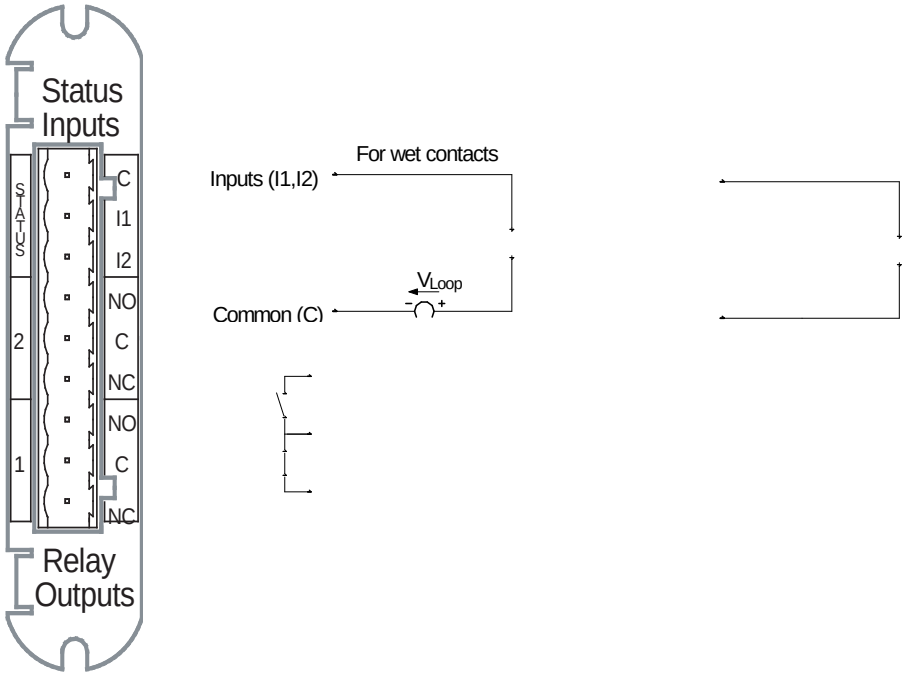

7.7: Pulse Output (Solid State Relay Contacts) / Digital Input Card (P01S)

The Pulse Output/Digital Input card is a combination of pulse outputs via solid state contacts and dry/wet contact sensing digital inputs. The outputs are electrically isolated from the inputs and from the main unit.

7.7.1: Specifications

The technical specifications at 25 °C are as follows:

Power consumption:	0.420W internal
Relay outputs	
Number of outputs:	4
Contact type:	Closing (SPST - NO)
Relay type:	Solid state
Peak switching voltage:	DC ±350V
Continuous load current:	120mA
Peak load current:	350mA for 10ms
On resistance, max.:	35Ω
Leakage current:	1μA@350V
Switching Rate max.:	10/s
Isolation:	AC 3750V system to contacts
Reset/Power down state:	Open contacts
Inputs	
Number of inputs:	4
Sensing type:	Wet or dry contact status detection
Wetting voltage:	DC (12-24)V, internally generated
Input current:	2.5mA – constant current regulated
Minimum input voltage:	0V (input shorted to common)
Maximum input voltage:	DC 150V (diode protected against polarity reversal)
Filtering:	De-bouncing with 50ms delay time
Detection scan rate:	100ms
Isolation:	AC 2500V system to inputs

The general specifications are as follows:

Operating Temperature:	(-20 to +70) °C
Storage Temperature:	(-40 to +80) °C
Relative air humidity:	Maximum 95%, non-condensing
EMC - Immunity Interference:	EN61000-4-2
Weight:	1.3oz
Dimensions (inch) W x H x L:	0.72 x 2.68 x 3.26
External Connection:	AWG 12-26/(0.129 - 3.31)mm^2
	13 pin, 3.5mm pluggable terminal block

7.7.2: Default Configuration:

The Shark® 200 meter automatically recognizes the installed option card during Power Up. If you have not programmed a configuration for the card, the unit will default to the following outputs:

Status Inputs	Defaulted to Status Detect
Pulse Outputs	Defaulted to Energy Pulses
Pulse Channel 1	1.8 +Watt-hrs per pulse
Pulse Channel 2	1.8 -Watt-hrs per pulse
Pulse Channel 3	1.8 +VAR-hrs per pulse
Pulse Channel 4	1.8 -VAR-hrs per pulse

7.7.3: Wiring Diagram

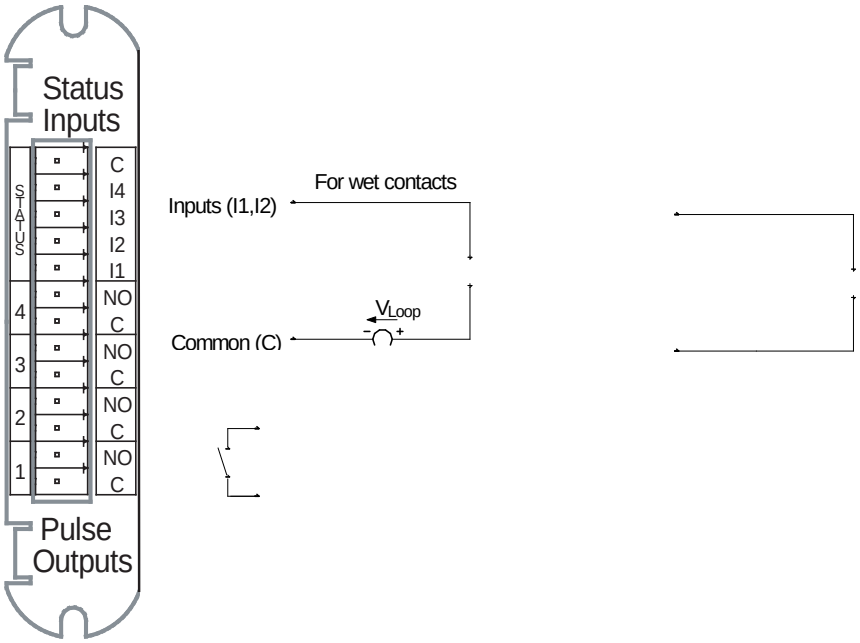

7.8: Fiber Optic Communication Card (FOSTS; FOVPS)

The Fiber Optic Communication card provides a standard serial communication port via a fiber optic connection. An echo switch is available to enable messages bypassing the unit. This feature can be used in a daisy chained network topology.

7.8.1: Specifications

The technical specifications at 25 °C are as follows:

Number of Ports:	1
Power consumption:	0.160W internal
Fiber connection:	ST® (FOST) or Versatile Link (FOVP) – as per order
Optical fiber details:	Multimode
ST® (FOSTS)	50/125 µm, 62.5/125 µm, 100/140 µm, 200µm Hard Clad Silica (HCS®)
Versatile Link (FOVPS):	200µm Hard Clad Silica (HCS®) 1mm Plastic Optical Fiber (POF)
Baud rate:	Up to 57.6kb/s – pre-programmed in the main unit
Diagnostic feature:	LED lamps for TX and RX activity

The general specifications are as follows:

Operating Temperature:	(-20 to +70) °C
Storage Temperature:	(-40 to +80) °C
Relative air humidity:	Maximum 95%, non-condensing
EMC - Immunity Interference:	EN61000-4-2
Weight:	1.2oz
Dimensions (inch) W x H x L:	0.72 x 2.68 x 3.26
Fiber Connection:	ST® (FOST) or Versatile Link (FOVP) – as per order

HCS® is a registered trademark of SpecTran Corporation.
ST® is a registered trademark of AT&T.

7.8.2: Wiring Diagram

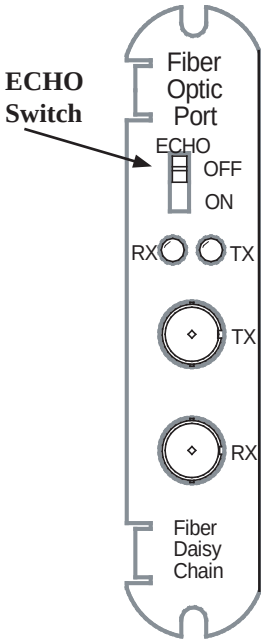

ST® type connector

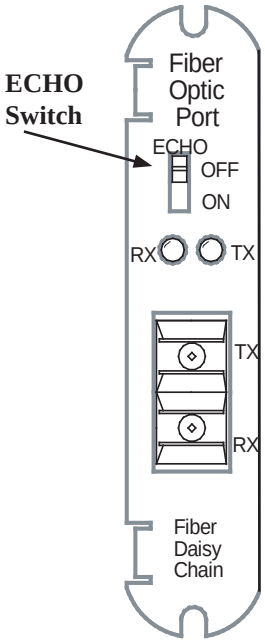

Versatile Link type connector

Setting the ECHO Switch:

For a **Point to Point Connection,** set **ECHO** to **OFF****

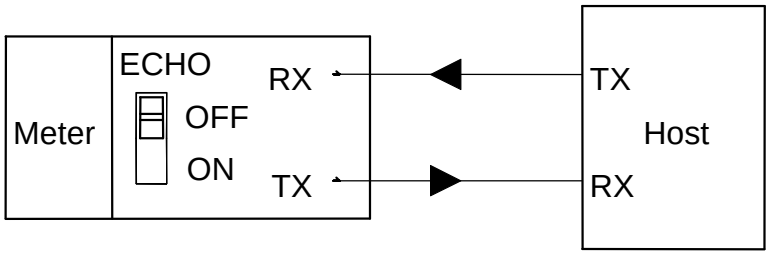

For a **Daisy Chained Connection**, set **ECHO** to **ON***

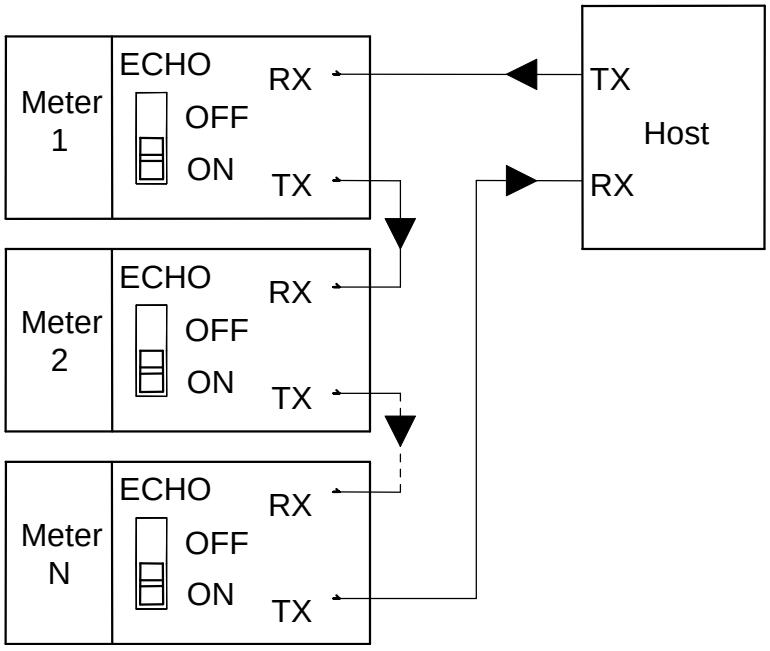

Fig. 7.7: Fiber Optic Communication Card

*When a Fiber Optic Communication card is installed in a meter that is part of a **Daisy Chained** connection (see Chapter 5 for details), set the **ECHO** switch to **ON**: this will allow messages that are not for the meter to continue to the next meter in sequence.

If this meter is being used in a **Point to Point Connection, set the **ECHO** switch to **OFF**, since you do not want messages to bypass the meter.

7.9: 10/100BaseT Ethernet Communication Card (INP100S)

The 10/100BaseT Ethernet Communication card provides the Shark® 200 meter with Ethernet capability. See Chapter 8 for details and instructions.

NOTE: Refer to Chapter 5 of the *Communicator EXT User's Manual* for instructions on performing Network configuration.

7.9.1: Specifications

The technical specifications at 25 °C are as follows:

Number of Ports:	1
Power consumption:	2.1W internal
Baud rate:	10/100Mbit
Diagnostic feature:	Status LEDs for LINK and ACTIVE
Number of simultaneous Modbus connections:	12

The general specifications are as follows:

Operating Temperature:	(-20 to +70) °C
Storage Temperature:	(-40 to +80) °C
Relative air humidity:	Maximum 95%, non-condensing
EMC - Immunity Interference:	EN61000-4-2
Weight:	1.7oz
Dimensions (inch) W x H x L:	0.72 x 2.68 x 3.26
Connection Type:	RJ45 modular (Auto-detecting transmit and receive)

7.9.2: Default Configuration

The Shark® 200 meter automatically recognizes the installed option card during Power Up. If you have not programmed a configuration for the card, the unit will default to the following:

IP Address: 10.0.0.2
Subnet Mask: 255.255.255.0
Default Gateway: 0.0.0.0

7.9.3: Wiring Diagram

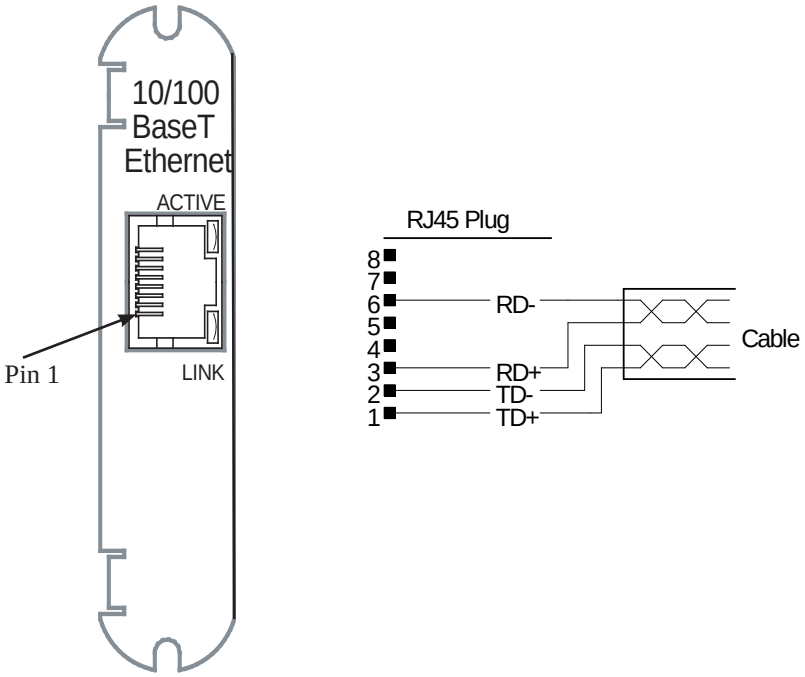

Fig. 7.8: 100/10BaseT Ethernet Card

IMPORTANT! The INP100S uses an auto-detecting circuit that automatically switches the transmit and receive in order to properly align communication. Because of this, **when** you are **communicating directly** to a **meter with a PC or a switch**, a **straight cable can be used**.

Chapter 8
Using the Ethernet Card (INP100S)

8.1: Overview

When you install the optional **Ethernet** card in your Shark® 200 meter, you gain the capability of communicating over the Ethernet medium using EIG's Rapid Response™ technology.

8.2: Hardware Connection

1. The **Ethernet** card fits into either of the two Option Card slots in the back of the Shark® 200 meter. Refer to the instructions in Chapter 7 for card installation.

2. Use a standard **RJ-45 10/100BaseT cable** to connect to the Ethernet card.

The card autodetects cable type and will work with either **straight** or **crossover** cable.

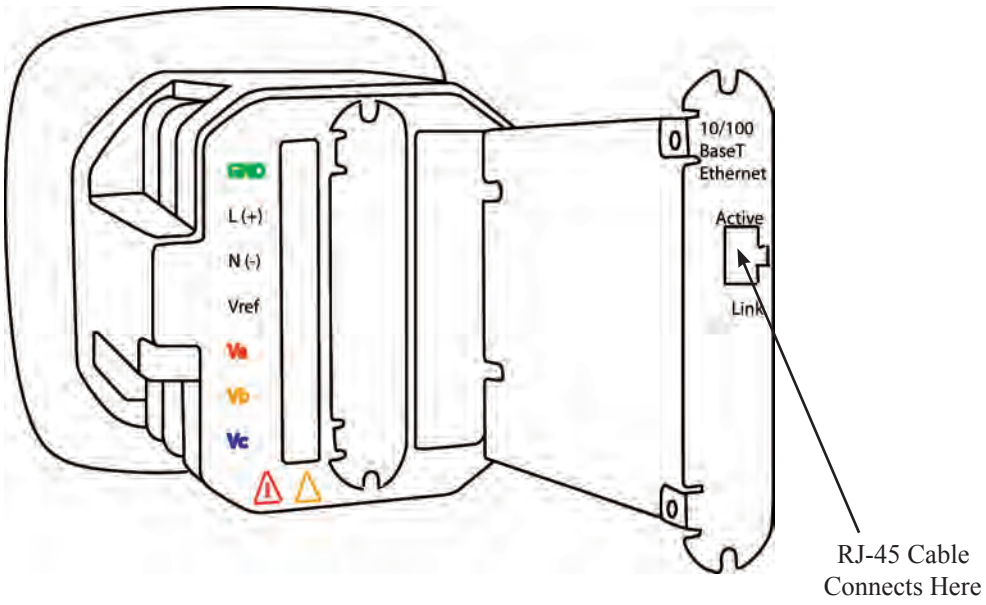

Figure 8.1: Shark® 200 meter with Ethernet Card

8.3: Performing Network Configuration

As with the other Option cards, the Shark® 200 meter **auto-detects** the presence of an installed **Ethernet card**. Configure the Ethernet card through Communicator EXT. Refer to Chapter 5 of the *Communicator EXT User's Manual* for instructions.

8.4: Upgrading the Ethernet Card's Firmware

Follow this procedure to upgrade the Ethernet card's firmware.

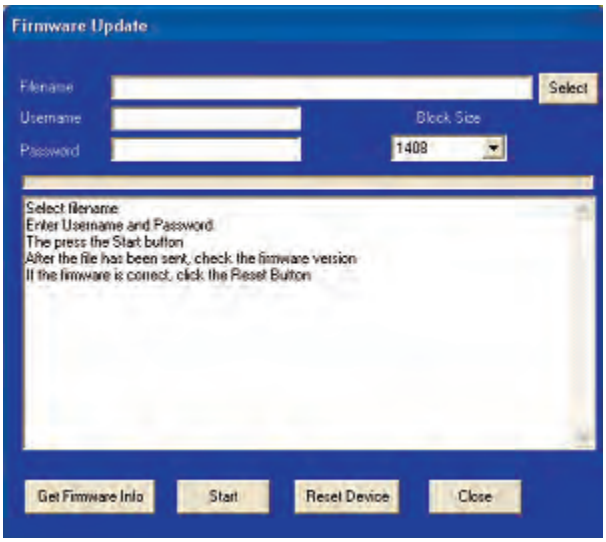

1. From Communicator EXT's **Main** screen, click **Tools**>**Flash Network Card**. You will see the screen shown on the right.

2. Follow this procedure:
   a. Enter the upgrade filename or click **Select** to browse for it.
   b. Enter Network card **Username** and **Password**; e.g. "eignet" and "inp200."
   c. Press **Start**.

3. Check the firmware version by clicking **Get Firmware Info**.

4. Once you have confirmed that the firmware version is correct, click **Reset Device**.

5. Click **Close** to return to the Communicator EXT **Main** screen.

Chapter 9
Data-Logging

9.1: Overview

Optional V-Switch™ keys 2-6 (V-2 - V-6) give the Shark® 200 meter additional memory for extensive data logging. The Shark® 200 meter can log historical trends, limit alarms, I/O changes, sequence of events, and waveforms (V-5 and V-6 only). In addition, the meter has a real-time clock that allows all events to be time-stamped when they occur.

9.2: Available Logs

The following logs are available for a Shark ® 200 meter equipped with V- 2 - V-4. These meters have 2 Mega-Bytes of flash memory for data logging.

- **Historical Logs:** The Shark® 200 meter has **three** Historical Logs. Each log can be independently programmed with individual trending profiles, that is, each can be used to measure different values. You can program up to 64 parameters per log. You also have the ability to allocate available system resources between the three logs, to increase or decrease the size of the individual historical logs. See Chapter 5 (Configuring Historical Logs and Allocating Historical Log Sectors) and Chapter 8 (Viewing Logs) of the *Communicator EXT User's Manual* for additional information and instructions.

- **Limit/Alarm Log:** This log provides the magnitude and duration of an event that falls outside of configured acceptable limits. Time stamps and alarm value are provided in the log. Up to 2,048 events can be logged. See Chapter 5 (Configuring Limits) and Chapter 8 (Shark® 200 Meter Logs) of the *Communicator EXT User's Manual* for additional information and instructions.

- **I/O Change Log:** This log is unique to the Shark® 200 meter. The I/O Change Log provides a time-stamped record of any Relay Output/Digital Input or Pulse Output/Digital Input Card output or input status changes. Up to 2,048 events can be logged. Refer to Chapter 5 (Configuring Shark® 200 Meter Option Cards) and Chapter 8 (Shark® 200 Meter Logs) of the *Communicator EXT User's Manual* for additional information and instructions.

- **System Events Log:** In order to protect critical billing information, the Shark® 200 meter records and logs the following information with a timestamp:
  - Demand resets
  - Password requests
  - System startup
  - Energy resets
  - Log resets
  - Log reads
  - Programmable settings changes.

A Shark® 200 meter equipped with V-5 and V-6 has additional memory for data logging: V-5 gives the meter 3 Megabytes of flash memory, and V-6 gives the meter 4 MegaBytes of flash memory. These meters also have waveform recording capabilities, and an additional log, described on the next page.

- **Waveform Log:** This event-triggered log records a waveform when a user-programmed value goes out of limit and when the value returns to normal.

All of the Shark® 200 meter Logs can be viewed through the **EIG Log Viewer**. Refer to Chapter 8 of the *Communicator EXT User's Manual* for additional information and instructions regarding Logs and the Log Viewer.

Appendix A
Navigation Maps for the Shark® 200 Meter

A.1: Introduction

You can configure the Shark® 200 meter and perform related tasks using the buttons on the meter face.
- Chapter 6 contains a decription of the buttons on the meter face and instructions for programming the meter using them.
- The meter can also be programmed using software (see the *Communicator EXT 3.0 User's Manual*).

A.2: Navigation Maps (Sheets 1 to 4)

The Shark® 200 meter Navigation Maps begin on the next page. The maps show in detail how to move from one screen to another and from one Display Mode to another using the buttons on the face of the meter. All Display Modes will automatically return to Operating Mode after 10 minutes with no user activity.

Shark® 200 Meter Navigation Map Titles:

- Main Menu Screens (Sheet 1)
- Operating Mode Screens (Sheet 2)
- Reset Mode Screens (Sheet 3)
- Configuration Mode Screens (Sheet 4)

Main Menu Screens (Sheet 1)

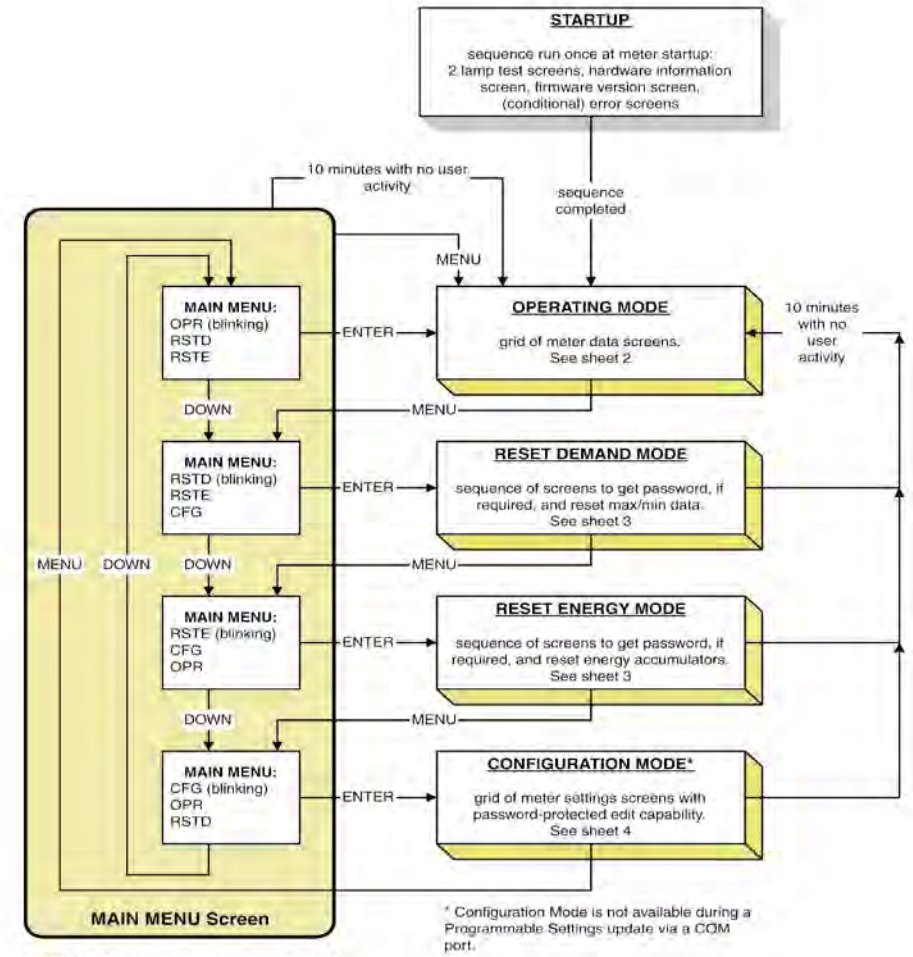

MAIN MENU screen scrolls through 4 choices, showing 3 at a time. The top choice is always the "active" one, which is indicated by blinking the legend.

SYMBOLS

- single screen
- all screens for a display mode
- group of screens
- action taken
- button →

BUTTONS

MENU	Returns to previous menu from any screen in any mode
ENTER	Indicates acceptance of the current screen and advances to the next one
DOWN, RIGHT Navigation:	Navigation and edit buttons No digits or legends are blinking. On a menu, down advances to the next menu selection, right does nothing. In a grid of screens, down advances to the next row, right advances to the next column. Rows, columns, and menus all navigate circularly.
Editing:	A digit or legend is blinking to indicate that it is eligible for change. When a digit is blinking, down increases the digit value, right moves to the next digit. When a legend is blinking, either button advances to the next choice legend.

Operating Mode Screens (Sheet 2)

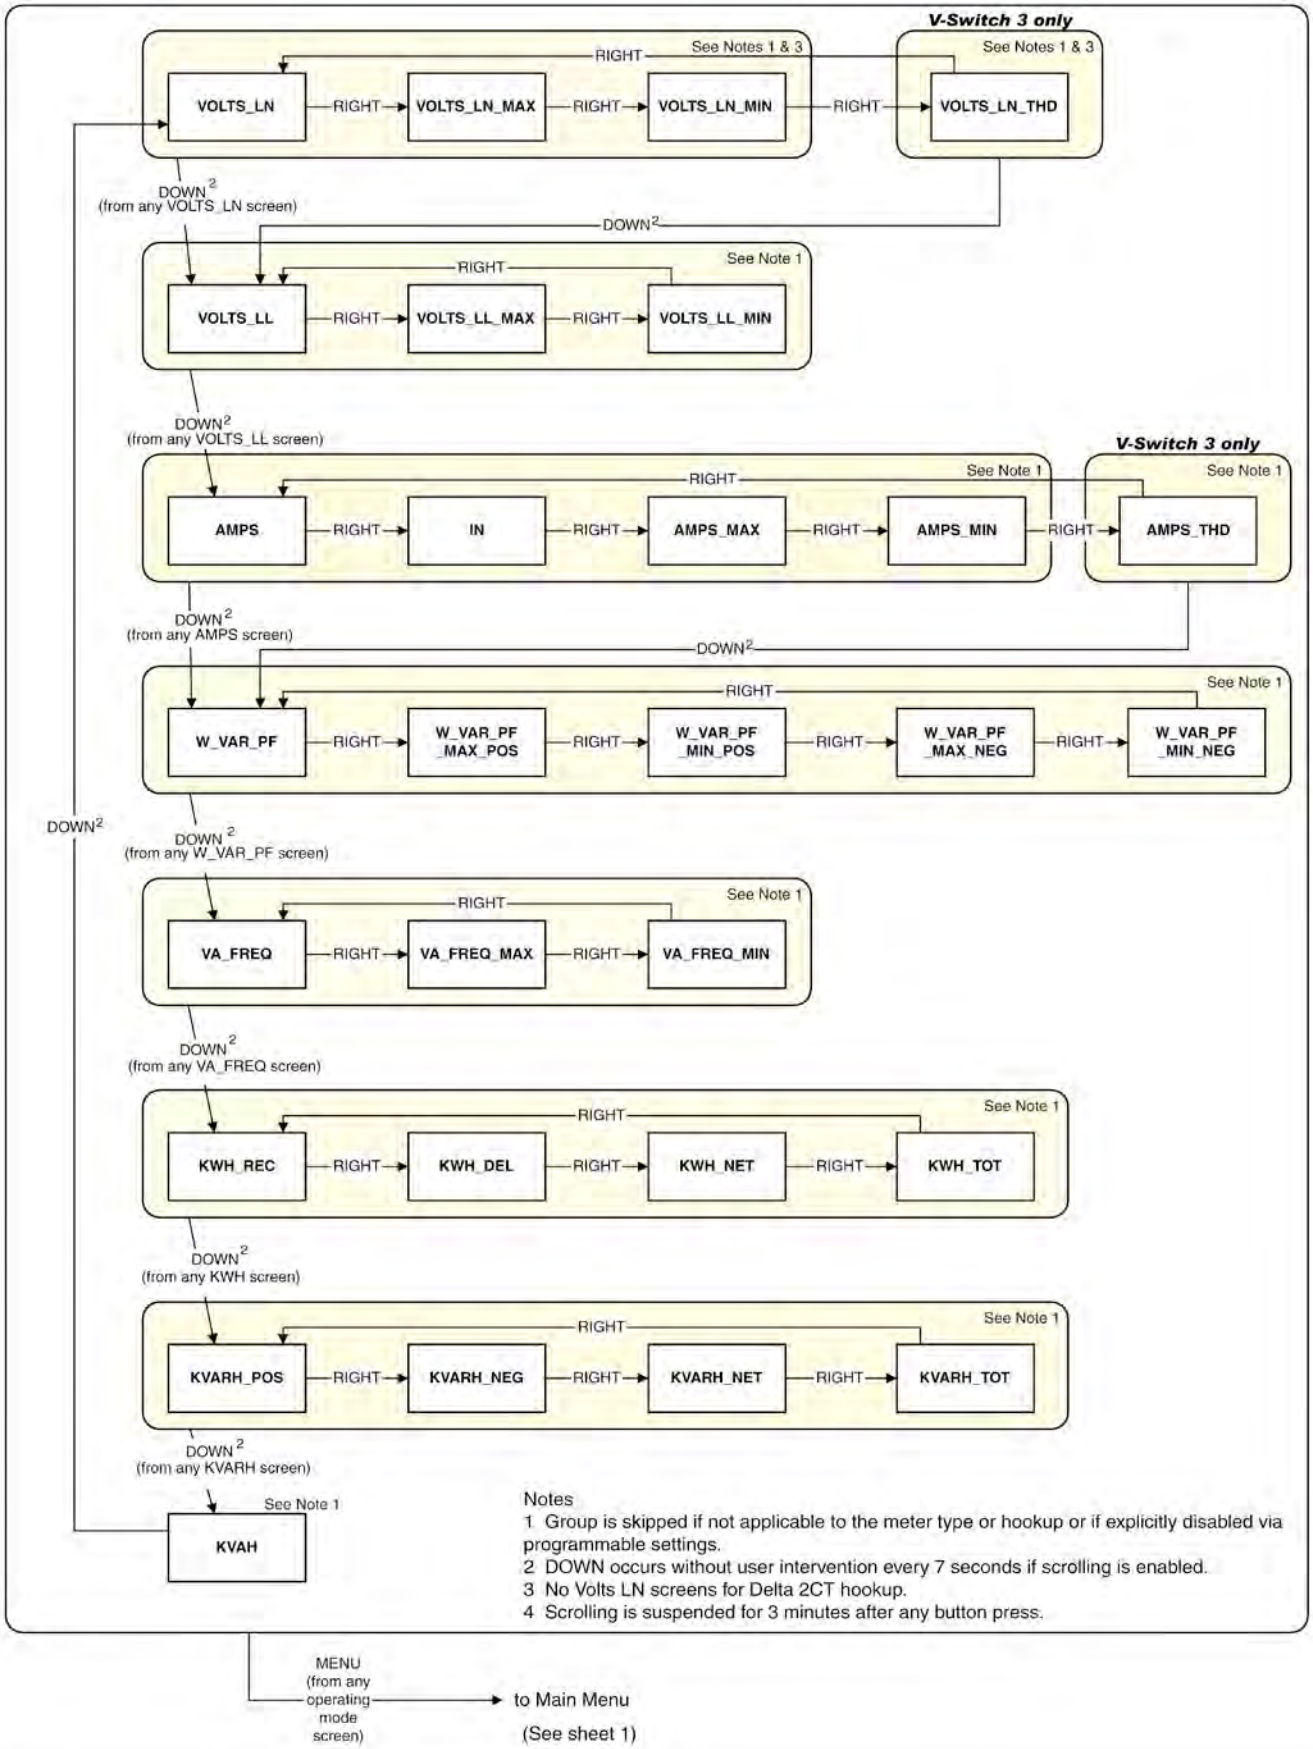

Reset Mode Screens (Sheet 3)

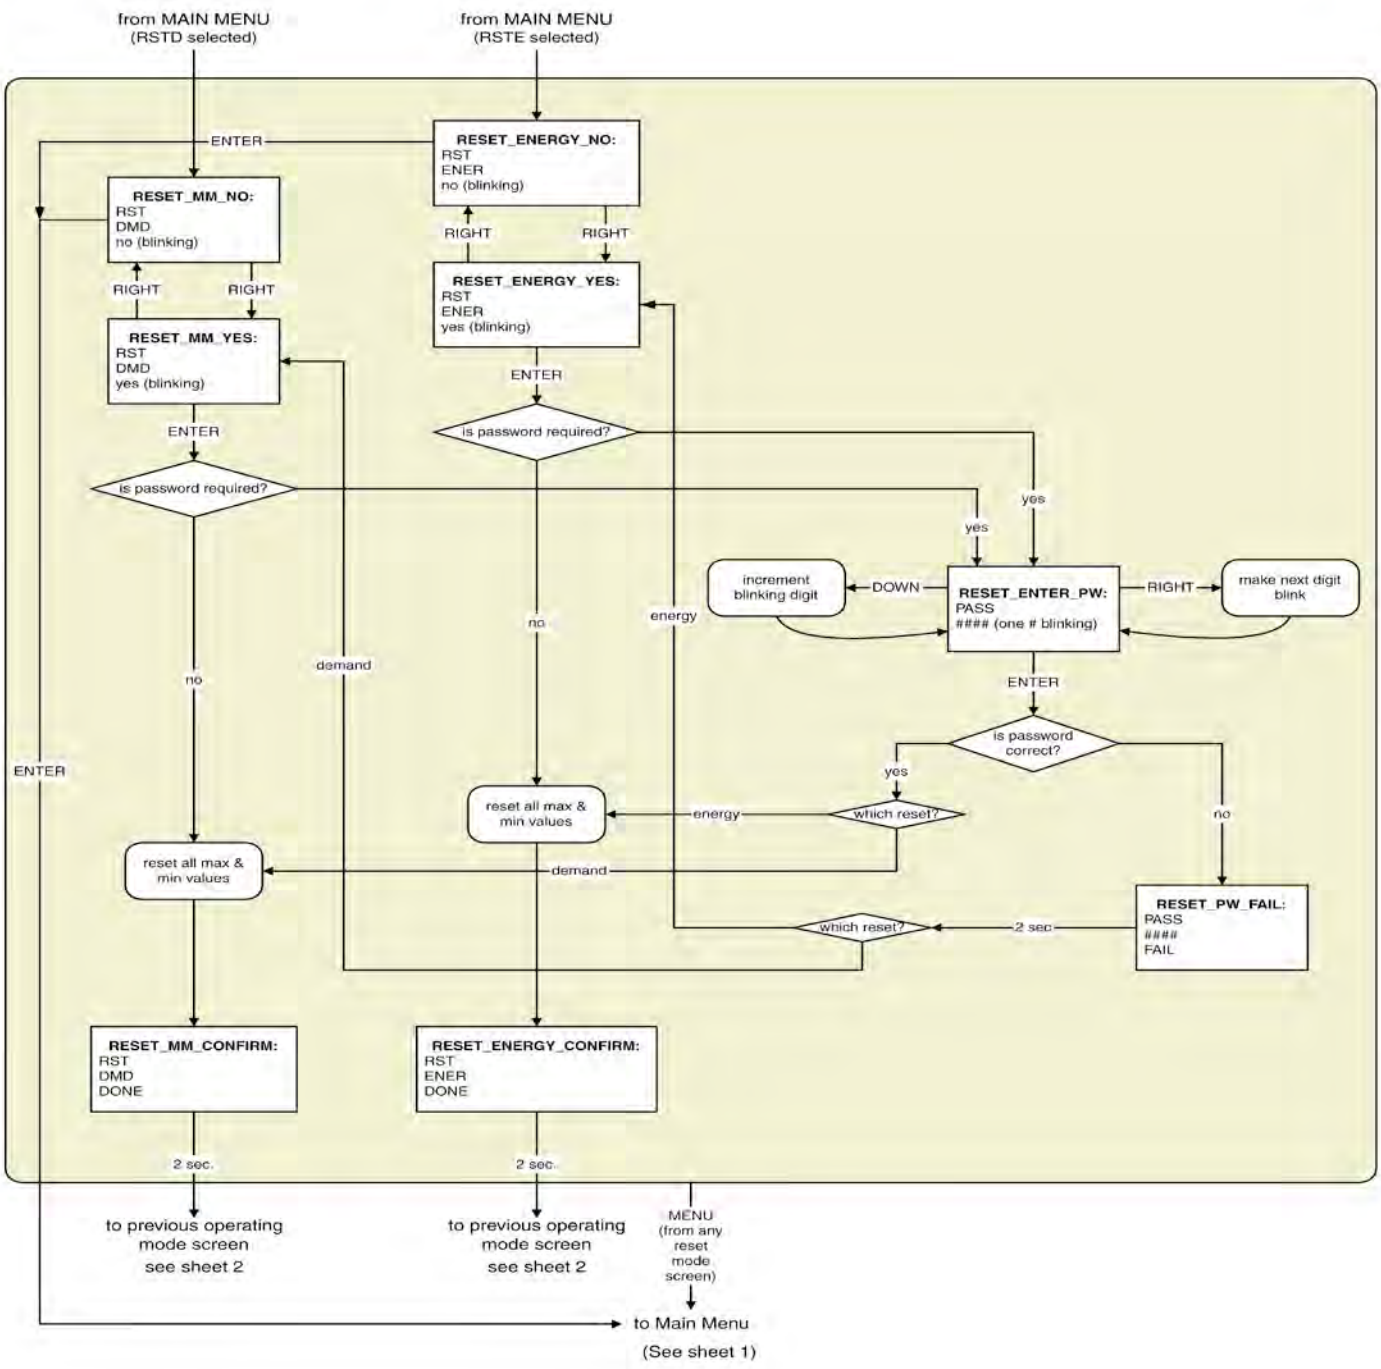

Configuration Mode Screens (Sheet 4)

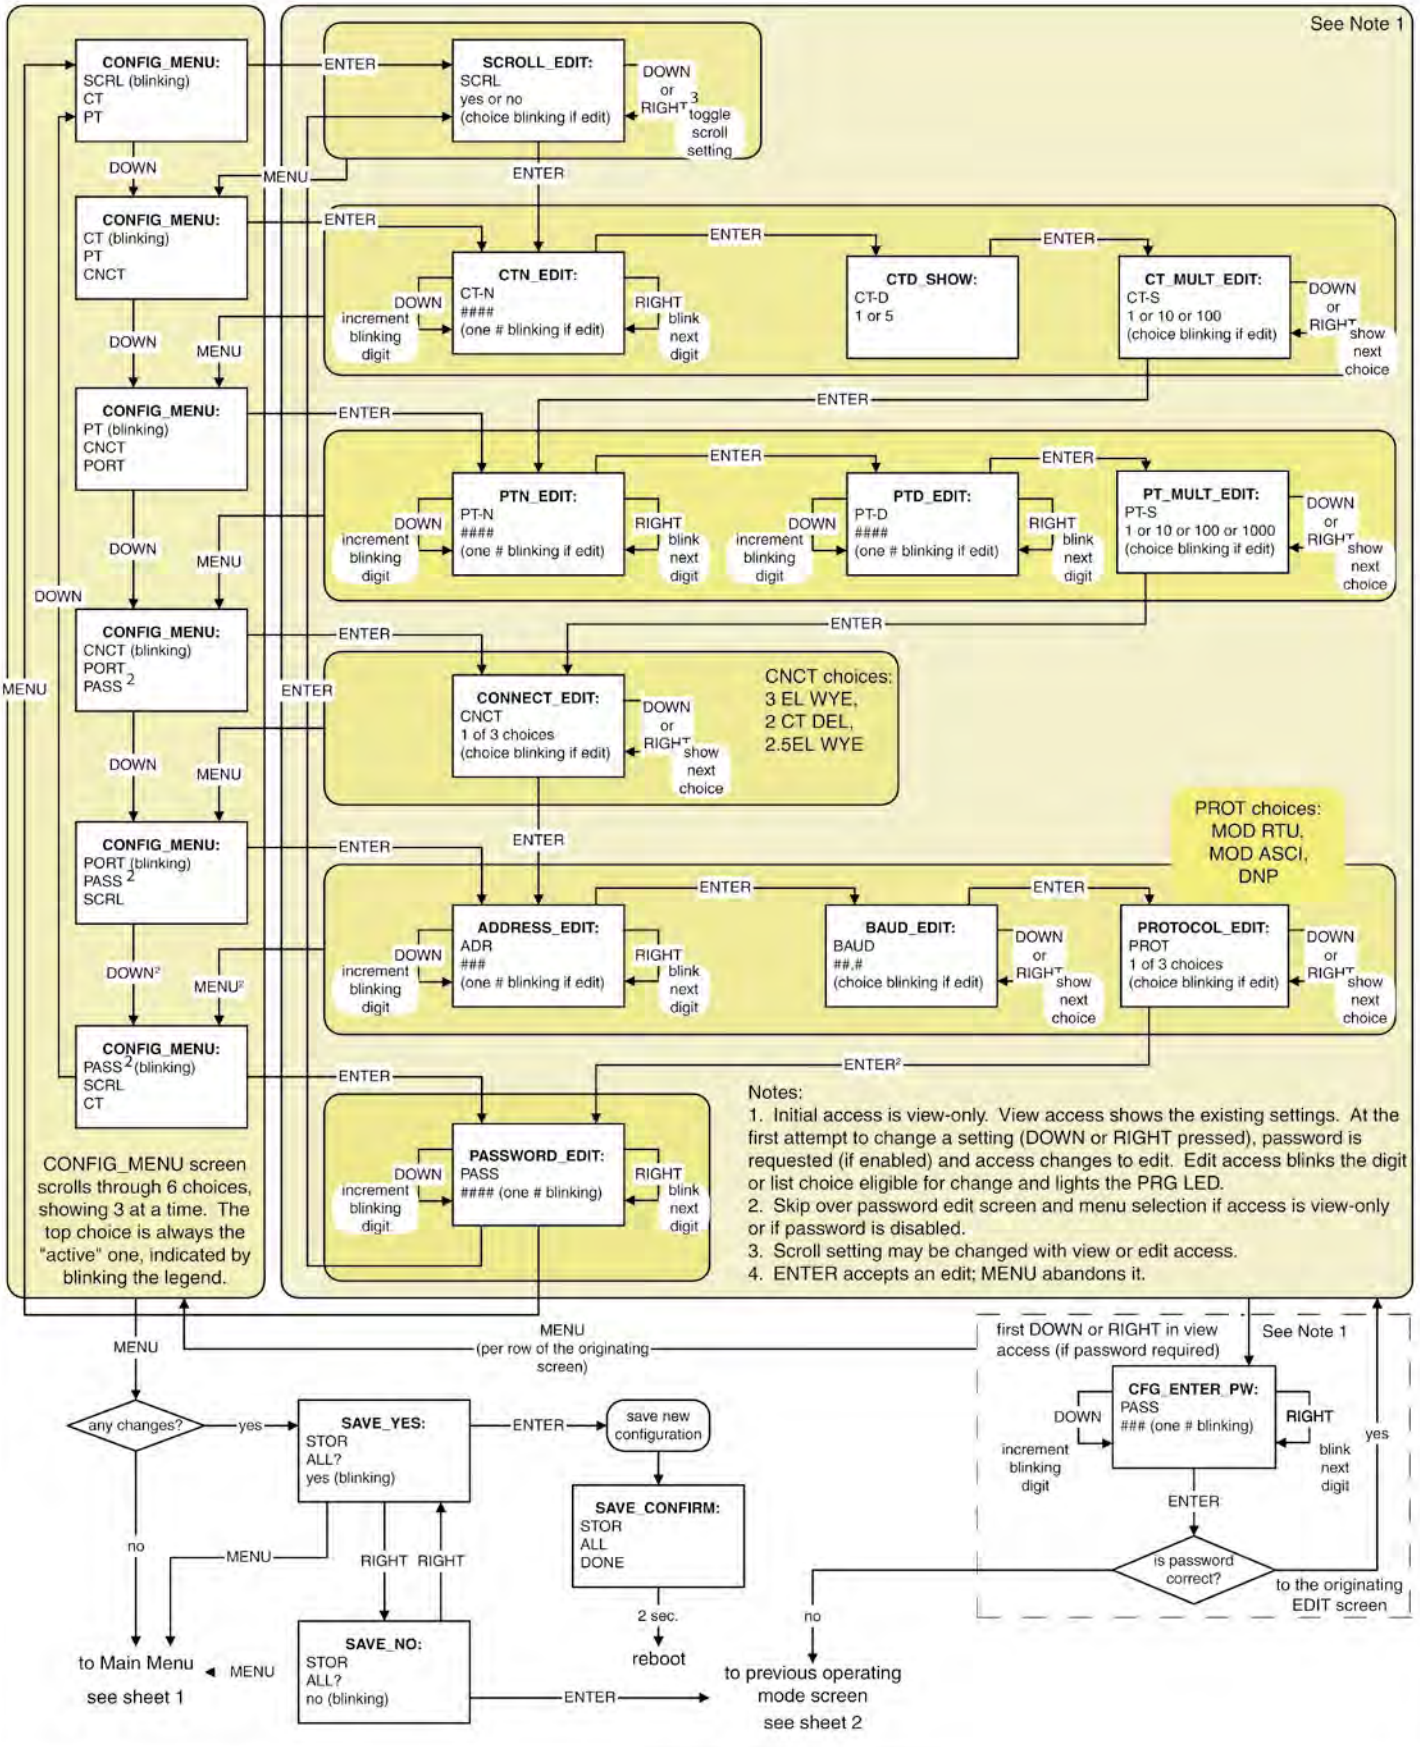

Appendix B
Modbus Mapping and Log Retrieval for the Shark 200® Meter

B.1: Introduction

The Modbus Map for the Shark® 200 Meter gives details and information about the possible readings of the meter and its programming. The Shark® 200 meter can be programmed using the buttons on the face of the meter (Chapter 6), or by using software. For a programming overview, see section 5.2 of this manual. For further details see the *Communicator EXT User's Manual*.

B.2: Modbus Register Map Sections

The Shark® 200 meter's Modbus Register Map includes the following sections:

Fixed Data Section, Registers 1- 47, details the Meter's Fixed Information.

Meter Data Section, Registers 1000 - 12031, details the Meter's Readings, including Primary Readings, Energy Block, Demand Block, Phase Angle Block, Status Block, THD Block, Minimum and Maximum in Regular and Time Stamp Blocks, Option Card Blocks, and Accumulators. Operating Mode readings are described in Section 6.2.6.

Commands Section, Registers 20000 - 26011, details the Meter's Resets Block, Programming Block, Other Commands Block and Encryption Block.

Programmable Settings Section, Registers 30000 - 33575, details all the setups you can program to configure your meter.

Secondary Readings Section, Registers 40001 - 40100, details the Meter's Secondary Readings.

Log Retrieval Section, Registers 49997 - 51095, details Log Retrieval. See Section B.5 for instructions on retrieving logs.

B.3: Data Formats

ASCII:	ASCII characters packed 2 per register in high, low order and without any termination characters.
SINT16/UINT16:	16-bit signed/unsigned integer.
SINT32/UINT32:	32-bit signed/unsigned integer spanning 2 registers. The lower-addressed register is the high order half.
FLOAT:	32-bit IEEE floating point number spanning 2 registers. The lower-addressed register is the high order half (i.e., contains the exponent).

B.4: Floating Point Values

Floating Point Values are represented in the following format:

Register	0								1							
Byte	0								1							
Bit	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
Meaning	s	e	e	e	e	e	e	e	m	m	m	m	m	m	m	m
	sign	exponent							mantissa							

Register	0								1							
Byte	0								1							
Bit	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
Meaning	s	e	e	e	e	e	e	e	m	m	m	m	m	m	m	m
	sign	exponent							mantissa							

The formula to interpret a Floating Point Value is: $-1^{sign} \times 2^{exponent-127} \times 1.mantissa$ = 0x0C4E11DB9

$-1^{sign} \times 2^{137-127} \times 1 \cdot 10000100011110110111001$

$-1 \times 2^{10} \times 1.75871956$

-1800.929

Register	0x0C4E1								0x01DB9							
Byte	0x0C4								0x0E1							
Bit	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
	1	1	0	0	0	1	0	0	1	1	1	0	0	0	0	1
Meaning	s	e	e	e	e	e	e	e	e	m	m	m	m	m	m	m
	sign	exponent							mantissa							
	1	0x089 + 137							0b01100001000111010111001							

Register	0x01DB9							
Byte	0x01D				0x0B9			
Bit	7	6	5	4	3	2	1	0
	0	0	0	1	1	1	0	1
Meaning	m	m	m	m	m	m	m	m
	mantissa							
	0b01100001000111010111001							

Formula Explanation:

C4E11DB9 (hex) 11000100 11100001 00011101 10111001 (binary)

The sign of the mantissa (and therefore the number) is 1, which represents a negative value.

The Exponent is 10001001 (binary) or 137 decimal.
The Exponent is a value in excess 127. So, the Exponent value is 10.

The Mantissa is 10000100011110110111001 binary.
With the implied leading 1, the Mantissa is (1).611DB9 (hex).

The Floating Point Representation is therefore -1.75871956 times 2 to the 10.

Decimal equivalent: -1800.929

NOTES:

• Exponent = the whole number before the decimal point.
• Mantissa = the positive fraction after the decimal point.

B.5: Retrieving Logs Using the Shark® 200 Meter's Modbus Map

This section describes the log interface system of the Shark® 200 meter from a programming point of view. It is intended for Programmers implementing independent drivers for Log Retrieval from the meter. It describes the meaning of the meter's Modbus Registers related to Log Retrieval and Conversion, and details the procedure for retrieving a log's records.

NOTES:

- All references assume the use of Modbus function codes 0x03, 0x06, and 0x10, where each register is a 2 byte MSB (Most Significant Byte) word, except where otherwise noted.
- The caret symbol (^) notation is used to indicate mathematical "power." **For example**, 2^8 means 2^8; which is 2 x 2 x 2 x 2 x 2 x 2 x 2 x 2, which equals 256.

B.5.1: Data Formats

Timestamp: Stores a date from 2000 to 2099. Timestamp has a Minimum resolution of 1 second.

Byte	0	1	2	3	4	5
Value	Year	Month	Day	Hour	Minute	Second
Range	0-99 (+2000)	1-12	1-31	0-23	0-59	0-59
Mask	0x7F	0x0F	0x1F	0x1F	0x3F	0x3F

The high bits of each timestamp byte are used as flags to record meter state information at the time of the timestamp. These bits should be masked out, unless needed.

B.5.2: Shark® 200 Meter Logs

The Shark® 200 meter has 6 logs: System Event, Alarm (Limits), 3 Historical, and I/O Change. Each log is described below.

1) **System Event** (**0**) : The System Event log is used to store events which happen in, and to, the meter. Events include Startup, Reset Commands, Log Retrievals, etc.
The System Event Log Record takes 20 bytes, 14 bytes of which are available when the log is retrieved.

Byte	0	1	2	3	4	5	6	7	8	9	10	11	12	13
Value	timestamp						Group	Event	Mod	Chan	Param1	Param2	Param3	Param4

NOTE: The complete Systems Events table is shown in Section B.5.5, step 1, on page B-19.

2) **Alarm Log** (**1**) : The Alarm Log records the states of the 8 Limits programmed in the meter.
   - Whenever a limit goes out (above or below), a record is stored with the value that caused the limit to go out.
   - Whenever a limit returns within limit, a record is stored with the "most out of limit" value for that limit while it was out of limit.

   The Alarm Log Record uses 16 bytes, 10 bytes of which are available when the log is retrieved.

Byte	0	1	2	3	4	5	6	7	8	9
Value	timestamp						direction	limit#	Value %	

The limit # byte is broken into a type and an ID.

Bit	0	1	2	3	4	5	6	7
Value	type	0	0	0	0	Limit ID		

3) **Historical Log 1 (2)** : The Historical Log records the values of its assigned registers at the programmed interval.

NOTE: See Section B.5.3, Number 1, for details on programming and interpreting the log.

Byte	0	1	2	3	4	5	6	.	.	N
Value	timestamp						values . . .			

4) **Historical Log 2 (3)** : Same as Historical Log 1.

5) **Historical Log 3 (4)** : Same as Historical Log 1.

6) **I/O Change Log (5)** : The I/O Change Log records changes in the input and output of Digital I/O Type Option Cards (Relay and Pulse).

I/O Change Log tables:

Byte	0	1	2	3	4	5	6	7	8	9
Value	Timestamp						Card 1 Changes	Card 1 States	Card 2 Changes	Card 2 States

Card Change Flags:

Bit	7	6	5	4	3	2	1	0
Value	Out 4 Change	Out 3 Change	Out 2 Change	Out 1 Change	In 4 Change	In 3 Change	In 2 Change	In 1 Change

Card Current States:

Bit	7	6	5	4	3	2	1	0
Value	Out 4 State	Out 3 State	Out 2 State	Out 1 State	In 4 State	In 3 State	In 2 State	In 1 State

B.5.3: Block Definitions

This section describes the Modbus Registers involved in retrieving and interpreting a Shark® 200 Meter Log. Other sections refer to certain 'values' contained in this section. See the corresponding value in this section for details.

NOTES:

- **Register** is the Modbus Register Address in 0-based Hexadecimal notation. To convert it to 1-based decimal notation, convert from hex_{16} to $decimal_{10}$ and add 1.
  For example: 0x03E7 = 1000.
- **Size** is the number of Modbus Registers (2 byte) in a block of data.

1) **Historical Log Programmable Settings**:

The Historical Logs are programmed using a list of Modbus Registers that will be copied into the Historical Log record. In other words, Historical Log uses a direct copy of the Modbus Registers to control what is recorded at the time of record capture.

To supplement this, the programmable settings for the Historical Logs contain a list of descriptors, which group registers into items. Each item descriptor lists the data type of the item, and the number of bytes for that item. By combining these two lists, the Historical Log record can be interpreted.

For example: Registers 0x03E7 and 0x03E8 are programmed to be recorded by the historical log. The matching descriptor gives the data type as float, and the size as 4 bytes. These registers program the log to record "Primary Readings Volts A-N."

Historical Log Blocks:

Start Register: 0x7917 (Historical Log 1)
0x79D7 (Historical Log 2)
0x7A97 (Historical Log 3)

Block Size: 192 registers per log (384 bytes)

The Historical Log programmable settings are comprised of 3 blocks, one for each log. Each is identical to the others, so only Historical Log 1 is described here. All register addresses in this section are given as the Historical Log 1 address (0x7917).

Each Historical Log Block is composed of 3 sections: The header, the list of registers to log, and the list of item descriptors.

i. **Header:**

Registers: 0x7917 – 0x7918
Size: 2 registers

Byte	0	1	2	3
Value	# Registers	# Sectors		Interval

- **# Registers**: The number of registers to log in the record. The size of the record in memory is [12 + (# Registers x 2)]. The size during normal log retrieval is [6 + (# Registers x 2)]. If this value is 0, the log is disabled. Valid values are {0-117}.

- **# Sectors**: The number of Flash Sectors allocated to this log. Each sector is 64kb, minus a sector header of 20 bytes. 15 sectors are available for allocation between Historical Logs 1, 2, and 3. The sum of all Historical Logs may be less than 15. If this value is 0, the log is disabled. Valid values are {0-15}.

- **Interval**: The interval at which the Historical Log's Records are captured. This value is an enumeration:

  0x01 1 minute
  0x02 3 minute
  0x04 5 minute
  0x08 10 minute
  0x10 15 minute
  0x20 30 minute
  0x40 60 minute
  0x80 End of Interval (EOI) Pulse: Setting the interval to EOI causes a record to be logged whenever an EOI pulse event is generated. This is most commonly used in conjunction with the Digital I/O Option Cards.
  NOTE: The interval between records will not be even (fixed), and thus should not be used with programs that expect a fixed interval.

ii. **Register List**:

Registers:	0x7919 – 0x798D
Size:	1 register per list item, 117 list items

The Register List controls what Modbus Registers are recorded in each record of the Historical Log. Since many items, such as Voltage, Energy, etc., take up more than 1 register, multiple registers need to be listed to record those items.
For example: Registers 0x03E7 and 0x03E8 are programmed to be recorded by the historical log. These registers program the log to record "Primary Readings Volts A-N."

- Each unused register item should be set to 0x0000 or 0xFFFF to indicate that it should be ignored.
- The actual size of the record, and the number of items in the register list which are used, is determined by the # registers in the header.
- Each register item is the Modbus Address in the range of 0x0000 to 0xFFFF.

iii. **Item Descriptor List**:

Registers:	0x798E – 0x79C8
Size:	1 byte per item, 117 bytes (59 registers)

While the Register List describes what to log, the Item Descriptor List describes how to interpret that information. Each descriptor describes a group of register items, and what they mean.

Each descriptor is composed of 2 parts:

- **Type**: The data type of this descriptor, such as signed integer, IEEE floating point, etc. This is the high nibble of the descriptor byte, with a value in the range of 0-14. If this value is 0xFF, the descriptor should be ignored.

0	ASCII: An ASCII string, or byte array
1	Bitmap: A collection of bit flags
2	Signed Integer: A 2's Complement integer
3	Float: An IEEE floating point
4	Energy: Special Signed Integer, where the value is adjusted by the energy settings in the meter's Programmable Settings.
5	Unsigned Integer
6	Signed Integer 0.1 scale: Special Signed Integer, where the value is divided by 10 to give a 0.1 scale.
7-14	Unused
15	Disabled: used as end list marker.

- **Size**: The size in bytes of the item described. This number is used to determine the pairing of descriptors with register items.
  For example: If the first descriptor is 4 bytes, and the second descriptor is 2 bytes, then the first 2 register items belong to the 1st descriptor, and the 3rd register item belongs to the 2nd descriptor.
  NOTE: As can be seen from the example, above, there **is not** a 1-to-1 relation between the register list and the descriptor list. A single descriptor may refer to multiple register items.

Register Items		Descriptors
0x03C7 0x03C8	}	Float, 4 byte
0x1234		Signed Int, 2 byte

NOTE: The sum of all descriptor sizes must equal the number of bytes in the data portion of the Historical Log record.

2) **Log Status Block**:
The Log Status Block describes the current status of the log in question. There is one header block for each of the logs. Each log's header has the following base address:

Log	Base Address
Alarms:	0xC737
System:	0xC747
Historical 1:	0xC757
Historical 2:	0xC767
Historical 3:	0xC777
I/O Change:	0xC787

Bytes			Value	Type	Range	# Bytes
0	-	3	Max Records	UINT32	0 to 4,294,967,294	4
4	-	7	Number of Records Used	UINT32	1 to 4,294,967,294	4
8	-	9	Record Size in Bytes	UINT16	4 to 250	2
10	-	11	Log Availability	UINT16		2
12	-	17	Timestamp, First Record	TSTAMP	1Jan2000 - 31Dec2099	6
18	-	23	Timestamp, Last Record	TSTAMP	1Jan2000 - 31Dec2099	6
24	-	31	Reserved			8

- **Max Records**: The maximum number of records the log can hold given the record size, and sector allocation. The data type is an unsigned integer from 0 – 2^32.

- **# Records Used**: The number of records stored in the log. This number will equal the Max Records when the log has filled. This value will be set to 1 when the log is reset. The data type is an unsigned integer from 1 – 2^32.

  NOTE: The first record in every log before it has rolled over is a "dummy" record, filled with all 0xFF's. When the log is filled and rolls over, this record is overwritten.

- **Record Size**: The number of bytes in this record, including the timestamp. The data type is an unsigned integer in the range of 14 – 242.

- **Log Availability**: A flag indicating if the log is available for retrieval, or if it is in use by another port.

0	Log Available for retrieval
1	In use by COM1 (IrDA)
2	In use by COM2 (RS485)
3	In use by COM3 (Option Card 1)
4	In use by COM4 (Option Card 2)

0xFFFF	Log Not Available - the log cannot be retrieved. This indicates that the log is disabled.

NOTE: To query the port by which you are currently connected, **use the Port ID register:**

Register:	0x1193
Size:	1 register
Description:	A value from 1-4, which enumerates the port that the requestor is currently connected on.

NOTES:

- When Log Retrieval is engaged, the Log Availability value will be set to the port that engaged the log. The Log Availability value will stay the same until either the log has been disengaged, or 5 minutes have passed with no activity. It will then reset to 0 (available).
- Each log can only be retrieved by one port at a time.
- Only one log at a time can be retrieved.

- **First Timestamp**: Timestamp of the oldest record.

- **Last Timestamp**: Timestamp of the newest record.

3) **Log Retrieval Block**:
The Log Retrieval Block is the main interface for retrieving logs. It is comprised of 2 parts: the header and the window. The **header** is used to program the particular data the meter presents when a log window is requested. The **window** is a sliding block of data that can be used to access any record in the specified log.

- **Session Com Port**: The Shark® 200 meter's Com Port which is currently retrieving logs. Only one Com Port can retrieve logs at any one time.

Registers:	0xC34E – 0xC34E
Size:	1 register

0	No Session Active
1	COM1 (IrDA)
2	COM2 (RS-485)
3	COM3 (Communications Capable Option Card 1)
4	COM4 (Communications Capable Option Card 2)

To get the current Com Port, see the **NOTE** on querying the port, at the top of this page.

i. The **Log Retrieval Header** is used to program the log to be retrieved, the record(s) of that log to be accessed, and other settings concerning the log retrieval.
Registers: 0xC34F – 0xC350
Size: 2 registers

Bytes			Value	Type	Format	Description	# Bytes
0	-	1	Log Number, Enable, Scope	UINT16	nnnnnnnn essssssss	nnnnnnnn - log to retrieve e - retrieval session enable sssssss - retrieval mode	2
2	-	3	Records per Window, Number of Repeats	UINT16	wwwwwwww nnnnnnnn	wwwwwwww - records per window nnnnnnnn - repeat count	2

- **Log Number**: The log to be retrieved. Write this value to set which log is being retrieved.
  - 0 System Events
  - 1 Alarms
  - 2 Historical Log 1
  - 3 Historical Log 2
  - 4 Historical Log 3
  - 5 I/O Change Log

- **Enable**: This value sets if a log retrieval session is engaged (locked for retrieval) or disengaged (unlocked, read for another to engage). Write this value with 1(enable) to begin log retrieval. Write this value with 0(disable) to end log retrieval.
  - 0 Disable
  - 1 Enable

- **Scope**: Sets the amount of data to be retrieved for each record. The default should be 0 (normal).
  - 0 Normal
  - 1 Timestamp Only
  - 2 Image

  - **Normal [0]**: The default record. Contains a 6-byte timestamp at the beginning, then N data bytes for the record data.

  - **Timestamp [1]**: The record only contains the 6-byte timestamp. This is most useful to determine a range of available data for non-interval based logs, such as Alarms and System Events.

  - **Image [2]**: The full record, as it is stored in memory. Contains a 2-byte checksum, 4-byte sequence number, 6-byte timestamp, and then N data bytes for the record data.

- **Records Per Window**: The number of records that fit evenly into a window. This value is settable, as less than a full window may be used. This number tells the retrieving program how many records to expect to find in the window. (RecPerWindow x RecSize) = #bytes used in the window.
  This value should be ((123 x 2) \ recSize), rounded down.

For example, with a record size of 30, the RecPerWindow = ((123 x 2) \ 30) = 8.2 ~= 8

- **Number of Repeats**: Specifies the number of repeats to use for the Modbus Function Code 0x23 (35). Since the meter must pre-build the response to each log window request, this value must be set once, and each request must use the same repeat count. Upon reading the last register in the specified window, the record index will increment by the number of repeats, if auto-increment is enabled. **Section B.5.4.2 has additional information on Function Code 0x23**.

0	Disables auto-increment
1	No Repeat count, each request will only get 1 window.
2-8	2-8 windows returned for each Function Code 0x23 request.

Bytes	Value	Type	Format	Description	# Bytes
0 - 3	Offset of First Record in Window	UINT32	ssssssss nnnnnnnn nnnnnnnn nnnnnnnn	ssssssss - window status nn…nn - 24-bit record index number.	4
4 - 249	Log Retrieve Window	UINT16			246

ii. The **Log Retrieval Window** block is used to program the data you want to retrieve from the log. It also provides the interface used to retrieve that data.
Registers: 0xC351 - 0xC3CD
Size: 125 registers

- **Window Status**: The status of the current window. Since the time to prepare a window may exceed an acceptable modbus delay (1 second), this acts as a state flag, signifying when the window is ready for retrieval. When this value indicates that the window is not ready, the data in the window should be ignored. Window Status is **Read-only**, any writes are ignored.

0	Window is Ready
0xFF	Window is Not Ready

- **Record Number**: The record number of the first record in the data window. Setting this value controls which records will be available in the data window.
  - When the log is engaged, the first (oldest) record is "latched." This means that record number 0 will always point to the oldest record at the time of latching, until the log is disengaged (unlocked).
  - To retrieve the entire log using auto-increment, set this value to 0, and retrieve the window repeatedly, until all records have been retrieved.

  NOTES:
  - When **auto-increment** is **enabled**, this value will automatically increment so that the window will "page" through the records, increasing by **RecordsPerWindow** each time that the last register in the window is read.
  - When **auto-increment** is **not enabled**, this value must be written-to manually, for each window to be retrieved.

- **Log Retrieval Data Window**: The actual data of the records, arranged according to the above settings.

B.5.4: Log Retrieval

Log Retrieval is accomplished in 3 basic steps:

1. Engage the log.
2. Retrieve each of the records.
3. Disengage the log.

B.5.4.1: Auto-Increment

- In EIG's traditional Modbus retrieval system, you write the index of the block of data to retrieve, then read that data from a buffer (window). To improve the speed of retrieval, the index can be automatically incremented each time the buffer is read.
- In the **Shark® 200 meter**, when the last register in the data window is read, the record index is incremented by the Records per Window.

B.5.4.2: Modbus Function Code 0x23

QUERY

Field Name	Example (Hex)
Slave Address	01
Function	23
Starting Address Hi	C3
Starting Address Lo	51
# Points Hi	00
# Points Lo	7D
Repeat Count	04

Function Code 0x23 is a user defined Modbus function code, which has a format similar to Function Code 0x03, except for the inclusion of a "repeat count." The repeat count (RC) is used to indicate that the same N registers should be read RC number of times. (See the **Number of Repeats** bullet on the previous page.)

NOTES:

- By itself this feature would not provide any advantage, as the same data will be returned RC times. However, when used with auto-incrementing, this function condenses up to 8 requests into 1 request, which decreases communication time, as fewer transactions are being made.
- In the **Shark® 200 meter** repeat counts are limited to 8 times for Modbus RTU, and 4 times for Modbus ASCII.

The **response** for Function Code 0x23 is the same as for Function Code 0x03, with the data blocks in sequence.

IMPORTANT: Before using function code 0x23, always check to see if the current connection supports it. Some relay devices do not support user defined function codes; if that is the case, the message will stall. Other devices don't support 8 repeat counts.

B.5.4.3: Log Retrieval Procedure

The following procedure documents how to retrieve a single log from the oldest record to the newest record, using the "normal" record type (see Scope). **All logs are retrieved using the same method**. See Section B.5.4.4 for a Log Retrieval example.

NOTES:

- This example uses auto-increment.
- In this example, Function Code 0x23 is **not** used
- You will find referenced topics in **Section B.5.3. Block Definitions**.
- Modbus Register numbers are listed in brackets.

1. **Engage the Log**:
    a) **Read the Log Status Block**.
        i. Read the contents of the specific logs' status block [0xC737+, 16 reg] (see Log Headers).
        ii. Store the # of Records Used, the Record Size, and the Log Availability.
        iii. If the Log Availability is not 0, stop Log Retrieval; this log is not available at this time. If Log Availability is 0, proceed to step 1b (Engage the log).

        This step is done to ensure that the log is available for retrieval, as well as retrieving information for later use.

    b) **Engage the log.**
        Write log to engage to Log Number, 1 to Enable, and the desired mode to Scope (default 0 (Normal)) [0xC34F, 1 reg]. This is best done as a single-register write.
        This step will latch the first (oldest) record to index 0, and lock the log so that only this port can retrieve the log, until it is disengaged.

    c) **Verify the log is engaged**.
        Read the contents of the specific logs' status block [0xC737+, 16 reg] again to see if the log is engaged for the current port (see Log Availability).
        If the Log is not engaged for the current port, repeat step 1b (Engage the log).

    d) **Write the retrieval information**.
        i. Compute the number of records per window, as follows:
            RecordsPerWindow = (246 \ RecordSize)
            - If using 0x23, set the repeat count to 2-8. Otherwise, set it to 1.
            - Since we are starting from the beginning for retrieval, the first record index is 0.
        ii. Write the Records per window, the Number of repeats (1), and Record Index (0) [0xC350, 3 reg].

        This step tells the Shark® 200 meter what data to return in the window.

2. **Retrieve the records:**
    a) **Read the record index and window.**
        Read the record index, and the data window [0xC351, 125 reg].
        - If the meter Returns a Slave Busy Exception, repeat the request.
        - If the Window Status is 0xFF, repeat the request.
        - If the Window Status is 0, go to step 2b (Verify record index).

        NOTES:
        - We read the index and window in 1 request to minimize communication time, and to ensure that the record index matches the data in the data window returned.

- Space in the window after the last specified record (RecordSize x RecordPerWindow) is padded with 0xFF, and can be safely discarded.

b) **Verify that the record index incremented by Records Per Window**.
The record index of the retrieved window is the index of the first record in the window. This value will increase by Records Per Window each time the window is read, so it should be 0, N, N x 2, N x 3 . . . for each window retrieved.
- If the record index matches the expected record index, go to step 2c (Compute next expected record index).
- If the record index does not match the expected record index, then go to step 1d (Write the retrieval information), where the record index will be the same as the expected record index. This will tell the Shark® 200 meter to repeat the records you were expecting.

c) **Compute next Expected Record Index**.
- If there are no remaining records after the current record window, go to step 3 (Disengage the log).
- Compute the next expected record index by adding Records Per Window, to the current expected record index.
  If this value is greater than the number of records, resize the window so it only contains the remaining records and go to step 1d (Write the retrieval information), where the Records Per Window will be the same as the remaining records.

3. Disengage the log:
Write the Log Number (of log being disengaged) to the Log Index and 0 to the Enable bit [0xC34F, 1 reg].

B.5.4.4: Log Retrieval Example

The following example illustrates a log retrieval session. The example makes the following assumptions:
- Log Retrieved is Historical Log 1 (Log Index 2).
- Auto-Incrementing is used.
- Function Code 0x23 is not used (Repeat Count of 1).
- The Log contains Volts-AN, Volts-BN, Volts-CN (12 bytes).
- 100 Records are available (0-99).
- COM Port 2 (RS-485) is being used (see Log Availability).
- There are no Errors.
- Retrieval is starting at Record Index 0 (oldest record).
- Protocol used is Modbus RTU. The checksum is left off for simplicity.
- The Shark® 200 meter is at device address 1.
- No new records are recorded to the log during the log retrieval process.

1) **Read [0xC757, 16 reg], Historical Log 1 Header Block**.

Send:	0103 C757 0010
Command:	
-Register Address:	0xC757
-# Registers:	16

Receive:	010320 00000100 00000064 0012 0000 060717101511 060718101511 0000000000000000
Data:	
-Max Records:	0x100 = 256 records maximum.
-Num Records:	0x64 = 100 records currently logged.
-Record Size:	0x12 = 18 bytes per record.
-Log Availability:	0x00 = 0, not in use, available for retrieval.
-First Timestamp:	0x060717101511 = July 23, 2006, 16:21:17
-Last Timestamp:	0x060717101511 = July 24, 2006, 16:21:17

NOTE: This indicates that Historical Log 1 is available for retrieval.

2) **Write 0x0280 -> [0xC34F, 1 reg], Log Enable**.

Send:	0106 C34F 0280
Command:	
-Register Address:	0xC34F
-# Registers:	1 (Write Single Register Command)
Data:	
-Log Number:	2 (Historical Log 1)
-Enable:	1 (Engage log)
-Scope:	0 (Normal Mode)

Receive:	0106C34F0280 (echo)

NOTE: This engages the log for use on this COM Port, and latches the oldest record as record index 0.

3) **Read [0xC757, 16 reg], Availability is 0**.

Send:	0103 C757 0010
Command:	
-Register Address:	0xC757
-# Registers:	16

Receive:	010320 00000100 00000064 0012 0002 060717101511 060718101511 0000000000000000
Data:	
-Max Records:	0x100 = 256 records maximum.
-Num Records:	0x64 = 100 records currently logged.
-Record Size:	0x12 = 18 bytes per record.
-Log Availability:	0x02 = 2, In use by COM2, RS485 (the current port)
-First Timestamp:	0x060717101511 = July 23, 2006, 16:21:17
-Last Timestamp:	0x060717101511 = July 24, 2006, 16:21:17

NOTE: This indicates that the log has been engaged properly in step 2. Proceed to retrieve the log.

4) **Compute #RecPerWin as (246\18)=13. Write 0x0D01 0000 0000 -> [0xC350, 3 reg] Write Retrieval Info. Set Current Index as 0.**

Send:	0110 C350 0003 06 0D01 00 000000
Command:	
-Register Address:	0xC350
-# Registers:	3, 6 bytes
Data:	
-Records per Window:	13. Since the window is 246 bytes, and the record is 18 bytes, 246\18 = 13.66, which means that 13 records evenly fit into a single window. This is 234 bytes, which means later on, we only need to read 234 bytes (117 registers) of the window to retrieve the records.
-# of Repeats:	1. We are using auto-increment (so not 0), but not function code 0x23.
-Window Status:	0 (ignore)
-Record Index:	0, start at the first record.

Receive:	0110C3500003 (command ok)

NOTES:

- This sets up the window for retrieval; now we can start retrieving the records.
- As noted above, we compute the records per window as 246\18 = 13.66, which is rounded to 13 records per window. This allows the minimum number of requests to be made to the meter, which increases retrieval speed.

5) **Read [0xC351, 125 reg], first 2 reg is status/index, last 123 reg is window data. Status OK**.

Send:	0103 C351 007D
Command:	
-Register Address:	0xC351
-# Registers:	0x7D, 125 registers

Receive:	0103FA 00000000 060717101511FFFFFFFFFFFFFFFFFFFFFF 06071710160042FAAACF42FAAD1842FAA9A8 . . .
Data:	
-Window Status:	0x00 = the window is ready.
-Index:	0x00 = 0, The window starts with the 0'th record, which is the oldest record.
-Record 0:	The next 18 bytes is the 0'th record (filler).
-Timestamp:	0x060717101511, = July 23, 2006, 16:21:17
-Data:	This record is the "filler" record. It is used by the meter so that there is never 0 records. It should be ignored. It can be identified by the data being all 0xFF. NOTE: Once a log has rolled over, the 0'th record will be a valid record, and the filler record will disappear.
-Record 1:	The next 18 bytes is the 1'st record.
-Timestamp:	0x060717101600 July 23, 2006, 16:22:00
-Data:	
-Volts AN:	0x42FAAACF, float = 125.33~
-Volts BN:	0x42FAAD18, float = 125.33~
-Volts CN:	0x42FAA9A8, float = 125.33~
. . . 13 records	

NOTES:

- This retrieves the actual window. Repeat this command as many times as necessary to retrieve all of the records when auto-increment is enabled.
- Note the filler record. When a log is reset (cleared) in the meter, the meter always adds a first "filler" record, so that there is always at least 1 record in the log. This "filler" record can be identified by the data being all 0xFF, and it being index 0. If a record has all 0xFF for data, the timestamp is valid, and the index is NOT 0, then the record is legitimate.
- When the "filler" record is logged, its timestamp may not be "on the interval." The next record taken will be on the next "proper interval," adjusted to the hour. **For example**, if the interval is 1 minute, the first "real" record will be taken on the next minute (no seconds). If the interval is 15 minutes, the next record will be taken at :15, :30, :45, or :00 - whichever of those values is next in sequence.

6) **Compare the index with Current Index**.

NOTES:

- The Current Index is 0 at this point, and the record index retrieved in step 5 is 0: thus we go to step 8.
- If the Current Index and the record index do not match, go to step 7. The data that was received in the window may be invalid, and should be discarded.

7) Write the Current Index to [0xC351, 2 reg].

Send:	0110 C351 0002 04 00 00000D
Command:	
-Register Address:	0xC351
-# Registers:	2, 4 bytes
Data:	
-Window Status:	0 (ignore)
-Record Index:	0x0D = 13, start at the 14th record.

Receive:	0110C3510002 (command ok)

NOTES:

- This step manually sets the record index, and is primarily used when an out-of-order record index is returned on a read (step 6).
- The example assumes that the second window retrieval failed somehow, and we need to recover by requesting the records starting at index 13 again.

8) For each record in the retrieved window, copy and save the data for later interpretation.

9) Increment Current Index by RecordsPerWindow.

NOTES:

- This is the step that determines how much more of the log we need to retrieve.
- On the first N passes, Records Per Window should be 13 (as computed in step 4), and the current index should be a multiple of that (0, 13, 26, . . .). This amount will decrease when we reach the end (see step 10).
- If the current index is greater than or equal to the number of records (in this case 100), then all records have been retrieved; go to step 12. Otherwise, go to step 10 to check if we are nearing the end of the records.

10) If number records – current index < RecordsPerWindow, decrease to match.

NOTES:

- Here we bounds-check the current index, so we don't exceed the records available.
- If the number of remaining records (#records – current index) is less than the Records per Window, then the next window is the last, and contains less than a full window of records. Make records per window equal to remaining records (#records-current index). In this example, this occurs when current index is 91 (the 8'th window). There are now 9 records available (100-91), so make Records per Window equal 9.

11) Repeat step 5 through 10.

NOTES:

- Go back to step 5, where a couple of values have changed.

Pass	CurIndex	FirstRecIndex	RecPerWindow
0	0	0	13
1	13	13	13
2	26	26	13
3	39	39	13
4	52	52	13
5	65	65	13
6	78	78	13
7	91	91	9
8	100	------	-------

- At pass 8, since Current Index is equal to the number of records (100), log retrieval should stop; go to step 12 (see step 9 Notes).

12) No more records available, clean up.

13) Write 0x0000 -> [0xC34F, 1 reg], disengage the log.

Send:	0106 C34F 0000
Command:	
-Register Address:	0xC34F
-# Registers:	1 (Write Single Register Command)
Data:	
-Log Number:	0 (ignore)
-Enable:	0 (Disengage log)
-Scope:	0 (ignore)

Receive:	0106C34F0000 (echo)

NOTES:

- This disengages the log, allowing it to be retrieved by other COM ports.
- The log will automatically disengage if no log retrieval action is taken for 5 minutes.

B.5.5: Log Record Interpretation

The records of each log are composed of a 6 byte timestamp, and N data. The content of the data portion depends on the log.

1. **System Event Record**:

Byte	0	1	2	3	4	5	6	7	8	9	10	11	12	13
Value	timestamp						Group	Event	Mod	Chan	Param1	Param2	Param3	Param4

Size: 14 bytes (20 bytes image).
Data: The System Event data is 8 bytes; each byte is an enumerated value.

- **Group**: Group of the event.
- **Event**: Event within a group.
- **Modifier**: Additional information about the event, such as number of sectors or log number.
- **Channel**: The Port of the Shark® 200 meter that caused the event.

0	Firmware
1	COM 1 (IrDA)
2	COM 2 (RS485)
3	COM 3 (Option Card 1)
4	COM 4 (Option Card 2)
7	User (Face Plate)

- **Param** 1-4: These are defined for each event (see table on the next page).

NOTE: The System Log Record is 20 bytes, consisting of the Record Header (12 bytes) and Payload (8 bytes). The Timestamp (6 bytes) is in the header. Typically, software will retrieve only the timestamp and payload, yielding a 14-byte record. The table on the next page shows all defined payloads.

Group (Event group)	Event (Event within group)	Mod (Event modifier)	Channel (1-4 for COMs, 7 for USER, 0 for FW)	Parm1	Parm2	Parm3	Parm4	Comments
0								Startup
	0	0	0	FW version				Meter Run Firmware Startup
	1	slot#	0	class ID	card status	0xFF	0xFF	Option Card Using Default Settings
1								Log Activity
	1	log#	1-4	0xFF	0xFF	0xFF	0xFF	Reset
	2	log#	1-4	0xFF	0xFF	0xFF	0xFF	Log Retrieval Begin
	3	log#	0-4	0xFF	0xFF	0xFF	0xFF	Log Retrieval End
2								Clock Activity
	1	0	1-4	0xFF	0xFF	0xFF	0xFF	Clock Changed
	2	0	0	0xFF	0xFF	0xFF	0xFF	Daylight Time On
	3	0	0	0xFF	0xFF	0xFF	0xFF	Daylight Time Off
3								System Resets
	1	0	0-4, 7	0xFF	0xFF	0xFF	0xFF	Max & Min Reset
	2	0	0-4, 7	0xFF	0xFF	0xFF	0xFF	Energy Reset
	3	slot#	0-4	1 (inputs) or 2 (outputs)	0xFF	0xFF	0xFF	Accumulators Reset
4								Settings Activity
	1	0	1-4, 7	0xFF	0xFF	0xFF	0xFF	Password Changed
	2	0	1-4	0xFF	0xFF	0xFF	0xFF	V-switch Changed
	3	0	1-4, 7	0xFF	0xFF	0xFF	0xFF	Programmable Settings Changed
	4	0	1-4, 7	0xFF	0xFF	0xFF	0xFF	Measurement Stopped
5								Boot Activity
	1	0	1-4	FW version				Exit to Boot
6								Error Reporting & Recovery
	4	log #	0	0xFF	0xFF	0xFF	0xFF	Log Babbling Detected
	5	log #	0	# records discarded		time in seconds		Babbling Log Periodic Summary
	6	log #	0	# records discarded		time in seconds		Log Babbling End Detected
	7	sector#	0	error count		stimulus	0xFF	Flash Sector Error
	8	0	0	0xFF	0xFF	0xFF	0xFF	Flash Error Counters Reset
	9	0	0	0xFF	0xFF	0xFF	0xFF	Flash Job Queue Overflow
0x88								
	1	sector#	0	log #	0xFF	0xFF	0xFF	acquire sector
	2	sector#	0	log #	0xFF	0xFF	0xFF	release sector
	3	sector#	0	erase count				erase sector
	4	log#	0	0xFF	0xFF	0xFF	0xFF	write log start record

- **log# values**: 0 = system log, 1 = alarms log, 2-4 = historical logs 1-3, 5 = I/O change log
- **sector# values**: 0-63
- **slot# values**: 1-2

NOTES:

- Stimulus for a flash sector error indicates what the flash was doing when the error occurred: **1** = acquire sector, **2** = startup, **3** = empty sector, **4** = release sector, **5** = write data
- Flash error counters are reset to zero in the unlikely event that both copies in EEPROM are corrupted.

- A "babbling log" is one that is saving records faster than the meter can handle long term. Onset of babbling occurs when a log fills a flash sector in less than an hour. For as long as babbling persists, a summary of records discarded is logged every 60 minutes. Normal logging resumes when there have been no new append attempts for 30 seconds.
- Logging of diagnostic records may be suppressed via a bit in programmable settings.

2. **Alarm Record**:

Byte	0	1	2	3	4	5	6	7	8	9
Value	timestamp						direction	limit#	Value %	

Size: 10 bytes (16 bytes image)
Data: The Alarm record data is 4 bytes, and specifies which limit the event occurred on, and the direction of the event (going out of limit, or coming back into limit).

- **Direction**: The direction of the alarm event: whether this record indicates the limit going out, or coming back into limit.
  1 Going out of limit
  2 Coming back into limit

Bit	0	1	2	3	4	5	6	7
Value	type					Limit ID		

- **Limit Type**: Each limit (1-8) has both an above condition and a below condition. Limit Type indicates which of those the record represents.
  0 High Limit
  1 Low Limit

- **Limit ID**: The specific limit this record represents. A value in the range 0-7, Limit ID represents Limits 1-8. The specific details for this limit are stored in the programmable settings.

- **Value**: Depends on the Direction:
  - If the record is "Going out of limit," this is the value of the limit when the "Out" condition occurred
  - If the record is "Coming back into limit," this is the "worst" value of the limit during the period of being "out": for High (above) limits, this is the highest value during the "out" period; for Low (below) limits, this is the lowest value during the "out" period.

Byte	0	1	2	3	4	5	6	7	8	9
Value	Identifier		Above Setpoint		Above Hyst.		Below Setpoint		Below Hyst.	

■ **Interpretation of Alarm Data**:
To interpret the data from the alarm records, you need the limit data from the Programmable Settings [0x754B, 40 registers].

There are 8 limits, each with an Above Setpoint, and a Below Setpoint. Each setpoint also has a threshold (hysteresis), which is the value at which the limit returns "into" limit after the setpoint has been exceeded. This prevents "babbling" limits, which can be caused by the limit value fluttering over the setpoint, causing it to go in and out of limit continuously.

- **Identifier**: The first modbus register of the value that is being watched by this limit. While any modbus register is valid, only values that can have a Full Scale will be used by the Shark® 200 meter.
- **Above Setpoint**: The percent of the Full Scale above which the value for this limit will be considered "out."
    - Valid in the range of –200.0% to +200.0%
    - Stored as an integer with 0.1 resolution. (Multiply % by 10 to get the integer, divide integer by 10 to get %. **For example**, 105.2% = 1052.)
- **Above Hysteresis**: The percent of the Full Scale below which the limit will return "into" limit, if it is out. If this value is above the Above Setpoint, this Above limit will be disabled.
    - Valid in the range of –200.0% to +200.0%.
    - Stored as an integer with 0.1 resolution. (Multiply % by 10 to get the integer, divide integer by 10 to get %. **For example,** 104.1% = 1041.)
- **Below Setpoint**: The percent of the Full Scale below which the value for this limit will be considered "out."
    - Valid in the range of –200.0% to +200.0%.
    - Stored as an integer with 0.1 resolution. (Multiply % by 10 to get the integer, divide integer by 10 to get %. **For example,** 93.5% = 935.)
- **Below Hysteresis**: The percent of the Full Scale above which the limit will return "into" limit, if it is out. If this value is below the Below Setpoint, this Below limit will be disabled.
    - Valid in the range of –200.0% to +200.0%.
    - Stored as an integer with 0.1 resolution. (Multiply % by 10 to get the integer, divide integer by 10 to get %. **For example,** 94.9% = 949.)

NOTES:

- The **Full Scale** is the "nominal" value for each of the different types of readings. **To compute the Full Scale, use the following formulas**:

Current	[CT Numerator] x [CT Multiplier]
Voltage	[PT Numerator] x [PT Multiplier]
Power 3-Phase (WYE)	[CT Numerator] x [CT Multiplier] x [PT Numerator] x [PT Multiplier] x 3
Power 3-Phase (Delta)	[CT Numerator] x [CT Multiplier] x [PT Numerator] x [PT Multiplier] x 3 x sqrt(3)
Power Single Phase (WYE)	[CT Numerator] x [CT Multiplier] x [PT Numerator] x [PT Multiplier]
Power Single Phase (Delta)	[CT Numerator] x [CT Multiplier] x [PT Numerator] x [PT Multiplier] x sqrt(3)
Frequency (Calibrated at 60 Hz)	60
Frequency (Calibrated at 50 Hz)	50
Power Factor	1.0
THD, Harmonics	100.0%
Angles	180°

- To interpret a limit alarm fully, you need both the start and end record (for duration).
- There are a few **special conditions related to limits**:
    - When the meter powers up, it detects limits from scratch. This means that multiple "out of limit" records can be in sequence with no "into limit" records. Cross- reference the System Events for Power Up events.

- This also means that if a limit is “out,” and it goes back in during the power off condition, no “into limit” record will be recorded.
- The “worst” value of the “into limit” record follows the above restrictions; it only represents the values since power up. Any values before the power up condition are lost.

3. **Historical Log Record**:

Byte	0	1	2	3	4	5	6	.	.	N
Value	timestamp						values . . .			

Size: 6+2 x N bytes (12+2 x N bytes), where N is the number of registers stored.
Data: The Historical Log Record data is 2 x N bytes, which contains snapshots of the values of the associated registers at the time the record was taken. Since the meter uses specific registers to log, with no knowledge of the data it contains, the Programmable Settings need to be used to interpret the data in the record. See Historical Logs Programmable Settings for details.

4. **I/O Change Record**:

I/O Change Log tables:

Byte	0	1	2	3	4	5	6	7	8	9
Value	Timestamp						Card 1 Changes	Card 1 States	Card 2 Changes	Card 2 States

Card Change Flags:

Bit	7	6	5	4	3	2	1	0
Value	Out 4 Change	Out 3 Change	Out 2 Change	Out 1 Change	In 4 Change	In 3 Change	In 2 Change	In 1 Change

Card Current States:

Bit	7	6	5	4	3	2	1	0
Value	Out 4 State	Out 3 State	Out 2 State	Out 1 State	In 4 State	In 3 State	In 2 State	In 1 State

Size: 10 bytes (16 bytes)
Data: The states of the relay and digital inputs at the time of capture for both Option cards 1 and 2. If the option card does not support I/O Change Records (no card or not a Digital Option Card), the value will be 0.

NOTES:
- An I/O Change log record will be taken for each Relay and Digital Input that has been configured in the Programmable Settings to record when its state changes.
- When any one configured Relay or Digital Input changes, the values of all Relays and Digital Inputs are recorded, even if they are not so configured.

B.5.6: Examples

a) Log Retrieval Section:

```
send:  01 03 75 40 00 08 - Meter designation
recv:  01 03 10 4D 65 74 72 65 44 65 73 69 6E 67 5F 20 20 20 20 00 00

send:  :01 03 C7 57 00 10 - Historical Log 1 status block
recv:  :01 03 20 00 00 05 1E 00 00 05 1E 00 2C 00 00 06 08 17 51 08
        00 06 08 18 4E 39 00 00 00 00 00 00 00 00 00 00 00

send:  :01 03 79 17 00 40 - Historical Log 1 PS settings
recv:  :01 03 80 13 01 00 01 23 75 23 76 23 77 1F 3F 1F 40 1F 41 1F
        42 1F 43 1F 44 06 0B 06 0C 06 0D 06 0E 17 75 17 76 17 77 18
        67 18 68 18 69 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00

send:  :01 03 79 57 00 40 - ""
recv:  :01 03 80 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
        00 00 00 00 00 00 00 00 00 00 00 00 00 62 62 62 34 34 34 44
        44 62 62 62 62 62 62 00 00 00 00 00 00

send:  :01 03 75 35 00 01 - Energy PS settings
recv:  :01 03 02 83 31 00 00

send:  :01 03 11 93 00 01 - Connected Port ID
recv:  :01 03 02 00 02 00 00

send:  :01 03 C7 57 00 10 - Historical Log 1 status block
recv:  :01 03 20 00 00 05 1E 00 00 05 1E 00 2C 00 00 06 08 17 51 08
        00 06 08 18 4E 39 00 00 00 00 00 00 00 00 00 00 00

send:  :01 03 C3 4F 00 01 - Log Retrieval header
recv:  :01 03 02 FF FF 00 00

send:  :01 10 C3 4F 00 04 08 02 80 05 01 00 00 00 00 - Engage the log
recv:  :01 10 C3 4F 00 04

send:  :01 03 C7 57 00 10 - Historical Log 1 status block
recv:  :01 03 20 00 00 05 1E 00 00 05 1E 00 2C 00 02 06 08 17 51 08
        00 06 08 18 4E 39 00 00 00 00 00 00 00 00 00 00 00

send:  :01 10 C3 51 00 02 04 00 00 00 00 - Set the retrieval index
recv:  :01 10 C3 51 00 02
```

(Continued on next page)

send: :01 03 C3 51 00 40 - **Read first half of window**
recv: :01 03 80 00 00 00 00 06 08 17 51 08 00 00 19 00 2F 27 0F 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 03
E8 00 01 00 05 00 00 00 00 00 00 06 08 17 51 09 00 00 19 00
2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 03 E8 00 01 00 04 00 00 00 00 00 00 06 08 17 51 0A
00 00 19 00 2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 03 E8 00 00 00 00

send: :01 03 C3 91 00 30 - **Read second half of window**
recv: :01 03 60 00 05 00 00 00 00 00 00 06 08 17 51 0B 00 00 19 00
2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 03 E8 00 01 00 04 00 00 00 00 00 00 06 08 17 51 0C
00 00 19 00 2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 03 E8 00 01 00 04 00 00 00 00 00 00 00
00

send: :01 03 C3 51 00 40 - **Read first half of last window**
recv: :01 03 80 00 00 05 19 06 08 18 4E 35 00 00 19 00 2F 27 0F 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 03
E8 00 01 00 04 00 00 00 00 00 00 06 08 18 4E 36 00 00 19 00
2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 03 E8 00 01 00 04 00 00 00 00 00 00 06 08 18 4E 37
00 00 19 00 2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 03 E8 00 00 00 00

send: :01 03 C3 91 00 30 - **Read second half of last window**
recv: :01 03 60 00 05 00 00 00 00 00 00 06 08 18 4E 38 00 00 19 00
2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 03 E8 00 01 00 04 00 00 00 00 00 00 06 08 18 4E 39
00 00 19 00 2F 27 0F 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 03 E8 00 00 00 05 00 00 00 00 00 00 00
00

send: :01 06 C3 4F 00 00 - **Disengage the log**
recv: :01 06 C3 4F 00 00

b) **Sample Historical Log 1 Record**:

Historical Log 1 Record and Programmable Settings

```
13|01|00 01|23 75|23 76|23 77|1F 3F 1F 40|1F 41
1F 42|1F 43 1F 44|06 0B 06 0C|06 0D 06 0E|17 75|
17 76|17 77|18 67|18 68|18 69|00 00 . . . . . .
62 62 62 34 34 34 44 44 62 62 62 62 62 62 . . .
```

These are the Item Values:	These are the Type and Size:	These are the Descriptions:
13		- # registers
01		- # sectors
01		- interval
23 75	6 2	- (SINT 2 byte) Volts A THD Maximum
23 76	6 2	- (SINT 2 byte) Volts B THD Maximum
23 77	6 2	- (SINT 2 byte) Volts C THD Maximum
1F 3F 1F 40	3 4	- (Float 4 byte) Volts A Minimum
1F 41 1F 42	3 4	- (Float 4 byte) Volts B Minimum
1F 43 1F 44	3 4	- (Float 4 byte) Volts C Minimum
06 0B 06 0C	4 4	- (Energy 4 byte) VARhr Negative Phase A
06 0D 06 0E	4 4	- (Energy 4 byte) VARhr Negative Phase B
17 75	6 2	- (SINT 2 byte) Volts A 1st Harmonic Magnitude
17 76	6 2	- (SINT 2 byte) Volts A 2nd Harmonic Magnitude
17 77	6 2	- (SINT 2 byte) Volts A 3rd Harmonic Magnitude
18 67	6 2	- (SINT 2 byte) Ib 3rd Harmonic Magnitude
18 68	6 2	- (SINT 2 byte) Ib 4th Harmonic Magnitude
18 69	6 2	- (SINT 2 byte) Ib 5th Harmonic Magnitude

Sample Record

```
06 08 17 51 08 00|00 19|00 2F|27 0F|00 00 00 00|00
00 00 00|00 00 00 00|00 00 00 00|00 00 00 00|03 E8|
00 01|00 05|00 00|00 00|00 00 . . .

06 08 17 51 08 00         - August 23, 2006 17:08:00
00 19                     - 2.5%
00 2F                     - 4.7%
27 0F                     - 999.9% (indicates the value isn't valid)
00 00 00 00               - 0
00 00 00 00               - 0
00 00 00 00               - 0
00 00 00 00               - 0
00 00 00 00               - 0
03 E8                     - 100.0% (Fundamental)
00 01                     - 0.1%
00 05                     - 0.5%
00 00                     - 0.0%
00 00                     - 0.0%
00 00                     - 0.0%
```

B.6: Important Note Concerning the Shark ® 200 Meter's Modbus Map

In depicting Modbus Registers (Addresses), the Shark® 200 meter's Modbus map uses Holding Registers only.

B.6.1: Hex Representation

The representation shown in the table below is used by developers of Modbus drivers and libraries, SEL 2020/2030 programmers and Firmware Developers. The Shark ® meter's Modbus map also uses this representation.

Hex	Description
0008 – 000F	Meter Serial Number

B.6.2: Decimal Representation

The Shark ® meter's Modbus map defines Holding Registers as (4X) registers. Many popular SCADA and HMI packages and their Modbus drivers have user interfaces that require users to enter these Registers starting at 40001. So instead of entering two separate values, one for register type and one for the actual register, they have been combined into one number.

The Shark ® 200 meter's Modbus map uses a shorthand version to depict the decimal fields -i.e., not all of the digits required for entry into the SCADA package UI are shown.

For Example:

You need to display the meter's serial number in your SCADA application. The Shark ® 200 meter's Modbus map shows the following information for meter serial number:

Decimal	Description
9 – 16	Meter Serial Number

In order to retrieve the meter's serial number, enter 4000**9** into the SCADA UI as the starting register, and 8 as the number of registers.

- In order to work with SCADA and Driver packages that use the 40001 to 49999 method for requesting holding registers, take 40000 and add the value of the register (Address) in the decimal column of the Modbus Map. Then enter the number (e.g., 4009) into the UI as the starting register.
- For SCADA and Driver packages that use the 400001 to 465536 method for requesting holding registers take 400000 and add the value of the register (Address) in the decimal column of the Modbus Map. Then enter the number (e.g., 400009) into the UI as the starting register. The drivers for these packages strip off the leading four and subtract 1 from the remaining value. This final value is used as the starting register or register to be included when building the actual modbus message.

B.7: Modbus Register Map (MM-1 to MM-32)

The Shark® 200 meter's Modbus Register Map begins on the following page.

Modbus Address											
Hex			Decimal - see Section B-6			Description (Note 1)	Format	Range (Note 6)	Units or Resolution	Comments	# Reg
Fixed Data Section											
Identification Block										read-only	
0000	-	0007	1	-	8	Meter Name	ASCII	16 char	none		8
0008	-	000F	9	-	16	Meter Serial Number	ASCII	16 char	none		8
0010	-	0010	17	-	17	Meter Type	UINT16	bit-mapped	`-------t vvvvvvvv`	t = transducer model (1=yes, 0=no), vvv = V-switch: V1 = standard 200, V2 = V1 plus logging, V3 = V2 plus THD, V4 = V3 plus relays, V5 = V4 plus waveform capture up to 64 samples/cycle and 3 Meg, V6 = V4 plus waveform capture up to 512 samples/cycle and 4 Meg	1
0011	-	0012	18	-	19	Firmware Version	ASCII	4 char	none		2
0013	-	0013	20	-	20	Map Version	UINT16	0 to 65535	none		1
0014	-	0014	21	-	21	Meter Configuration	UINT16	bit-mapped	`-----ccc --ffffff`	ccc = CT denominator (1 or 5), ffffff = calibration frequency (50 or 60)	1
0015	-	0015	22	-	22	ASIC Version	UINT16	0-65535	none		1
0016	-	0017	23	-	24	Boot Firmware Version	ASCII	4 char	none		2
0018	-	0018	25	-	25	Option Slot 1 Usage	UINT16	bit-mapped	same as register 10000 (0x270F)		1
0019	-	0019	26	-	26	Option Slot 2 Usage	UINT16	bit-mapped	same as register 11000 (0x2AF7)		1
001A	-	001D	27	-	30	Meter Type Name	ASCII	8 char	none		4
001E	-	0026	31	-	39	Reserved				Reserved	9
0027	-	002E	40	-	47	Reserved				Reserved	8
										Block Size:	47
Meter Data Section (Note 2)											
Primary Readings Block										read-only	
03E7	-	03E8	1000	-	1001	Volts A-N	FLOAT	0 to 9999 M	volts		2
03E9	-	03EA	1002	-	1003	Volts B-N	FLOAT	0 to 9999 M	volts		2
03EB	-	03EC	1004	-	1005	Volts C-N	FLOAT	0 to 9999 M	volts		2
03ED	-	03EE	1006	-	1007	Volts A-B	FLOAT	0 to 9999 M	volts		2
03EF	-	03F0	1008	-	1009	Volts B-C	FLOAT	0 to 9999 M	volts		2
03F1	-	03F2	1010	-	1011	Volts C-A	FLOAT	0 to 9999 M	volts		2
03F3	-	03F4	1012	-	1013	Amps A	FLOAT	0 to 9999 M	amps		2
03F5	-	03F6	1014	-	1015	Amps B	FLOAT	0 to 9999 M	amps		2
03F7	-	03F8	1016	-	1017	Amps C	FLOAT	0 to 9999 M	amps		2
03F9	-	03FA	1018	-	1019	Watts, 3-Ph total	FLOAT	-9999 M to +9999 M	watts		2
03FB	-	03FC	1020	-	1021	VARs, 3-Ph total	FLOAT	-9999 M to +9999 M	VARs		2
03FD	-	03FE	1022	-	1023	VAs, 3-Ph total	FLOAT	-9999 M to +9999 M	VAs		2
03FF	-	0400	1024	-	1025	Power Factor, 3-Ph total	FLOAT	-1.00 to +1.00	none		2
0401	-	0402	1026	-	1027	Frequency	FLOAT	0 to 65.00	Hz		2

0403	-	0404	1028	-	1029	Neutral Current	FLOAT	0 to 9999 M	amps		2
0405	-	0406	1030	-	1031	Watts, Phase A	FLOAT	-9999 M to +9999 M	watts	Per phase power and PF have values only for WYE hookup and will be zero for all other hookups.	2
0407	-	0408	1032	-	1033	Watts, Phase B	FLOAT	-9999 M to +9999 M	watts		2
0409	-	040A	1034	-	1035	Watts, Phase C	FLOAT	-9999 M to +9999 M	watts		2
040B	-	040C	1036	-	1037	VARs, Phase A	FLOAT	-9999 M to +9999 M	VARs		2
040D	-	040E	1038	-	1039	VARs, Phase B	FLOAT	-9999 M to +9999 M	VARs		2
040F	-	0410	1040	-	1041	VARs, Phase C	FLOAT	-9999 M to +9999 M	VARs		2
0411	-	0412	1042	-	1043	VAs, Phase A	FLOAT	-9999 M to +9999 M	VAs		2
0413	-	0414	1044	-	1045	VAs, Phase B	FLOAT	-9999 M to +9999 M	VAs		2
0415	-	0416	1046	-	1047	VAs, Phase C	FLOAT	-9999 M to +9999 M	VAs		2
0417	-	0418	1048	-	1049	Power Factor, Phase A	FLOAT	-1.00 to +1.00	none		2
0419	-	041A	1050	-	1051	Power Factor, Phase B	FLOAT	-1.00 to +1.00	none		2
041B	-	041C	1052	-	1053	Power Factor, Phase C	FLOAT	-1.00 to +1.00	none		2
041D	-	0425	1054	-	1062	Reserved				Reserved	9
										Block Size:	63
Primary Energy Block										**read-only**	
05DB	-	05DC	1500	-	1501	W-hours, Received	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* Wh received & delivered always have opposite signs	2
05DD	-	05DE	1502	-	1503	W-hours, Delivered	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* Wh received is positive for "view as load", delivered is positive for "view as generator"	2
05DF	-	05E0	1504	-	1505	W-hours, Net	SINT32	-99999999 to 99999999	Wh per energy format	* 5 to 8 digits	2
05E1	-	05E2	1506	-	1507	W-hours, Total	SINT32	0 to 99999999	Wh per energy format		2
05E3	-	05E4	1508	-	1509	VAR-hours, Positive	SINT32	0 to 99999999	VARh per energy format	* decimal point implied, per energy format	2
05E5	-	05E6	1510	-	1511	VAR-hours, Negative	SINT32	0 to -99999999	VARh per energy format		2
05E7	-	05E8	1512	-	1513	VAR-hours, Net	SINT32	-99999999 to 99999999	VARh per energy format	* resolution of digit before decimal point = units, kilo, or mega, per energy format	2
05E9	-	05EA	1514	-	1515	VAR-hours, Total	SINT32	0 to 99999999	VARh per energy format	* see note 10	2
05EB	-	05EC	1516	-	1517	VA-hours, Total	SINT32	0 to 99999999	VAh per energy format		2
05ED	-	05EE	1518	-	1519	W-hours, Received, Phase A	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
05EF	-	05F0	1520	-	1521	W-hours, Received, Phase B	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
05F1	-	05F2	1522	-	1523	W-hours, Received, Phase C	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
05F3	-	05F4	1524	-	1525	W-hours, Delivered, Phase A	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
05F5	-	05F6	1526	-	1527	W-hours, Delivered, Phase B	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
05F7	-	05F8	1528	-	1529	W-hours, Delivered, Phase C	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
05F9	-	05FA	1530	-	1531	W-hours, Net, Phase A	SINT32	-99999999 to 99999999	Wh per energy format		2
05FB	-	05FC	1532	-	1533	W-hours, Net, Phase B	SINT32	-99999999 to 99999999	Wh per energy format		2
05FD	-	05FE	1534	-	1535	W-hours, Net, Phase C	SINT32	-99999999 to 99999999	Wh per energy format		2
05FF	-	0600	1536	-	1537	W-hours, Total, Phase A	SINT32	0 to 99999999	Wh per energy format		2
0601	-	0602	1538	-	1539	W-hours, Total, Phase B	SINT32	0 to 99999999	Wh per energy format		2
0603	-	0604	1540	-	1541	W-hours, Total, Phase C	SINT32	0 to 99999999	Wh per energy format		2
0605	-	0606	1542	-	1543	VAR-hours, Positive, Phase A	SINT32	0 to 99999999	VARh per energy format		2
0607	-	0608	1544	-	1545	VAR-hours, Positive, Phase B	SINT32	0 to 99999999	VARh per energy format		2
0609	-	060A	1546	-	1547	VAR-hours, Positive, Phase C	SINT32	0 to 99999999	VARh per energy format		2
060B	-	060C	1548	-	1549	VAR-hours, Negative, Phase A	SINT32	0 to -99999999	VARh per energy format		2
060D	-	060E	1550	-	1551	VAR-hours, Negative, Phase B	SINT32	0 to -99999999	VARh per energy format		2

060F	-	0610	1552	-	1553	VAR-hours, Negative, Phase C	SINT32	0 to -99999999	VARh per energy format		2
0611	-	0612	1554	-	1555	VAR-hours, Net, Phase A	SINT32	-99999999 to 99999999	VARh per energy format		2
0613	-	0614	1556	-	1557	VAR-hours, Net, Phase B	SINT32	-99999999 to 99999999	VARh per energy format		2
0615	-	0616	1558	-	1559	VAR-hours, Net, Phase C	SINT32	-99999999 to 99999999	VARh per energy format		2
0617	-	0618	1560	-	1561	VAR-hours, Total, Phase A	SINT32	0 to 99999999	VARh per energy format		2
0619	-	061A	1562	-	1563	VAR-hours, Total, Phase B	SINT32	0 to 99999999	VARh per energy format		2
061B	-	061C	1564	-	1565	VAR-hours, Total, Phase C	SINT32	0 to 99999999	VARh per energy format		2
061D	-	061E	1566	-	1567	VA-hours, Phase A	SINT32	0 to 99999999	VAh per energy format		2
061F	-	0620	1568	-	1569	VA-hours, Phase B	SINT32	0 to 99999999	VAh per energy format		2
0621	-	0622	1570	-	1571	VA-hours, Phase C	SINT32	0 to 99999999	VAh per energy format		2
										Block Size:	72
Primary Demand Block										read-only	
07CF	-	07D0	2000	-	2001	Amps A, Average	FLOAT	0 to 9999 M	amps		2
07D1	-	07D2	2002	-	2003	Amps B, Average	FLOAT	0 to 9999 M	amps		2
07D3	-	07D4	2004	-	2005	Amps C, Average	FLOAT	0 to 9999 M	amps		2
07D5	-	07D6	2006	-	2007	Positive Watts, 3-Ph, Average	FLOAT	-9999 M to +9999 M	watts		2
07D7	-	07D8	2008	-	2009	Positive VARs, 3-Ph, Average	FLOAT	-9999 M to +9999 M	VARs		2
07D9	-	07DA	2010	-	2011	Negative Watts, 3-Ph, Average	FLOAT	-9999 M to +9999 M	watts		2
07DB	-	07DC	2012	-	2013	Negative VARs, 3-Ph, Average	FLOAT	-9999 M to +9999 M	VARs		2
07DD	-	07DE	2014	-	2015	VAs, 3-Ph, Average	FLOAT	-9999 M to +9999 M	VAs		2
07DF	-	07E0	2016	-	2017	Positive PF, 3-Ph, Average	FLOAT	-1.00 to +1.00	none		2
07E1	-	07E2	2018	-	2019	Negative PF, 3-PF, Average	FLOAT	-1.00 to +1.00	none		2
07E3	-	07E4	2020	-	2021	Neutral Current, Average	FLOAT	0 to 9999 M	amps		2
07E5	-	07E6	2022	-	2023	Positive Watts, Phase A, Average	FLOAT	-9999 M to +9999 M	watts		2
07E7	-	07E8	2024	-	2025	Positive Watts, Phase B, Average	FLOAT	-9999 M to +9999 M	watts		2
07E9	-	07EA	2026	-	2027	Positive Watts, Phase C, Average	FLOAT	-9999 M to +9999 M	watts		2
07EB	-	07EC	2028	-	2029	Positive VARs, Phase A, Average	FLOAT	-9999 M to +9999 M	VARs		2
07ED	-	07EE	2030	-	2031	Positive VARs, Phase B, Average	FLOAT	-9999 M to +9999 M	VARs		2
07EF	-	07F0	2032	-	2033	Positive VARs, Phase C, Average	FLOAT	-9999 M to +9999 M	VARs		2
07F1	-	07F2	2034	-	2035	Negative Watts, Phase A, Average	FLOAT	-9999 M to +9999 M	watts		2
07F3	-	07F4	2036	-	2037	Negative Watts, Phase B, Average	FLOAT	-9999 M to +9999 M	watts		2
07F5	-	07F6	2038	-	2039	Negative Watts, Phase C, Average	FLOAT	-9999 M to +9999 M	watts		2
07F7	-	07F8	2040	-	2041	Negative VARs, Phase A, Average	FLOAT	-9999 M to +9999 M	VARs		2
07F9	-	07FA	2042	-	2043	Negative VARs, Phase B, Average	FLOAT	-9999 M to +9999 M	VARs		2
07FB	-	07FC	2044	-	2045	Negative VARs, Phase C, Average	FLOAT	-9999 M to +9999 M	VARs		2
07FD	-	07FE	2046	-	2047	VAs, Phase A, Average	FLOAT	-9999 M to +9999 M	VAs		2
07FF	-	0800	2048	-	2049	VAs, Phase B, Average	FLOAT	-9999 M to +9999 M	VAs		2
0801	-	0802	2050	-	2051	VAs, Phase C, Average	FLOAT	-9999 M to +9999 M	VAs		2
0803	-	0804	2052	-	2053	Positive PF, Phase A, Average	FLOAT	-1.00 to +1.00	none		2
0805	-	0806	2054	-	2055	Positive PF, Phase B, Average	FLOAT	-1.00 to +1.00	none		2
0807	-	0808	2056	-	2057	Positive PF, Phase C, Average	FLOAT	-1.00 to +1.00	none		2
0809	-	080A	2058	-	2059	Negative PF, Phase A, Average	FLOAT	-1.00 to +1.00	none		2
080B	-	080C	2060	-	2061	Negative PF, Phase B, Average	FLOAT	-1.00 to +1.00	none		2
080D	-	080E	2062	-	2063	Negative PF, Phase C, Average	FLOAT	-1.00 to +1.00	none		2
										Block Size:	64

Uncompensated Readings Block										read-only	
0BB7	-	0BB8	3000	-	3001	Watts, 3-Ph total	FLOAT	-9999 M to +9999 M	watts		2
0BB9	-	0BBA	3002	-	3003	VARs, 3-Ph total	FLOAT	-9999 M to +9999 M	VARs		2
0BBB	-	0BBC	3004	-	3005	VAs, 3-Ph total	FLOAT	-9999 M to +9999 M	VAs		2
0BBD	-	0BBE	3006	-	3007	Power Factor, 3-Ph total	FLOAT	-1.00 to +1.00	none		2
0BBF	-	0BC0	3008	-	3009	Watts, Phase A	FLOAT	-9999 M to +9999 M	watts		2
0BC1	-	0BC2	3010	-	3011	Watts, Phase B	FLOAT	-9999 M to +9999 M	watts		2
0BC3	-	0BC4	3012	-	3013	Watts, Phase C	FLOAT	-9999 M to +9999 M	watts		2
0BC5	-	0BC6	3014	-	3015	VARs, Phase A	FLOAT	-9999 M to +9999 M	VARs		2
OBC7	-	0BC8	3016	-	3017	VARs, Phase B	FLOAT	-9999 M to +9999 M	VARs		2
0BC9	-	0BCA	3018	-	3019	VARs, Phase C	FLOAT	-9999 M to +9999 M	VARs	Per phase power and PF have values only for WYE hookup and will be zero for all other hookups.	2
0BCB	-	0BCC	3020	-	3021	VAs, Phase A	FLOAT	-9999 M to +9999 M	VAs		2
0BCD	-	0BCE	3022	-	3023	VAs, Phase B	FLOAT	-9999 M to +9999 M	VAs		2
0BCF	-	0BD0	3024	-	3025	VAs, Phase C	FLOAT	-9999 M to +9999 M	VAs		2
0BD1	-	0BD2	3026	-	3027	Power Factor, Phase A	FLOAT	-1.00 to +1.00	none		2
0BD3	-	0BD4	3028	-	3029	Power Factor, Phase B	FLOAT	-1.00 to +1.00	none		2
0BD5	-	0BD6	3030	-	3031	Power Factor, Phase C	FLOAT	-1.00 to +1.00	none		2
0BD7	-	0BD8	3032	-	3033	W-hours, Received	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* Wh received & delivered always have opposite signs	2
0BD9	-	0BDA	3034	-	3035	W-hours, Delivered	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format	* Wh received is positive for "view as load", delivered is positive for "view as generator"	2
0BDB	-	0BDC	3036	-	3037	W-hours, Net	SINT32	-99999999 to 99999999	Wh per energy format	* 5 to 8 digits	2
0BDD	-	0BDE	3038	-	3039	W-hours, Total	SINT32	0 to 99999999	Wh per energy format		2
0BDF	-	0BE0	3040	-	3041	VAR-hours, Positive	SINT32	0 to 99999999	VARh per energy format	* decimal point implied, per energy format	2
0BE1	-	0BE2	3042	-	3043	VAR-hours, Negative	SINT32	0 to -99999999	VARh per energy format		2
0BE3	-	0BE4	3044	-	3045	VAR-hours, Net	SINT32	-99999999 to 99999999	VARh per energy format	* resolution of digit before decimal point = units, kilo, or mega, per energy format	2
0BE5	-	0BE6	3046	-	3047	VAR-hours, Total	SINT32	0 to 99999999	VARh per energy format		2
0BE7	-	0BE8	3048	-	3049	VA-hours, Total	SINT32	0 to 99999999	VAh per energy format	* see note 10	2
0BE9	-	0BEA	3050	-	3051	W-hours, Received, Phase A	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
0BEB	-	0BEC	3052	-	3053	W-hours, Received, Phase B	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
0BED	-	0BEE	3054	-	3055	W-hours, Received, Phase C	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
0BEF	-	0BF0	3056	-	3057	W-hours, Delivered, Phase A	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
0BF1	-	0BF2	3058	-	3059	W-hours, Delivered, Phase B	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
0BF3	-	0BF4	3060	-	3061	W-hours, Delivered, Phase C	SINT32	0 to 99999999 or 0 to -99999999	Wh per energy format		2
0BF5	-	0BF6	3062	-	3063	W-hours, Net, Phase A	SINT32	-99999999 to 99999999	Wh per energy format		2
0BF7	-	0BF8	3064	-	3065	W-hours, Net, Phase B	SINT32	-99999999 to 99999999	Wh per energy format		2
0BF9	-	0BFA	3066	-	3067	W-hours, Net, Phase C	SINT32	-99999999 to 99999999	Wh per energy format		2
0BFB	-	0BFC	3068	-	3069	W-hours, Total, Phase A	SINT32	0 to 99999999	Wh per energy format		2
0BFD	-	0BFE	3070	-	3071	W-hours, Total, Phase B	SINT32	0 to 99999999	Wh per energy format		2
0BFF	-	0C00	3072	-	3073	W-hours, Total, Phase C	SINT32	0 to 99999999	Wh per energy format		2
0C01	-	0C02	3074	-	3075	VAR-hours, Positive, Phase A	SINT32	0 to 99999999	VARh per energy format		2
0C03	-	0C04	3076	-	3077	VAR-hours, Positive, Phase B	SINT32	0 to 99999999	VARh per energy format		2
0C05	-	0C06	3078	-	3079	VAR-hours, Positive, Phase C	SINT32	0 to 99999999	VARh per energy format		2
0C07	-	0C08	3080	-	3081	VAR-hours, Negative, Phase A	SINT32	0 to -99999999	VARh per energy format		2
0C09	-	0C0A	3082	-	3083	VAR-hours, Negative, Phase B	SINT32	0 to -99999999	VARh per energy format		2

0C0B	-	0C0C	3084	-	3085	VAR-hours, Negative, Phase C	SINT32	0 to -99999999	VARh per energy format		2
0C0D	-	0C0E	3086	-	3087	VAR-hours, Net, Phase A	SINT32	-99999999 to 99999999	VARh per energy format		2
0C0F	-	0C10	3088	-	3089	VAR-hours, Net, Phase B	SINT32	-99999999 to 99999999	VARh per energy format		2
0C11	-	0C12	3090	-	3091	VAR-hours, Net, Phase C	SINT32	-99999999 to 99999999	VARh per energy format		2
0C13	-	0C14	3092	-	3093	VAR-hours, Total, Phase A	SINT32	0 to 99999999	VARh per energy format		2
0C15	-	0C16	3094	-	3095	VAR-hours, Total, Phase B	SINT32	0 to 99999999	VARh per energy format		2
0C17	-	0C18	3096	-	3097	VAR-hours, Total, Phase C	SINT32	0 to 99999999	VARh per energy format		2
0C19	-	0C1A	3098	-	3099	VA-hours, Phase A	SINT32	0 to 99999999	VAh per energy format		2
0C1B	-	0C1C	3100	-	3101	VA-hours, Phase B	SINT32	0 to 99999999	VAh per energy format		2
0C1D	-	0C1E	3102	-	3103	VA-hours, Phase C	SINT32	0 to 99999999	VAh per energy format		2
										Block Size:	104
Phase Angle Block										**read-only**	
1003	-	1003	4100	-	4100	Phase A Current	SINT16	-1800 to +1800	0.1 degree		1
1004	-	1004	4101	-	4101	Phase B Current	SINT16	-1800 to +1800	0.1 degree		1
1005	-	1005	4102	-	4102	Phase C Current	SINT16	-1800 to +1800	0.1 degree		1
1006	-	1006	4103	-	4103	Angle, Volts A-B	SINT16	-1800 to +1800	0.1 degree		1
1007	-	1007	4104	-	4104	Angle, Volts B-C	SINT16	-1800 to +1800	0.1 degree		1
1008	-	1008	4105	-	4105	Angle, Volts C-A	SINT16	-1800 to +1800	0.1 degree		1
										Block Size:	6
Status Block										**read-only**	
1193	-	1193	4500	-	4500	Port ID	UINT16	1 to 4	none	Identifies which Shark COM port a master is connected to; 1 for COM1, 2 for COM2, etc.	1
1194	-	1194	4501	-	4501	Meter Status	UINT16	bit-mapped	mmmpch-- -ffeeccc	mmm = measurement state (0=off, 1=running normally, 2=limp mode, 3=warmup, 6&7=boot, others unused) See note 16. pch = NVMEM block OK flags (p=profile, c=calibration, h=header), flag is 1 if OK ff = flash state (0=initializing, 1=logging disabled by Vswitch, 3=logging) ee = edit state (0=startup, 1=normal, 2=privileged command session, 3=profile update mode) ccc = port enabled for edit(0=none, 1-4=COM1-COM4, 7=front panel)	1
1195	-	1195	4502	-	4502	Limits Status	UINT16	bit-mapped	87654321 87654321	high byte is setpt 1, 0=in, 1=out low byte is setpt 2, 0=in, 1=out see notes 11, 12, 17	1
1196	-	1197	4503	-	4504	Time Since Reset	UINT32	0 to 4294967294	4 msec	wraps around after max count	2
1198	-	119A	4505	-	4507	Meter On Time	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
119B	-	119D	4508	-	4510	Current Date and Time	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
119E	-	119E	4511	-	4511	Reserved				Reserved	1
119F	-	119F	4512	-	4512	Current Day of Week	UINT16	1 to 7	1 day	1=Sun, 2=Mon, etc.	1
										Block Size:	13

THD Block (Note 13)										read-only	
176F	-	176F	6000	-	6000	Volts A-N, %THD	UINT16	0 to 10000	0.01%		1
1770	-	1770	6001	-	6001	Volts B-N, %THD	UINT16	0 to 10000	0.01%		1
1771	-	1771	6002	-	6002	Volts C-N, %THD	UINT16	0 to 10000	0.01%		1
1772	-	1772	6003	-	6003	Amps A, %THD	UINT16	0 to 10000	0.01%		1
1773	-	1773	6004	-	6004	Amps B, %THD	UINT16	0 to 10000	0.01%		1
1774	-	1774	6005	-	6005	Amps C, %THD	UINT16	0 to 10000	0.01%		1
1775	-	179C	6006	-	6045	Phase A Voltage harmonic magnitudes	UINT16	0 to 10000	0.01%	In each group of 40 registers, the first register represents the fundamental frequency or first harmonic, the second represents the second harmonic, and so on up to the 40th register which represents the 40th harmonic. Harmonic magnitudes are given as % of the fundamental magnitude. Thus the first register in each group of 40 will typically be 9999. A reading of 10000 indicates invalid.	40
179D	-	17C4	6046	-	6085	Phase A Voltage harmonic phases	SINT16	-1800 to +1800	0.1 degree		40
17C5	-	17EC	6086	-	6125	Phase A Current harmonic magnitudes	UINT16	0 to 10000	0.01%		40
17ED	-	1814	6126	-	6165	Phase A Current harmonic phases	SINT16	-1800 to +1800	0.1 degree		40
1815	-	183C	6166	-	6205	Phase B Voltage harmonic magnitudes	UINT16	0 to 10000	0.01%		40
183D	-	1864	6206	-	6245	Phase B Voltage harmonic phases	SINT16	-1800 to +1800	0.1 degree		40
1865	-	188C	6246	-	6285	Phase B Current harmonic magnitudes	UINT16	0 to 10000	0.01%		40
188D	-	18B4	6286	-	6325	Phase B Current harmonic phases	SINT16	-1800 to +1800	0.1 degree		40
18B5	-	18DC	6326	-	6365	Phase C Voltage harmonic magnitudes	UINT16	0 to 10000	0.01%		40
18DD	-	1904	6366	-	6405	Phase C Voltage harmonic phases	SINT16	-1800 to +1800	0.1 degree		40
1905	-	192C	6406	-	6445	Phase C Current harmonic magnitudes	UINT16	0 to 10000	0.01%		40
192D	-	1954	6446	-	6485	Phase C Current harmonic phases	SINT16	-1800 to +1800	0.1 degree		40
1955	-	1955	6486	-	6486	Wave Scope scale factor for channel Va	UINT16	0 to 32767		Convert individual samples to volts or amps: V or A = (sample * scale factor) / 1,000,000 Samples update in conjunction with THD and harmonics; samples not available (all zeroes) if THD not available.	1
1956	-	1956	6487	-	6487	Wave Scope scale factors for channel Ib	UINT16	0 to 32767			1
1957	-	1958	6488	-	6489	Wave Scope scale factors for channels Vb and Ib	UINT16	0 to 32767			2
1959	-	195A	6490	-	6491	Wave Scope scale factors for channels Vc and Ic	UINT16	0 to 32767			2
195B	-	199A	6492	-	6555	Wave Scope samples for channel Va	SINT16	-32768 to +32767			64
199B	-	19DA	6556	-	6619	Wave Scope samples for channel Ia	SINT16	-32768 to +32767			64
19DB	-	1A1A	6620	-	6683	Wave Scope samples for channel Vb	SINT16	-32768 to +32767			64
1A1B	-	1A5A	6684	-	6747	Wave Scope samples for channel Ib	SINT16	-32768 to +32767			64
1A5B	-	1A9A	6748	-	6811	Wave Scope samples for channel Vc	SINT16	-32768 to +32767			64
1A9B	-	1ADA	6812	-	6875	Wave Scope samples for channel Ic	SINT16	-32768 to +32767			64
										Block Size:	876
Short term Primary Minimum Block										read-only	
1F27	-	1F28	7976	-	7977	Volts A-N, previous Demand interval Short Term Minimum	FLOAT	0 to 9999 M	volts	Minimum instantaneous value measured during the demand interval before the one most recently completed.	2
1F29	-	1F2A	7978	-	7979	Volts B-N, previous Demand interval Short Term Minimum	FLOAT	0 to 9999 M	volts		2
1F2B	-	1F2C	7980	-	7981	Volts C-N, previous Demand interval Short Term Minimum	FLOAT	0 to 9999 M	volts		2
1F2D	-	1F2E	7982	-	7983	Volts A-B, previous Demand interval Short Term Minimum	FLOAT	0 to 9999 M	volts		2
1F2F	-	1F30	7984	-	7985	Volts B-C, previous Demand interval Short Term Minimum	FLOAT	0 to 9999 M	volts		2
1F31	-	1F32	7986	-	7987	Volts C-A, previous Demand interval Short Term Minimum	FLOAT	0 to 9999 M	volts		2
1F33	-	1F34	7988	-	7989	Volts A-N, Short Term Minimum	FLOAT	0 to 9999 M	volts	Minimum instantaneous value measured during the most recently completed demand interval.	2
1F35	-	1F36	7990	-	7991	Volts B-N, Short Term Minimum	FLOAT	0 to 9999 M	volts		2
1F37	-	1F38	7992	-	7993	Volts C-N, Short Term Minimum	FLOAT	0 to 9999 M	volts		2
1F39	-	1F3A	7994	-	7995	Volts A-B, Short Term Minimum	FLOAT	0 to 9999 M	volts		2
1F3B	-	1F3C	7996	-	7997	Volts B-C, Short Term Minimum	FLOAT	0 to 9999 M	volts		2
1F3D	-	1F3E	7998	-	7999	Volts C-A, Short Term Minimum	FLOAT	0 to 9999 M	volts		2
										Block Size:	24

Primary Minimum Block										read-only	
1F3F	-	1F40	8000	-	8001	Volts A-N, Minimum	FLOAT	0 to 9999 M	volts		2
1F41	-	1F42	8002	-	8003	Volts B-N, Minimum	FLOAT	0 to 9999 M	volts		2
1F43	-	1F44	8004	-	8005	Volts C-N, Minimum	FLOAT	0 to 9999 M	volts		2
1F45	-	1F46	8006	-	8007	Volts A-B, Minimum	FLOAT	0 to 9999 M	volts		2
1F47	-	1F48	8008	-	8009	Volts B-C, Minimum	FLOAT	0 to 9999 M	volts		2
1F49	-	1F4A	8010	-	8011	Volts C-A, Minimum	FLOAT	0 to 9999 M	volts		2
1F4B	-	1F4C	8012	-	8013	Amps A, Minimum Avg Demand	FLOAT	0 to 9999 M	amps		2
1F4D	-	1F4E	8014	-	8015	Amps B, Minimum Avg Demand	FLOAT	0 to 9999 M	amps		2
1F4F	-	1F50	8016	-	8017	Amps C, Minimum Avg Demand	FLOAT	0 to 9999 M	amps		2
1F51	-	1F52	8018	-	8019	Positive Watts, 3-Ph, Minimum Avg Demand	FLOAT	0 to +9999 M	watts		2
1F53	-	1F54	8020	-	8021	Positive VARs, 3-Ph, Minimum Avg Demand	FLOAT	0 to +9999 M	VARs		2
1F55	-	1F56	8022	-	8023	Negative Watts, 3-Ph, Minimum Avg Demand	FLOAT	0 to +9999 M	watts		2
1F57	-	1F58	8024	-	8025	Negative VARs, 3-Ph, Minimum Avg Demand	FLOAT	0 to +9999 M	VARs		2
1F59	-	1F5A	8026	-	8027	VAs, 3-Ph, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
1F5B	-	1F5C	8028	-	8029	Positive Power Factor, 3-Ph, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F5D	-	1F5E	8030	-	8031	Negative Power Factor, 3-Ph, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F5F	-	1F60	8032	-	8033	Frequency, Minimum	FLOAT	0 to 65.00	Hz		2
1F61	-	1F62	8034	-	8035	Neutral Current, Minimum Avg Demand	FLOAT	0 to 9999 M	amps		2
1F63	-	1F64	8036	-	8037	Positive Watts, Phase A, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
1F65	-	1F66	8038	-	8039	Positive Watts, Phase B, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
1F67	-	1F68	8040	-	8041	Positive Watts, Phase C, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
1F69	-	1F6A	8042	-	8043	Positive VARs, Phase A, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
1F6B	-	1F6C	8044	-	8045	Positive VARs, Phase B, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
1F6D	-	1F6E	8046	-	8047	Positive VARs, Phase C, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
1F6F	-	1F70	8048	-	8049	Negative Watts, Phase A, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
1F71	-	1F72	8050	-	8051	Negative Watts, Phase B, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
1F73	-	1F74	8052	-	8053	Negative Watts, Phase C, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
1F75	-	1F76	8054	-	8055	Negative VARs, Phase A, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
1F77	-	1F78	8056	-	8057	Negative VARs, Phase B, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
1F79	-	1F7A	8058	-	8059	Negative VARs, Phase C, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
1F7B	-	1F7C	8060	-	8061	VAs, Phase A, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
1F7D	-	1F7E	8062	-	8063	VAs, Phase B, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
1F7F	-	1F80	8064	-	8065	VAs, Phase C, Minimum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
1F81	-	1F82	8066	-	8067	Positive PF, Phase A, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F83	-	1F84	8068	-	8069	Positive PF, Phase B, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F85	-	1F86	8070	-	8071	Positive PF, Phase C, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F87	-	1F88	8072	-	8073	Negative PF, Phase A, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F89	-	1F8A	8074	-	8075	Negative PF, Phase B, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F8B	-	1F8C	8076	-	8077	Negative PF, Phase C, Minimum Avg Demand	FLOAT	-1.00 to +1.00	none		2
1F8D	-	1F8D	8078	-	8078	Volts A-N, %THD, Minimum	UINT16	0 to 9999	0.01%		1
1F8E	-	1F8E	8079	-	8079	Volts B-N, %THD, Minimum	UINT16	0 to 9999	0.01%		1
1F8F	-	1F8F	8080	-	8080	Volts C-N, %THD, Minimum	UINT16	0 to 9999	0.01%		1

1F90	-	1F90	8081	-	8081	Amps A, %THD, Minimum	UINT16	0 to 9999	0.01%		1
1F91	-	1F91	8082	-	8082	Amps B, %THD, Minimum	UINT16	0 to 9999	0.01%		1
1F92	-	1F92	8083	-	8083	Amps C, %THD, Minimum	UINT16	0 to 9999	0.01%		1
1F93	-	1F9B	8084	-	8092	Reserved				Reserved	9
										Block Size:	93
Primary Minimum Timestamp Block										read-only	
20CF	-	20D1	8400	-	8402	Volts A-N, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20D2	-	20D4	8403	-	8405	Volts B-N, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20D5	-	20D7	8406	-	8408	Volts C-N, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20D8	-	20DA	8409	-	8411	Volts A-B, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20DB	-	20DD	8412	-	8414	Volts B-C, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20DE	-	20E0	8415	-	8417	Volts C-A, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20E1	-	20E3	8418	-	8420	Amps A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20E4	-	20E6	8421	-	8423	Amps B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20E7	-	20E9	8424	-	8426	Amps C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20EA	-	20EC	8427	-	8429	Positive Watts, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20ED	-	20EF	8430	-	8432	Positive VARs, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20F0	-	20F2	8433	-	8435	Negative Watts, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20F3	-	20F5	8436	-	8438	Negative VARs, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20F6	-	20F8	8439	-	8441	VAs, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20F9	-	20FB	8442	-	8444	Positive Power Factor, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20FC	-	20FE	8445	-	8447	Negative Power Factor, 3-Ph, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
20FF	-	2101	8448	-	8450	Frequency, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2102	-	2104	8451	-	8453	Neutral Current, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2100	1 sec		3
2105	-	2107	8454	-	8456	Positive Watts, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2108	-	210A	8457	-	8459	Positive Watts, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
210B	-	210D	8460	-	8462	Positive Watts, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
210E	-	2110	8463	-	8465	Positive VARs, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2111	-	2113	8466	-	8468	Positive VARs, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2114	-	2116	8469	-	8471	Positive VARs, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2117	-	2119	8472	-	8474	Negative Watts, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
211A	-	211C	8475	-	8477	Negative Watts, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
211D	-	211F	8478	-	8480	Negative Watts, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2120	-	2122	8481	-	8483	Negative VARs, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2123	-	2125	8484	-	8486	Negative VARs, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2126	-	2128	8487	-	8489	Negative VARs, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2129	-	212B	8490	-	8492	VAs, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
212C	-	212E	8493	-	8495	VAs, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
212F	-	2131	8496	-	8498	VAs, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3

2132	-	2134	8499	-	8501	Positive PF, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2135	-	2137	8502	-	8504	Positive PF, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2138	-	213A	8505	-	8507	Positive PF, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
213B	-	213D	8508	-	8510	Negative PF, Phase A, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
213E	-	2140	8511	-	8513	Negative PF, Phase B, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2141	-	2143	8514	-	8516	Negative PF, Phase C, Min Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2144	-	2146	8517	-	8519	Volts A-N, %THD, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2147	-	2149	8520	-	8522	Volts B-N, %THD, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
214A	-	214C	8523	-	8525	Volts C-N, %THD, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
214D	-	214F	8526	-	8528	Amps A, %THD, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2150	-	2152	8529	-	8531	Amps B, %THD, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2153	-	2155	8532	-	8534	Amps C, %THD, Min Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2156	-	2167	8535	-	8552	Reserved				Reserved	18
										Block Size:	153
Short term Primary Maximum Block										**read-only**	
230F	-	2310	8976	-	8977	Volts A-N, previous Demand interval Short Term Maximum	FLOAT	0 to 9999 M	volts		
2311	-	2312	8978	-	8979	Volts B-N, previous Demand interval Short Term Maximum	FLOAT	0 to 9999 M	volts		
2313	-	2314	8980	-	8981	Volts C-N, previous Demand interval Short Term Maximum	FLOAT	0 to 9999 M	volts		
2315	-	2316	8982	-	8983	Volts A-B, previous Demand interval Short Term Maximum	FLOAT	0 to 9999 M	volts	Maximum instantaneous value measured during the demand interval before the one most recently completed.	
2317	-	2318	8984	-	8985	Volts B-C, previous Demand interval Short Term Maximum	FLOAT	0 to 9999 M	volts		
2319	-	231A	8986	-	8987	Volts C-A, previous Demand interval Short Term Maximum	FLOAT	0 to 9999 M	volts		
231B	-	231C	8988	-	8989	Volts A-N, Maximum	FLOAT	0 to 9999 M	volts		2
231D	-	231E	8990	-	8991	Volts B-N, Maximum	FLOAT	0 to 9999 M	volts		2
232F	-	2320	8992	-	8993	Volts C-N, Maximum	FLOAT	0 to 9999 M	volts		2
2321	-	2322	8994	-	8995	Volts A-B, Maximum	FLOAT	0 to 9999 M	volts	Maximum instantaneous value measured during the most recently completed demand interval.	2
2323	-	2324	8996	-	8997	Volts B-C, Maximum	FLOAT	0 to 9999 M	volts		2
2325	-	2326	8998	-	8999	Volts C-A, Maximum	FLOAT	0 to 9999 M	volts		2
										Block Size:	12
Primary Maximum Block										**read-only**	
2327	-	2328	9000	-	9001	Volts A-N, Maximum	FLOAT	0 to 9999 M	volts		2
2329	-	232A	9002	-	9003	Volts B-N, Maximum	FLOAT	0 to 9999 M	volts		2
232B	-	232C	9004	-	9005	Volts C-N, Maximum	FLOAT	0 to 9999 M	volts		2
232D	-	232E	9006	-	9007	Volts A-B, Maximum	FLOAT	0 to 9999 M	volts		2
232F	-	2330	9008	-	9009	Volts B-C, Maximum	FLOAT	0 to 9999 M	volts		2
2331	-	2332	9010	-	9011	Volts C-A, Maximum	FLOAT	0 to 9999 M	volts		2
2333	-	2334	9012	-	9013	Amps A, Maximum Avg Demand	FLOAT	0 to 9999 M	amps		2
2335	-	2336	9014	-	9015	Amps B, Maximum Avg Demand	FLOAT	0 to 9999 M	amps		2
2337	-	2338	9016	-	9017	Amps C, Maximum Avg Demand	FLOAT	0 to 9999 M	amps		2
2339	-	233A	9018	-	9019	Positive Watts, 3-Ph, Maximum Avg Demand	FLOAT	0 to +9999 M	watts		2
233B	-	233C	9020	-	9021	Positive VARs, 3-Ph, Maximum Avg Demand	FLOAT	0 to +9999 M	VARs		2
233D	-	233E	9022	-	9023	Negative Watts, 3-Ph, Maximum Avg Demand	FLOAT	0 to +9999 M	watts		2
233F	-	2340	9024	-	9025	Negative VARs, 3-Ph, Maximum Avg Demand	FLOAT	0 to +9999 M	VARs		2
2341	-	2342	9026	-	9027	VAs, 3-Ph, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2

2343	-	2344	9028	-	9029	Positive Power Factor, 3-Ph, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
2345	-	2346	9030	-	9031	Negative Power Factor, 3-Ph, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
2347	-	2348	9032	-	9033	Frequency, Maximum	FLOAT	0 to 65.00	Hz		2
2349	-	234A	9034	-	9035	Neutral Current, Maximum Avg Demand	FLOAT	0 to 9999 M	amps		2
234B	-	234C	9036	-	9037	Positive Watts, Phase A, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
234D	-	234E	9038	-	9039	Positive Watts, Phase B, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
234F	-	2350	9040	-	9041	Positive Watts, Phase C, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
2351	-	2352	9042	-	9043	Positive VARs, Phase A, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
2353	-	2354	9044	-	9045	Positive VARs, Phase B, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
2355	-	2356	9046	-	9047	Positive VARs, Phase C, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
2357	-	2358	9048	-	9049	Negative Watts, Phase A, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
2359	-	235A	9050	-	9051	Negative Watts, Phase B, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
235B	-	235C	9052	-	9053	Negative Watts, Phase C, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	watts		2
235D	-	235E	9054	-	9055	Negative VARs, Phase A, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
235F	-	2360	9056	-	9057	Negative VARs, Phase B, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
2361	-	2362	9058	-	9059	Negative VARs, Phase C, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VARs		2
2363	-	2364	9060	-	9061	VAs, Phase A, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
2365	-	2366	9062	-	9063	VAs, Phase B, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
2367	-	2368	9064	-	9065	VAs, Phase C, Maximum Avg Demand	FLOAT	-9999 M to +9999 M	VAs		2
2369	-	236A	9066	-	9067	Positive PF, Phase A, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
236B	-	236C	9068	-	9069	Positive PF, Phase B, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
236D	-	236E	9070	-	9071	Positive PF, Phase C, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
236F	-	2370	9072	-	9073	Negative PF, Phase A, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
2371	-	2372	9074	-	9075	Negative PF, Phase B, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
2373	-	2374	9076	-	9077	Negative PF, Phase C, Maximum Avg Demand	FLOAT	-1.00 to +1.00	none		2
2375	-	2375	9078	-	9078	Volts A-N, %THD, Maximum	UINT16	0 to 9999	0.01%		1
2376	-	2376	9079	-	9079	Volts B-N, %THD, Maximum	UINT16	0 to 9999	0.01%		1
2377	-	2377	9080	-	9080	Volts C-N, %THD, Maximum	UINT16	0 to 9999	0.01%		1
2378	-	2378	9081	-	9081	Amps A, %THD, Maximum	UINT16	0 to 9999	0.01%		1
2379	-	2379	9082	-	9082	Amps B, %THD, Maximum	UINT16	0 to 9999	0.01%		1
237A	-	237A	9083	-	9083	Amps C, %THD, Maximum	UINT16	0 to 9999	0.01%		1
237B	-	2383	9084	-	9092	Reserved				Reserved	9
										Block Size:	93
Primary Maximum Timestamp Block										**read-only**	
24B7	-	24B9	9400	-	9402	Volts A-N, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24BA	-	24BC	9403	-	9405	Volts B-N, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24BD	-	24BF	9406	-	9408	Volts C-N, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24C0	-	24C2	9409	-	9411	Volts A-B, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24C3	-	24C5	9412	-	9414	Volts B-C, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24C6	-	24C8	9415	-	9417	Volts C-A, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24C9	-	24CB	9418	-	9420	Amps A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24CC	-	24CE	9421	-	9423	Amps B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3

24CF	-	24D1	9424	-	9426	Amps C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24D2	-	24D4	9427	-	9429	Positive Watts, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24D5	-	24D7	9430	-	9432	Positive VARs, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24D8	-	24DA	9433	-	9435	Negative Watts, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24DB	-	24DD	9436	-	9438	Negative VARs, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24DE	-	24E0	9439	-	9441	VAs, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24E1	-	24E3	9442	-	9444	Positive Power Factor, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24E4	-	24E6	9445	-	9447	Negative Power Factor, 3-Ph, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24E7	-	24E9	9448	-	9450	Frequency, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24EA	-	24EC	9451	-	9453	Neutral Current, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2100	1 sec		3
24ED	-	24EF	9454	-	9456	Positive Watts, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24F0	-	24F2	9457	-	9459	Positive Watts, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24F3	-	24F5	9460	-	9462	Positive Watts, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24F6	-	24F8	9463	-	9465	Positive VARs, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24F9	-	24FB	9466	-	9468	Positive VARs, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24FC	-	24FE	9469	-	9471	Positive VARs, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
24FF	-	2501	9472	-	9474	Negative Watts, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2502	-	2504	9475	-	9477	Negative Watts, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2505	-	2507	9478	-	9480	Negative Watts, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2508	-	250A	9481	-	9483	Negative VARs, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
250B	-	250D	9484	-	9486	Negative VARs, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
250E	-	2510	9487	-	9489	Negative VARs, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2511	-	2513	9490	-	9492	VAs, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2514	-	2516	9493	-	9495	VAs, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2517	-	2519	9496	-	9498	VAs, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
251A	-	251C	9499	-	9501	Positive PF, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
251D	-	251F	9502	-	9504	Positive PF, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2520	-	2522	9505	-	9507	Positive PF, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2523	-	2525	9508	-	9510	Negative PF, Phase A, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2526	-	2528	9511	-	9513	Negative PF, Phase B, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2529	-	252B	9514	-	9516	Negative PF, Phase C, Max Avg Dmd Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
252C	-	252E	9517	-	9519	Volts A-N, %THD, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
252F	-	2531	9520	-	9522	Volts B-N, %THD, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2532	-	2534	9523	-	9525	Volts C-N, %THD, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
2535	-	2537	9526	-	9528	Amps A, %THD, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3

2538	-	253A	9529	-	9531	Amps B, %THD, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
253B	-	253D	9532	-	9534	Amps C, %THD, Max Timestamp	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
253E	-	254F	9535	-	9552	Reserved				Reserved	18
										Block Size:	153
						Option Card 1 Section					
Card Identification and Configuration Block (Note 14)										**read-only**	
270F	-	270F	10000	-	10000	Class ID and card status	UINT16	bit-mapped	undv-----ccccttttt	Flags active if bit is set: u=unsupported card; n=card need configuration; d=card is using default configuration; v=communication with card is ok Field: cccc=class of installed card. Field tttt=type of card. See note 22	1
2710	-	2710	10001	-	10001	Reserved				Reserved	1
2711	-	2718	10002	-	10009	Card name	ASCII	16 char	none	ASCII name of the installed card	8
2719	-	2720	10010	-	10017	Serial number	ASCII	16 char	none	Serial Number in ASCII of the installed card	8
2721	-	2722	10018	-	10019	Version	ASCII	4 char	none	Version in ASCII of the hardware of the installed card.	2
2723	-	2746	10020	-	10055	Reserved				Reserved	36
2747	-	2748	10056	-	10057	Firmware Version	ASCII	4 char	none	Version of the BOOT firmware of the card, left justified and padded with spaces. Blank for boards without embedded firmware.	2
2749	-	274A	10058	-	10059	Firmware Version	ASCII	4 char	none	Version of the RUN firmware of the card, left justified and padded with spaces. Blank for boards without embedded firmware.	2
274B	-	274E	10060	-	10063	Reserved				Reserved	4
										Block Size:	64
Current Communication Settings for Option Card 1										**Read-only**	
274F	-	274F	10064	-	10064	Current speed and format	UINT16	bit-mapped	-abcde-- fghijklm	Bps: a=57600; b=38400; c=19200; d=14400; e=9600 Stop bits 'f': cleared 1 stop bit, set 2 stop bits Parity: g=even; h=odd; i=none Data bits: j=8; k=7; l=6; m=5	1
2750	-	2750	10065	-	10065	Reserved	UINT16	bit-mapped		Reserved	1
2751	-	2751	10066	-	10066	Current protocol	UINT16	bit-mapped	-------- -----ppp-	ppp=protocol 100=DNP3; 010=Ascii Modbus; 001=Rtu Modbus	1
2752	-	2752	10067	-	10067	Current reply delay	UINT16	0 to 65535	milliseconds	Delay to reply to a Modbus transaction after receiving it.	1
2753	-	2756	10068	-	10071	Reserved				Reserved	4
										Block Size:	8
Data and Control Blocks for Option Card 1										**read-only**	
2757	-	2790	10072	-	10129	Data and Control Block for Option Card 1. Meaning of registers depends on installed card. -- see below				Register assignments depend on which type of card is in the slot. See overlays below.	58
										Block Size:	66
						Expansions for Data and Control Block for Option Card 1					
Data and Control Block -- Digital I/O Relay Card Overlay (Note 15)										**read-only except as indicated**	
2757	-	2757	10072	-	10072	Digital Input States	UINT16	bit-mapped	-------- 22221111	Two nibble fields: (2222) for input#2 and (1111) for input #1. Lsb in each nibble is the current state of the input. Msb in each nibble is the oldest registered state.	1

2758	-	2758	10073	-	10073	Digital Relay States	UINT16	bit-mapped	-------- --ab--cd	If "a" is 1 then state of Relay#2 is unknown, otherwise state of Relay#2 is in "c": (1=tripped, 0=released). If "b" is 1 then state of Relay#1 is unknown, otherwise state of Relay#1 is in "d": (1=tripped, 0=released).	1
2759	-	2759	10074	-	10074	Turn relay on	UINT16	bit-mapped	-------- ------21	Writing a 1 in bit N turns relay N+1 ON (this register is writeable only in privileged session)	1
275A	-	275A	10075	-	10075	Turn relay off	UINT16	bit-mapped	-------- ------21	Writing a 1 in bit N turns relay N+1 OFF (this register is writeable only in privileged session)	1
275B	-	275B	10076	-	10076	Trip/Release delay timer for Relay 1	UINT16	0 to 9999	0.1 sec	time to trip or release	1
275C	-	275C	10077	-	10077	Trip/Release delay timer for Relay 2	UINT16	0 to 9999	0.1 sec	time to trip or release	1
275D	-	275E	10078	-	10079	Reserved				Reserved	2
275F	-	275F	10080	-	10080	Input 1 Accumulator, Scaled	UINT16	0 to 9999	resolution is 1, 10, 100, 1000, 10000, or 100000 counts	Disabled accumulators always read 0.	1
2760	-	2760	10081	-	10081	Input 2 Accumulator, Scaled	UINT16	0 to 9999			1
2761	-	2762	10082	-	10083	Reserved				Reserved	2
2763	-	2763	10084	-	10084	Relay 1 Accumulator, Scaled	UINT16	0 to 9999	resolution is 1, 10, 100, 1000, 10000, or 100000 counts	Disabled accumulators always read 0.	1
2764	-	2764	10085	-	10085	Relay 2 Accumulator, Scaled	UINT16	0 to 9999			1
2765	-	2790	10086	-	10129	Reserved				Reserved	44
										Block Size:	58
Data and Control Block -- **Digital I/O Pulse Output Card Overlay (Note 15)**										read-only except as indicated	
2757	-	2757	10072	-	10072	Digital Input States	UINT16	bit-mapped	dddd cccc bbbb aaaa	Nibble "dddd" for input#4, "cccc" for input#3, "bbbb" for input#2 and "aaaa" for input#1. Within each field, rightmost bit is the current state (1=closed, 0=open), and bits at left are the older states 100ms apart. (historical states) Example: xxxx xxxx xxxx 0011 Current state of input#1 is closed, before that it was closed too, before that it was open and the oldest state known is open.	1
2758	-	2758	10073	-	10073	Digital Output States	UINT16	bit-mapped	-------- ----4321	One bit for each output. Bit 4 is for output #4, and bit 1 is for output #1. If a bit is set the output is closed, otherwise it is opened.	1
2759	-	2759	10074	-	10074	Pulse Output Test Select	UINT16	bit-mapped	-------- ----4321	Write 1 to a bit to set its corresponding Pulse Output into test mode. Write 0 to restore it to normal operation. A privileged session is required to write the bits. Reading this register reports the mode for each output (1=under test, 0=normal).	1
275A	-	275A	10075	-	10075	Pulse Output Test Power	UINT16	bit-mapped	ddvvvvvv vvvvvvvv	This register is Writeable in privileged session only. Simulates constant Power for the Pulse Output under test. Format is same as Kt settings for Pulse Output. "V" is raw value in Wh/pulse from 0 to 9999. "dd"=decimal point position: 00=0.XXXX, 01=X.XXX, 10=XX.XX, 11= XXX.X	1
275B	-	275E	10076	-	10079	Reserved				Reserved	4

275F	-	275F	10080	-	10080	Input 1 Accumulator, Scaled	UINT16	0 to 9999	resolution is 1, 10, 100, 1000, 10000, or 100000 counts	Disabled accumulators always read 0.	1
2760	-	2760	10081	-	10081	Input 2 Accumulator, Scaled	UINT16	0 to 9999			1
2761	-	2761	10082	-	10082	Input 3 Accumulator, Scaled	UINT16	0 to 9999			1
2762	-	2762	10083	-	10083	Input 4 Accumulator, Scaled	UINT16	0 to 9999			1
2763	-	2763	10084	-	10084	Output 1 Accumulator, Scaled	UINT16	0 to 9999			1
2764	-	2764	10085	-	10085	Output 2 Accumulator, Scaled	UINT16	0 to 9999			1
2765	-	2765	10086	-	10086	Output 3 Accumulator, Scaled	UINT16	0 to 9999			1
2766	-	2766	10087	-	10087	Output 4 Accumulator, Scaled	UINT16	0 to 9999			1
2767	-	2790	10088	-	10129	Reserved				Reserved	42
										Block Size:	58
Data and Control Block-- Analog Out 0-1mA / Analog Out 4-20mA (Note 15)										read-only	
2757	-	2757	10072	-	10072	Status of card	UINT16	bit-mapped	`----cf-- --------`	Flag fields: c=calibration not good; f=configuration error	1
2758	-	2790	10073	-	10129	Reserved				Reserved	57
										Block Size:	58
Data and Control Block -- Network Card Overlay (Note 15)										read-only	
2757	-	2757	10072	-	10072	Card and Network Status	UINT16	bit-mapped	`rhp----- -m-ii`	Flags: r=run mode; h=card is healthy; p=using last good known programmable settings Server flag: m=modbus tcp/ip ok. IP Status ii: 00=IP not valid yet, 01=IP from p.settings; 11=using last good known IP.	1
2758	-	2758	10073	-	10073	Reserved				Reserved	1
2759	-	275B	10074	-	10076	MAC address in use by the network card	UINT16	bit-mapped	6 bytes	These 3 registers hold the 6 bytes of the card's ethernet MAC address	3
275C	-	275F	10077	-	10080	Current IP Address	UINT16			These 4 registers hold the 4 numbers (1 number each register) that make the IP address used by the card.	4
2760	-	2760	10081	-	10081	Current IP Mask Length	UINT16	0 to 32		Number of bits that are set in the IP address mask, starting from the Msb of the 32 bit word. Example 24 = 255.255.255.0; a value of 2 would mean 192.0.0.0	1
2761	-	2790	10082	-	10129	Reserved				Reserved	48
										Block Size:	58
Option Card 2 Section											
Card Identification and Configuration Block (Note 14)										read-only	
2AF7	-	2AF7	11000	-	11000	Class ID and card status	UINT16	bit-mapped	undv-----cccctttt	Flags active if bit is set: u=unsupported card; n=card need configuration; d=card is using default configuration; v=communication with card is ok Field: cccc=class of installed card. Field tttt=type of card. See note 22	1
2AF8	-	2AF8	11001	-	11001	Reserved				Read only	1
2AF9	-	2B00	11002	-	11009	Card name	ASCII	16 char	none	ASCII name of the installed card	8
2B01	-	2B08	11010	-	11017	Serial number	ASCII	16 char	none	Serial Number in ASCII of the installed card	8
2B09	-	2B0A	11018	-	11019	Version	ASCII	4 char	none	Version in ASCII of the hardware of the installed card.	2
2B0B	-	2B28	11020	-	11055	Reserved				Reserved	36
2B2F	-	2B30	11056	-	11057	Firmware Version	ASCII	4 char	none	Version of the BOOT firmware of the card, left justified and padded with spaces. Blank for boards without embedded firmware.	2

2B31	-	2B32	11058	-	11059	Firmware Version	ASCII	4 char	none	Version of the RUN firmware of the card, left justified and padded with spaces. Blank for boards without embedded firmware.	2
2B33	-	2B36	11060	-	11063	Reserved				Reserved	4
										Block Size:	64
Current Communication Settings for Option Card 2										**Read-only**	
2B37	-	2B37	11064	-	11064	Current speed and format	UINT16	bit-mapped	-abcde-- fghijklm	Bps: a=57600; b=38400; c=19200; d=14400; e=9600 Stop bits 'f': cleared 1 stop bit, set 2 stop bits Parity: g=even; h=odd; i=none Data bits: j=8; k=7; l=6; m=5	1
2B38	-	2B38	11065	-	11065	Reserved	UINT16	bit-mapped		Reserved	1
2B39	-	2B39	11066	-	11066	Current protocol	UINT16	bit-mapped	-------- -----ppp-	ppp=protocol 100=DNP3; 010=Ascii Modbus; 001=Rtu Modbus	1
2B3A	-	2B3A	11067	-	11067	Current reply delay	UINT16	0 to 65535	milliseconds	Delay to reply a Modbus transaction after receiving it.	1
2B3B	-	2B3E	11068	-	11071	Reserved				Reserved	4
										Block Size:	8
Data and Control Blocks for Option Card 2										**read-only**	
2B3F	-	2B78	11072	-	11129	Data and Control Block for Option Card 2 Meaning of registers depend on installed card. -- see below				Register assignments depend on which type of card is in the slot. See overlays below.	58
										Block Size:	66
Expansions for Data and Control Block for Option Card 2											
Data and Control Block -- Digital I/O Relay Card Overlay (Note 15)										**read-only except as indicated**	
2B3F	-	2B3F	11072	-	11072	Digital Input States	UINT16	bit-mapped	-------- 22221111	Two nibble fields: (2222) for input#2 and (1111) for input #1. Lsb in each nibble is the current state of the input. Msb in each nibble is the oldest registered state.	1
2B40	-	2B40	11073	-	11073	Digital Relay States	UINT16	bit-mapped	-------- --ab--cd	If "a" is 1 then state of Relay#2 is unknown, otherwise state of Relay#2 is in "c": (1=tripped, 0=released). If "b" is 1 then state of Relay#1 is unknown, otherwise state of Relay#1 is in "d": (1=tripped, 0=released).	1
2B41	-	2B41	11074	-	11074	Turn relay on	UINT16	bit-mapped	-------- ------21	Writing a 1 in bit N turns relay N+1 ON (this register is writeable only in privileged session)	1
2B42	-	2B42	11075	-	11075	Turn relay off	UINT16	bit-mapped	-------- ------21	Writing a 1 in bit N turns relay N+1 OFF (this register is writeable only in privileged session)	1
2B43	-	2B43	11076	-	11076	Trip/Release delay timer for Relay 1	UINT16	0 to 9999	0.1 sec	time to trip or release	1
2B44	-	2B44	11077	-	11077	Trip/Release delay timer for Relay 2	UINT16	0 to 9999	0.1 sec	time to trip or release	1
2B45	-	2B46	11078	-	11079	Reserved				Reserved	2
2B47	-	2B47	11080	-	11080	Input 1 Accumulator, Scaled	UINT16	0 to 9999	resolution is 1, 10, 100, 1000, 10000, or 100000 counts	Disabled accumulators always read 0.	1
2B48	-	2B48	11081	-	11081	Input 2 Accumulator, Scaled	UINT16	0 to 9999			1
2B49	-	2B4A	11082	-	11083	Reserved				Reserved	2
2B4B	-	2B4B	11084	-	11084	Relay 1 Accumulator, Scaled	UINT16	0 to 9999	resolution is 1, 10, 100, 1000, 10000, or 100000 counts	Disabled accumulators always read 0.	1
2B4C	-	2B4C	11085	-	11085	Relay 2 Accumulator, Scaled	UINT16	0 to 9999			1
2B4D	-	2B78	11086	-	11129	Reserved				Reserved	44
										Block Size:	58

Data and Control Block -- **Digital I/O Pulse Output Card Overlay (Note 15)**										read-only except as indicated	
2B3F	-	2B3F	11072	-	11072	Digital Input States	UINT16	bit-mapped	dddd cccc bbbb aaaa	Nibble "dddd" for input#4, "cccc" for input#3, "bbbb" for input#2 and "aaaa" for input#1. Within each field, right most bit is the current state (1=closed, 0=open), and bits at left are the older states 100ms apart. (historical states) Example: xxxx xxxx xxxx 0011 Current state of input#1 is closed, before that it was closed too, before that it was open and the oldest state known is open.	1
2B40	-	2B40	11073	-	11073	Digital Output States	UINT16	bit-mapped	-------- ----4321	One bit for each output. Bit 4 is for output #4, and bit 1 is for output #1. If a bit is set the output is closed, otherwise it is opened.	1
2B41	-	2B41	11074	-	11074	Pulse Output Test Select	UINT16	bit-mapped	-------- ----4321	Write 1 to a bit to set its corresponding Pulse Output into test mode. Write 0 to restore it to normal operation. A privileged session is required to write the bits. Reading this register reports the mode for each output (1=under test, 0=normal).	1
2B42	-	2B42	11075	-	11075	Pulse Output Test Power	UINT16	bit-mapped	ddvvvvvv vvvvvvvv	This register is Writeable in privileged session only. Simulates constant Power for the Pulse Output under test. Format is same as Kt settings for Pulse Output. "V" is raw value in Wh/pulse from 0 to 9999. "dd"=decimal point position: 00=0.XXXX, 01=X.XXX, 10=XX.XX, 11= XXX.X	1
2B43	-	2B46	11076	-	11079	Reserved				Reserved	4
2B47	-	2B47	11080	-	11080	Input 1 Accumulator, Scaled	UINT16	0 to 9999	resolution is 1, 10, 100, 1000, 10000, or 100000 counts	Disabled accumulators always read 0.	1
2B48	-	2B48	11081	-	11081	Input 2 Accumulator, Scaled	UINT16	0 to 9999			1
2B49	-	2B49	11082	-	11082	Input 3 Accumulator, Scaled	UINT16	0 to 9999			1
2B4A	-	2B4A	11083	-	11083	Input 4 Accumulator, Scaled	UINT16	0 to 9999			1
2B4B	-	2B4B	11084	-	11084	Output 1 Accumulator, Scaled	UINT16	0 to 9999			1
2B4C	-	2B4C	11085	-	11085	Output 2 Accumulator, Scaled	UINT16	0 to 9999			1
2B4D	-	2B4D	11086	-	11086	Output 3 Accumulator, Scaled	UINT16	0 to 9999			1
2B4E	-	2B4E	11087	-	11087	Output 4 Accumulator, Scaled	UINT16	0 to 9999			1
2B4F	-	2B78	11088	-	11129	Reserved				Reserved	42
										Block Size:	58
Data and Control Block-- **Analog Out 0-1mA / Analog Out 4-20mA (Note 15)**										read-only	
2B3F	-	2B3F	11072	-	11072	Status of card	UINT16	bit-mapped	----cf-- --------	Flag fields: c=calibration not good; f=configuration error	1
2B40	-	2B78	11073	-	11129	Reserved	UINT16			Reserved	57
										Block Size:	58

Data and Control Block -- Network Card Overlay (Note 15)										read-only	
2B3F	-	2B3F	11072	-	11072	Card and Network Status	UINT16	bit-mapped	rhp----- -m-ii	Flags: r=run mode; h=card is healthy; p=using last good known programmable settings Server flag: m=modbus tcp/ip ok. IP Status ii: 00=IP not valid yet, 01=IP from p.settings; 11=using last good known IP.	1
2B40	-	2B40	11073	-	11073	Reserved				Reserved	1
2B41	-	2B43	11074	-	11076	MAC address in use by the network card	UINT16	bit-mapped	6 bytes	These 3 registers hold the 6 bytes of the card's Ethernet MAC address.	3
2B44	-	2B47	11077	-	11080	Current IP Address	UINT16			These 4 registers hold the 4 numbers (1 number each register) that make the IP address used by the card.	4
2B48	-	2B48	11081	-	11081	Current IP Mask Length	UINT16	0 to 32		Number of bits that are set in the IP address mask, starting from the Msb of the 32 bit word. Example 24 = 255.255.255.0; a value of 2 would mean 192.0.0.0	1
2B49	-	2B78	11082	-	11129	Reserved				Reserved	48
										Block Size:	58
Accumulators Block										read-only	
2EDF	-	2EE0	12000	-	12001	Option Card 1, Input 1 Accumulator	UINT32	0 to 999999999	number of transitions	These are unscaled counts. See option card section for scaled versions. Input accumulators count either or both transitions; output accumulators count both transitions. Unused accumulators always read 0.	2
2EE1	-	2EE6	12002	-	12007	Option Card 1, Inputs 2-4 Accumulators	UINT32	0 to 999999999	number of transitions		6
2EE7	-	2EE8	12008	-	12009	Option Card 1, Output or Relay 1 Accumulator	UINT32	0 to 999999999	number of transitions		2
2EE9	-	2EEE	12010	-	12015	Option Card 1, Output or Relays 2-4 Accumulators	UINT32	0 to 999999999	number of transitions		6
2EEF	-	2EF6	12016	-	12023	Option Card 2 Inputs Accumulators	UINT32	0 to 999999999	number of transitions		8
2EF7	-	2EFE	12024	-	12031	Option Card 2 Outputs Accumulators	UINT32	0 to 999999999	number of transitions		8
										Block Size:	32
Commands Section (Note 4)											
Resets Block (Note 9)										write-only	
4E1F	-	4E1F	20000	-	20000	Reset Max/Min Blocks	UINT16	password (Note 5)			1
4E20	-	4E20	20001	-	20001	Reset Energy Accumulators	UINT16	password (Note 5)			1
4E21	-	4E21	20002	-	20002	Reset Alarm Log (Note 21)	UINT16	password (Note 5)		Reply to a reset log command indicates that the command was accepted but not necessarily that the reset is finished. Poll log status block to determine this.	1
4E22	-	4E22	20003	-	20003	Reset System Log (Note 21)	UINT16	password (Note 5)			1
4E23	-	4E23	20004	-	20004	Reset Historical Log 1 (Note 21)	UINT16	password (Note 5)			1
4E24	-	4E24	20005	-	20005	Reset Historical Log 2 (Note 21)	UINT16	password (Note 5)			1
4E25	-	4E25	20006	-	20006	Reset Historical Log 3 (Note 21)	UINT16	password (Note 5)			1
4E26	-	4E26	20007	-	20007	Reset I/O Change Log (Note 21)	UINT16	password (Note 5)			1
4E27	-	4E2E	20008	-	20015	Reserved				Set to 0.	2
4E29	-	4E2A	20010	-	20011	Reserved				Reserved	2
4E2B	-	4E2B	20012	-	20012	Reset Option Card 1 Input Accumulators	UINT16	password (Note 5)			1
4E2C	-	4E2C	20013	-	20013	Reset Option Card 1 Output Accumulators	UINT16	password (Note 5)			1
4E2D	-	4E2D	20014	-	20014	Reset Option Card 2 Input Accumulators	UINT16	password (Note 5)			1
4E2E	-	4E2E	20015	-	20015	Reset Option Card 2 Output Accumulators	UINT16	password (Note 5)			1
										Block Size:	16
Privileged Commands Block										conditional write	
5207	-	5207	21000	-	21000	Initiate Meter Firmware Reprogramming	UINT16	password (Note 5)			1
5208	-	5208	21001	-	21001	Force Meter Restart	UINT16	password (Note 5)		causes a watchdog reset, always reads 0	1
5209	-	5209	21002	-	21002	Open Privileged Command Session	UINT16	password (Note 5)		meter will process command registers (this register through 'Close Privileged Command Session' register below) for 5 minutes or until the session is closed, whichever comes first.	1
520A	-	520A	21003	-	21003	Initiate Programmable Settings Update	UINT16	password (Note 5)		meter enters PS update mode	1

520B	-	520B	21004	-	21004	Calculate Programmable Settings Checksum (Note 3)	UINT16	0000 to 9999		meter calculates checksum on RAM copy of PS block	1
520C	-	520C	21005	-	21005	Programmable Settings Checksum (Note 3)	UINT16	0000 to 9999		read/write checksum register; PS block saved in nonvolatile memory on write (Note 8)	1
520D	-	520D	21006	-	21006	Write New Password (Note 3)	UINT16	0000 to 9999		write-only register; always reads zero	1
520E	-	520E	21007	-	21007	Terminate Programmable Settings Update (Note 3)	UINT16	any value		meter leaves PS update mode via reset	1
520F	-	5211	21008	-	21010	Set Meter Clock	TSTAMP	1Jan2000 - 31Dec2099	1 sec	saved only when 3rd register is written	3
5212	-	5212	21011	-	21011	Reserved				Reserved	1
5213	-	5219	21012	-	21018	Reserved				Reserved	7
521A	-	521A	21019	-	21019	Close Privileged Command Session	UINT16	any value		ends an open command session	1
										Block Size:	20
Encryption Block										**read/write**	
658F	-	659A	26000	-	26011	Perform a Secure Operation	UINT16			encrypted command to read password or change meter type	12
										Block Size:	12
Programmable Settings Section											
Basic Setups Block										**write only in PS update mode**	
752F	-	752F	30000	-	30000	CT multiplier & denominator	UINT16	bit-mapped	dddddddd mmmmmmmm	high byte is denominator (1 or 5, read-only), low byte is multiplier (1, 10, or 100)	1
7530	-	7530	30001	-	30001	CT numerator	UINT16	1 to 9999	none		1
7531	-	7531	30002	-	30002	PT numerator	UINT16	1 to 9999	none		1
7532	-	7532	30003	-	30003	PT denominator	UINT16	1 to 9999	none		1
7533	-	7533	30004	-	30004	PT multiplier & hookup	UINT16	bit-mapped	mmmmmmmm mmmmhhhh	mm…mm = PT multiplier (1, 10, 100, or 1000) hhhh = hookup enumeration (0 = 3 element wye[9S], 1 = delta 2 CTs[5S], 3 = 2.5 element wye[6S])	1
7534	-	7534	30005	-	30005	Averaging Method	UINT16	bit-mapped	--iiiiii b----sss	iiiii = interval (5,15,30,60) b = 0-block or 1-rolling sss = # subintervals (1,2,3,4)	1
7535	-	7535	30006	-	30006	Power & Energy Format	UINT16	bit-mapped	ppppiinn feee-ddd	pppp = power scale (0-unit, 3-kilo, 6-mega, 8-auto) ii = power digits after decimal point (0-3), applies only if f=1 and pppp is not auto nn = number of energy digits (5-8 --> 0-3) eee = energy scale (0-unit, 3-kilo, 6-mega) f = decimal point for power (0=data-dependant placement, 1=fixed placement per ii value) ddd = energy digits after decimal point (0-6) See note 10.	1
7536	-	7536	30007	-	30007	Operating Mode Screen Enables	UINT16	bit-mapped	-------x eeeeeeee	eeeeeeee = op mode screen rows on/off, rows top to bottom are bits low order to high order x = set to suppress PF on W/VAR/PF screens	1
7537	-	7537	30008	-	30008	Daylight Saving On Rule	UINT16	bit-mapped	hhhhhwww -dddmmmm	applies only if daylight savings in User Settings Flags =	1
7538	-	7538	30009	-	30009	Daylight Saving Off Rule	UINT16	bit-mapped	hhhhhwww -dddmmmm	on; specifies when to make changeover hhhhh = hour, 0-23 www = week, 1-4 for 1st - 4th, 5 for last ddd = day of week, 1-7 for Sun - Sat mmmm = month, 1-12 Example: 2AM on the 4th Sunday of March hhhhh=2, www=4, ddd=1, mmmm=3	1
7539	-	753D	30010	-	30014	Reserved				Reserved	5

753E	-	753E	30015	-	30015	User Settings Flags	UINT16	bit-mapped	---g-inn srpdywfa	g = enable alternate full scale bar graph current (1=on, 0=off) i = fixed scale and format current display 0=normal autoscaled current display 1=always show amps with no decimal places nn = number of phases for voltage & current screen (3=ABC, 2=AB, 1=A, 0=ABC) s = scroll (1=on, 0=off) r = password for reset in use (1=on, 0=off) p = password for configuration in use (1=on, 0=off) d = daylight saving time changes (0=off, 1=on) y = diagnostic events in system log (1=yes, 0=no) w = power direction (0=view as load, 1=view as generator) f = flip power factor sign (1=yes, 0=no) a = apparent power computation method (0=arithmetic sum, 1=vector sum)	1
753F	-	753F	30016	-	30016	Full Scale Current (for load % bar graph)	UINT16	0 to 9999	none	If non-zero and user settings bit g is set, this value replaces CT numerator in the full scale current calculation. (See Note 12)	1
7540	-	7547	30017	-	30024	Meter Designation	ASCII	16 char	none		8
7548	-	7548	30025	-	30025	COM1 setup	UINT16	bit-mapped	----dddd -0100110	dddd = reply delay (* 50 msec)	1
7549	-	7549	30026	-	30026	COM2 setup	UINT16	bit-mapped	----dddd -ppp-bbb	ppp = protocol (1-Modbus RTU, 2-Modbus ASCII, 3-	1
754A	-	754A	30027	-	30027	COM2 address	UINT16	1 to 247	none		1
754B	-	754B	30028	-	30028	Limit #1 Identifier	UINT16	0 to 65535		use Modbus address as the identifier (see notes 7, 11, 12)	1
754C	-	754C	30029	-	30029	Limit #1 Out High Setpoint	SINT16	-200.0 to +200.0	0.1% of full scale	Setpoint for the "above" limit (LM1), see notes 11-12.	1
754D	-	754D	30030	-	30030	Limit #1 In High Threshold	SINT16	-200.0 to +200.0	0.1% of full scale	Threshold at which "above" limit clears; normally less than or equal to the "above" setpoint; see notes 11-12.	1
754E	-	754E	30031	-	30031	Limit #1 Out Low Setpoint	SINT16	-200.0 to +200.0	0.1% of full scale	Setpoint for the "below" limit (LM2), see notes 11-12.	1
754F	-	754F	30032	-	30032	Limit #1 In Low Threshold	SINT16	-200.0 to +200.0	0.1% of full scale	Threshold at which "below" limit clears; normally greater than or equal to the "below" setpoint; see notes 11-12.	1
7550	-	7554	30033	-	30037	Limit #2	SINT16	same as Limit #1	same as Limit #1	same as Limit #1	5
7555	-	7559	30038	-	30042	Limit #3	SINT16				5
755A	-	755E	30043	-	30047	Limit #4	SINT16				5
755F	-	7563	30048	-	30052	Limit #5	SINT16				5
7564	-	7568	30053	-	30057	Limit #6	SINT16				5
7569	-	756D	30058	-	30062	Limit #7	SINT16				5
756E	-	7572	30063	-	30067	Limit #8	SINT16				5
7573	-	7582	30068	-	30083	Reserved				Reserved	16
7583	-	75C2	30084	-	30147	Reserved				Reserved	64
75C3	-	75C3	30148	-	30148	watts loss due to iron when watts positive	UINT16	0 to 99.99	0.01%		1
75C4	-	75C4	30149	-	30149	watts loss due to copper when watts positive	UINT16	0 to 99.99	0.01%		1
75C5	-	75C5	30150	-	30150	var loss due to iron when watts positive	UINT16	0 to 99.99	0.01%		1
75C6	-	75C6	30151	-	30151	var loss due to copper when watts positive	UINT16	0 to 99.99	0.01%		1
75C7	-	75C3	30152	-	30152	watts loss due to iron when watts negative	UINT16	0 to 99.99	0.01%		1
75C8	-	75C48	30153	-	30153	watts loss due to copper when watts negative	UINT16	0 to 99.99	0.01%		1
75C9	-	75C9	30154	-	30154	var loss due to iron when watts negative	UINT16	0 to 99.99	0.01%		1
75CA	-	75CA	30155	-	30155	var loss due to copper when watts negative	UINT16	0 to 99.99	0.01%		1

75CB	-	75CB	30156	-	30156	transformer loss compensation user settings flag	UINT16	bit-mapped	-------- ----cfwv	c - 0 disable compensation for losses due to copper, 1 enable compensaion for losses due to copper f - 0 disable compensation for losses due to iron, 1 enable compensaion for losses due to iron w - 0 add watt compensation, 1 subtract watt compensation v - 0 add var compensation, 1 subtract var compensation	1
75CC	-	75E5	30157	-	30182	Reserved				Reserved	26
75E6	-	75E6	30183	-	30183	Programmable Settings Update Counter	UINT16	0-65535		Increments each time programmable settings are changed; occurs when new checksum is calculated.	1
75E7	-	7626	30184	-	30247	Reserved for Software Use				Reserved	64
										Block Size:	248
Log Setups Block										**write only in PS update mode**	
7917	-	7917	31000	-	31000	Historical Log #1 Sizes	UINT16	bit-mapped	eeeeeeee ssssssss	high byte is number of registers to log in each record (0-117), low byte is number of flash sectors for the log (see note 19) 0 in either byte disables the log	1
7918	-	7918	31001	-	31001	Historical Log #1 Interval	UINT16	bit-mapped	00000000 hgfedcba	only 1 bit set: a=1 min, b=3 min, c=5 min, d=10 min, e=15 min, f=30 min, g=60 min, h=EOI pulse	1
7919	-	7919	31002	-	31002	Historical Log #1, Register #1 Identifier	UINT16	0 to 65535		use Modbus address as the identifier (see note 7)	1
791A	-	798D	31003	-	31118	Historical Log #1, Register #2 - #117 Identifiers	UINT16	0 to 65535		same as Register #1 Identifier	116
798E	-	79D6	31119	-	31191	Historical Log #1 Software Buffer				Reserved for software use.	73
79D7	-	7A96	31192	-	31383	Historical Log #2 Sizes, Interval, Registers & Software Buffer	same as Historical Log #1				192
7A97	-	7B56	31384	-	31575	Historical Log #3 Sizes, Interval, Registers & Software Buffer	same as Historical Log #1				192
7B57	-	7B57	31576	-	31576	Waveform Capture Sample Rate & Pretrigger	UINT16	bit-mapped	----ssss -ppppppp	ssss = sample rate. Rate is 2^{ssss} samples per 60 Hz cycle. Range is 5-9. Ex: 2^5 --> 32 samples per cycle @ 60 Hz = 1920 samples per second. ppppppp = number of pretrigger cycles. Range is 1 to (n-1) where n is the total number of 60 Hz cycles in the capture buffer. Ex: for 32 samples per cycle, capture is 64 cycles, pretrigger range is 1-63.	1
7B58	-	7B58	31577	-	31577	PQ Enable Mask	UINT16	bit-mapped	-------v vvCCCVVV	VVV = Voltage surge for phases CBA	1
7B59	-	7B59	31578	-	31578	Waveform Capture Trigger Enable Mask	UINT16	bit-mapped	-------v vvCCCVVV	CCC = Current surge for phases CBA vvv = Voltage sag for phases CBA	1
7B5A	-	7B5A	31579	-	31579	PQ & Waveform Log Sizes	UINT16	bit-mapped	pppppppp wwwwwwww	high byte is number of flash sectors for the power quality (PQ) log, low byte is number of flash sectors for the waveform capture log (see note 19)	1
7B5B	-	7B5B	31580	-	31580	Reserved					1
7B5C	-	7B5C	31581	-	31581	Voltage Surge Capture Trigger Threshold for Van / Vab channel	UINT16	-200.0 to +200.0	0.1% of full scale	See limits for details; Threshold of zero disables waveform triggering by that channel.	1
7B5D	-	7B5D	31582	-	31582	Current Surge Capture Trigger Threshold for Ia channel	UINT16	-200.0 to +200.0	0.1% of full scale	See limits for details; Threshold of zero disables waveform triggering by that channel.	1
7B5E	-	7B5E	31583	-	31583	Voltage Sag Capture Trigger Threshold for Van / Vab channel	UINT16	-200.0 to +200.0	0.1% of full scale	See limits for details; Threshold of zero disables waveform triggering by that channel.	1
7B5F	-	7B61	31584	-	31586	Reserved					3
7B62	-	7B67	31587	-	31592	Surge & Sag Capture Trigger Thresholds for Vbn / Vbc & Ib channels	UINT16	-200.0 to +200.0	0.1% of full scale	Same as Van / Vab & Ia channels above	6
7B68	-	7B6D	31593	-	31598	Surge & Sag Capture Trigger Thresholds for Vcn / Vca & Ic channels	UINT16	-200.0 to +200.0	0.1% of full scale	Same as Van / Vab & Ia channels above	6
7B6E	-	7B76	31599	-	31607	Reserved					9
										Block Size:	608

7D02	-	7D02	32003	-	32003	Reserved				Reserved	1
7D03	-	7D03	32004	-	32004	Protocol	UINT16	bit-mapped	-------- -----ppp-	ppp= 100 =DNP3; 010=Ascii Modbus; 001=Rtu Modbus Set to 0 when an analog board is installed.	1
7D04	-	7D04	32005	-	32005	Reply delay	UINT16	0 to 65535	milliseconds	Delay to reply to a Modbus transaction after receiving it. Set to 0 when an analog board is installed	1
7D05	-	7D3E	32006	-	32063	Reserved				Reserved	58
										Block Size:	63
Settings Registers for Digital I/O Relay Card									**First Overlay**	**write only in PS update mode**	
7D00	-	7D00	32001	-	32001	Input#1 - 2 bindings & logging enables	UINT16	bit-mapped	-------- 2222 1111	One nibble for each input. Assuming "abcd" as the bits in each nibble: "a": select this input for EOI (End Of Interval)pulse sensing. "b": log this input when pulse is detected "cc": Input event trigger mode - Contact sensing method; 00 = none; 01 = open to close; 10 = close to open; 11 = any change.	1
7D01	-	7D01	32002	-	32002	Relay #1 Delay to Operate	UINT16	0.1 second units		Delay to operate the relay since request.	1
7D02	-	7D02	32003	-	32003	Relay #1 Delay to Release	UINT16	0.1 second units		Delay to release the relay since request.	1
7D03	-	7D08	32004	-	32009	Reserved	UINT16			Set to 0.	6
7D09	-	7D09	32010	-	32010	Relay #2 Delay to Operate	UINT16	0.1 second units		Delay to operate the relay since request.	1
7D0A	-	7D0A	32011	-	32011	Relay #2 Delay to Release	UINT16	0.1 second units		Delay to release the relay since request.	1
7D0B	-	7D20	32012	-	32033	Reserved	UINT16			Set to 0.	22
7D21	-	7D21	32034	-	32034	Input Accumulators Scaling	UINT16	bit-mapped	-------- 22221111	* 4 bits per accumulator * 0xF disables the accumulation * 0-5 = power of divisor for the scaled accumulator Example: count=12456, 4bits=3: divisor=10^3=1000 & scaled accumulator=12.	1
7D22	-	7D22	32035	-	32035	Relay Accumulators Scaling	UINT16	bit-mapped	-------- 22221111		1
7D23	-	7D3E	32036	-	32063	Reserved				Set to 0.	28
										Block Size:	63
Settings Registers for Digital I/O Pulse Output Card									**First Overlay**	**write only in PS update mode**	
7D00	-	7D00	32001	-	32001	Input#1 - 4 bindings & logging enables	UINT16	bit-mapped	44443333 22221111	One nibble for each of the 4 inputs. Assuming "-bcc" as the bits in each nibble: "b": Log this input when pulse is detected "cc": Input event trigger mode - Contact sensing method; 00 = none; 01 = open to close; 10 = close to open; 11 = any change.	1
7D01	-	7D01	32002	-	32002	Source for Pulse Ouput#1	UINT16	enumeration	-----ppp ----vvvv	"ppp" (Phase) : 000 = none, 001 = Phase A, 010 = Phase B, 011 = Phase C, 100 = All Phases, 101 = Pulse from EOI(End Of Interval). "vvvv"(Value) : 0000= none, 0001 = Wh, 0010 = +Wh, 0011 = -Wh, 0100= Varh, 0101 = +Varh, 0110 = -Varh, 0111 = VAh, 1000= Received Wh, 1001= Delivered Wh, 1010= Inductive Varh, 1011 = Capacitive Varh	1

7D02	-	7D02	32003	-	32003	Kt [Wh/pulse] factor for Pulse Output#1	UINT16	bit-mapped	ddVVVVVV VVVVVVVV	"V…V" = not scaled energy value per pulse, from 0 to 9999. "dd"= decimal point position: 00=0.XXXX, 01=X.XXX, 10=XX.XX, 11= X.XXX.	1
7D03	-	7D04	32004	-	32005	Output#2 Assignment and Kt	UINT16	same as Output #1			2
7D05	-	7D06	32006	-	32007	Output#3 Assignment and Kt	UINT16	same as Output #1			2
7D07	-	7D08	32008	-	32009	Output#4 Assignment and Kt	UINT16	same as Output #1			2
7D09	-	7D09	32010	-	32010	Input Accumulators Scaling	UINT16	bit-mapped	44443333 22221111	see Relay Card above	1
7D0A	-	7D0A	32011	-	32011	Output Accumulators Scaling	UINT16	bit-mapped	44443333 22221111		1
7D0B	-	7D3E	32012	-	32063	Reserved				Reserved	52
										Block Size:	63
Settings Registers for Digital I/O Relay Card									**Second Overlay**	**write only in PS update mode**	
7D3F	-	7D46	32064	-	32071	Input#1 Label	ASCII	16 char			8
7D47	-	7D4E	32072	-	32079	Input#1 Low State Name	ASCII	16 char			8
7D4F	-	7D56	32080	-	32087	Input#1 High State Name	ASCII	16 char			8
7D57	-	7D6E	32088	-	32111	Input#2 Label and State Names	same as Input#1				24
7D6F	-	7D9E	32112	-	32159	Reserved				Reserved	48
7D9F	-	7DA6	32160	-	32167	Relay#1 Label	ASCII	16 char			8
7DA7	-	7DAE	32168	-	32175	Relay#1 Open State Name	ASCII	16 char			8
7DAF	-	7DB6	32176	-	32183	Relay#1 Closed State Name	ASCII	16 char			8
7DB7	-	7DCE	32184	-	32207	Relay#2 Label and State Names	same as Relay#1				24
7DCF	-	7DFE	32208	-	32255	Reserved				Reserved	48
7DFF	-	7E06	32256	-	32263	Input#1 Accumulator Label	ASCII	16 char			8
7E07	-	7E0E	32264	-	32271	Input#2 Accumulator Label	ASCII	16 char			8
7E0F	-	7E1E	32272	-	32287	Reserved				Reserved	16
7E1F	-	7E1F	32288	-	32288	Input#1 Accumulator Kt	UINT16	bit-mapped	ddVVVVVV VVVVVVVV	KT power factor for the Pulse Output "V" is raw power value in Wh/pulse from 0 to 9999. "dd"=decimal point position: 00=0.XXXX, 01=X.XXX, 10=XX.XX, 11= X.XXX.	1
7E20	-	7E20	32289	-	32289	Input#2 Accumulator Kt	UINT16	bit-mapped	ddVVVVVV VVVVVVVV		1
7E21	-	7F3E	32290	-	32575	Reserved				Reserved	286
										Block Size:	512
Settings Registers for Digital I/O Pulse Output Card									**Second Overlay**	**write only in PS update mode**	
7D3F	-	7D46	32064	-	32071	Input#1 Label	ASCII	16 char			8
7D47	-	7D4E	32072	-	32079	Input#1 Low State Name	ASCII	16 char			8
7D4F	-	7D56	32080	-	32087	Input#1 High State Name	ASCII	16 char			8
7D57	-	7D6E	32088	-	32111	Input#2 Label and State Names	same as Input#1				24
7D6F	-	7D86	32112	-	32135	Input#3 Label and State Names	same as Input#1				24
7D87	-	7D9E	32136	-	32159	Input#4 Label and State Names	same as Input#1				24
7D9F	-	7DA6	32160	-	32167	Output#1 Label	ASCII	16 char			8
7DA7	-	7DAE	32168	-	32175	Output#1 Open State Name	ASCII	16 char			8
7DAF	-	7DB6	32176	-	32183	Output#1 Closed State Name	ASCII	16 char			8
7DB7	-	7DCE	32184	-	32207	Output#2 Label and State Names	same as Output#1				24
7DCF	-	7DE6	32208	-	32231	Output#3 Label and State Names	same as Output#1				24
7DE7	-	7DFE	32232	-	32255	Output#4 Label and State Names	same as Output#1				24
7DFF	-	7E06	32256	-	32263	Input#1 Accumulator Label	ASCII	16 char			8
7E07	-	7E0E	32264	-	32271	Input#2 Accumulator Label	ASCII	16 char			8
7E0F	-	7E16	32272	-	32279	Input#3 Accumulator Label	ASCII	16 char			8
7E17	-	7E1E	32280	-	32287	Input#4 Accumulator Label	ASCII	16 char			8

7E1F	-	7E1F	32288	-	32288	Input#1 Accumulator Kt	UINT16	bit-mapped	ddVVVVVV VVVVVVVV	KT power factor for the accumulator input "V" is raw power value in Wh/pulse from 0 to 9999. "dd"=decimal point position: 00=0.XXXX, 01=X.XXX, 10=XX.XX, 11= X.XXX.	1
7E20	-	7E20	32289	-	32289	Input#2 Accumulator Kt	UINT16	bit-mapped	ddVVVVVV VVVVVVVV		1
7E21	-	7E21	32290	-	32290	Input#3 Accumulator Kt	UINT16	bit-mapped	ddVVVVVV VVVVVVVV		1
7E22	-	7E22	32291	-	32291	Input#4 Accumulator Kt	UINT16	bit-mapped	ddVVVVVV VVVVVVVV		1
7E23	-	7F3E	32292	-	32575	Reserved				Reserved	284
										Block Size:	512
Settings Registers for Analog Out 0-1mA / Analog Out 4-20mA Cards									**Second Overlay**	**write only in PS update mode**	
7D3F	-	7D3F	32064	-	32064	Update rate	UINT16	0 to 65535	milliseconds	Fixed -- see specifications.	1
7D40	-	7D40	32065	-	32065	Channel direction - 1mA Card only!	UINT16	bit-mapped	-------- ----4321	Full range output for 0-1mA card only: A bit set(1) means full range (-1mA to +1mA); a bit cleared(0) means source only (0mA to +1mA).	1
7D41	-	7D41	32066	-	32066	Format parameter for output #1	UINT16	bit-mapped	-------- ---f suwb	Format of the polled register:f=float 32; s=signed 32 bit int; u=unsigned 32 bit int; w=signed 16 bit int; b=unsigned 16 bit int.	1
7D42	-	7D42	32067	-	32067	Source register for Output#1	UINT16	0 to 65535		This register should be programmed with the address of the register whose value is to be used for current output. In different words, the current level output of analog board will follow the value of the register addressed here.	1
7D43	-	7D44	32068	-	32069	High value of source register for output#1	Depends on the format parameter			Value read from the source register at which High nominal current will be output. Example: for the 4-20mA card, if this register is programmed with 750, then the current output will be 20mA when the value read from the source register is 750.	2
7D45	-	7D46	32070	-	32071	Low value of source register for output#1	Depends on the format parameter			Value read from the source register at which Low nominal current will be output. Example: for the 4-20mA card, if this register is programmed with 0, then the current output will be 4mA when the value read from the source register is 0.	2
7D47	-	7D4C	32072	-	32077	Analog output#2 format, register, max & min	Same as analog output#1				6
7D4D	-	7D52	32078	-	32083	Analog output#3 format, register, max & min	Same as analog output#1				6
7D53	-	7D58	32084	-	32089	Analog output#4 format, register, max & min	Same as analog output#1				6
7D59	-	7F3E	32090	-	32575	Reserved				Reserved	486
										Block Size:	512
Settings Registers for Network Cards									**Second Overlay**	**write only in PS update mode**	
7D3F	-	7D3F	32064	-	32064	General Options		bit-mapped	-------- ---s cme	Servers enable(1) or disable(0) flags: s=Modbus_TCP_server; c=Modbus_TCP_client; m=HTTP Modbus RTU for diagnostics. Sleep enabled e=0; sleep disabled e=1.	1
7D40	-	7D40	32065	-	32065	Reserved					1
7D41	-	7D48	32066	-	32073	Host name label	ASCII			16 bytes (8 registers)	8
7D49	-	7D4C	32074	-	32077	IP card network address	UINT16	0 to 255 (IPv4)		These 4 registers hold the 4 numbers (1 number each register) that make the IP address used by the card.	4
7D4D	-	7D4D	32078	-	32078	IP network address mask length	UINT16	0 to 32		Number of bits that are set in the IP address mask, starting from the Msb of the 32 bit word. Example 24 = 255.255.255.0; a value of 2 would mean 192.0.0.0	1
7D4E	-	7D51	32079	-	32082	IP card network gateway address	UINT16	0 to 255 (IPv4)		These 4 registers hold the 4 numbers that make the IP gateway address on network.	4
7D52	-	7D55	32083	-	32086	IP card network DNS #1 address	UINT16	0 to 255 (IPv4)		IP address of the DNS#1 on the network.	4
7D55	-	7D58	32087	-	32090	IP card network DNS #2 address	UINT16	0 to 255 (IPv4)		IP address of the DNS#2 on the network.	4

7D59	-	7D5E	32091	-	32095	Reserved				Write this with 0 to keep future compatibility.	5
7D5F	-	7D62	32096	-	32355	Reserved				Reserved	260
7E63	-	7E63	32356	-	32356	Reserved					1
7E64	-	7E64	32357	-	32357	Reserved				Set to 0	1
7E65	-	7E84	32358	-	32389	Reserved					32
7E85	-	7E85	32390	-	32390	Reserved					1
7E86	-	7EC5	32391	-	32454	Reserved					64
7EC6	-	7ED5	32455	-	32470	Reserved					16
7ED6	-	7EE5	32471	-	32485	Reserved					16
7EE6	-	7F3E	32486	-	32575	Reserved				Set to 0	89
										Block Size:	512

Programmable Settings for Option Card 2

Option Card 2 Setups Block										write only in PS update mode	
80E7	-	80E7	33000	-	33000	Class ID of the Option Card 2 Settings	UINT16	bit-mapped	-------- cccctttt	Which class (cccc) and type(tttt) of card the Option Settings for Card 2 apply to. See note 22	1
80E8	-	8126	33001	-	33063	Settings for Option Card 2, First Overlay -- see below	Register assignments depend on which type of card is in the slot. See overlays below.				63
8127	-	8326	33064	-	33575	Settings for Option Card 2, Second Overlay -- see below	Register assignments depend on which type of card is in the slot. See overlays below.				512
										Block Size:	576

Overlays for Option Card 2 Programmable Settings

Settings Registers for any communication capable card, including network and analog cards									First Overlay	write only in PS update mode	
80E8	-	80E8	33001	-	33001	Slave address	UINT16	1~247 (for Modbus) 1~65534 (for DNP)	none	Slave address of the unit. The communication capable card is always a master. Set to 0 when an analog board is installed.	1
80E9	-	80E9	33002	-	33002	Speed and format	UINT16	bit-mapped	-abcde--fghijklm	Bps: a=57600; b=38400; c=19200; d=14400; e=9600 Stop bits 'f': cleared 1 stop bit, set 2 stop bits Parity: g=even; h=odd; i=none Data bits: j=8; k=7; l=6; m=5 Set to 0 when an analog board is installed.	1
80EA	-	80EA	33003	-	33003	Reserved	UINT16	bit-mapped		Reserved	1
80EB	-	80EB	33004	-	33004	Protocol	UINT16	bit-mapped	-------- -----ppp-	ppp= 100 =DNP3; 010=Ascii Modbus; 001=Rtu Modbus Set to 0 when an analog board is installed.	1
80EC	-	80EC	33005	-	33005	Reply delay	UINT16	0 to 65535	milliseconds	Delay to reply to a Modbus transaction after receiving it. Set to 0 when an analog board is installed	1
80ED	-	8126	33006	-	33063	Reserved				Reserved	58
										Block Size:	63
Settings Registers for Digital I/O Relay Card									First Overlay	write only in PS update mode	
80E8	-	80E8	33001	-	33001	Input#1 - 2 bindings & logging enables	UINT16	bit-mapped	-------- 2222 1111	One nibble for each input. Assuming "abcd" as the bits in each nibble: "a": select this input for EOI (End Of Interval)pulse sensing. "b": log this input when pulse is detected "cc": Input event trigger mode - Contact sensing method; 00 = none; 01 = open to close; 10 = close to open; 11 = any change.	1
80E9	-	80E9	33002	-	33002	Relay #1 Delay to Operate	UINT16	0.1 second units		Delay to operate the relay since request.	1
80EA	-	80EA	33003	-	33003	Relay #1 Delay to Release	UINT16	0.1 second units		Delay to release the relay since request.	1
80EB	-	80F0	33004	-	33009	Reserved	UINT16			Set to 0.	6

80F1	-	80F1	33010	-	33010	Relay #2 Delay to Operate	UINT16	0.1 second units		Delay to operate the relay since request.	1
80F2	-	80F2	33011	-	33011	Relay #2 Delay to Release	UINT16	0.1 second units		Delay to release the relay since request.	1
80F3	-	8108	33012	-	33033	Reserved	UINT16			Set to 0.	22
8109	-	8109	33034	-	33034	Input Accumulators Scaling	UINT16	bit-mapped	-------- 22221111	* 4 bits per accumulator	1
810A	-	810A	33035	-	33035	Relay Accumulators Scaling	UINT16	bit-mapped	-------- 22221111	* 0xF disables the accumulation * 0-5 = power of divisor for the scaled accumulator Example: count=12456, 4bits=3: divisor=10^3=1000 & scaled accumulator=12.	1
810B	-	8126	33036	-	33063	Reserved				Reserved	28
										Block Size:	63
Settings Registers for Digital I/O Pulse Output Card									**First Overlay**	**write only in PS update mode**	
80E8	-	80E8	33001	-	33001	Input#1 - 4 bindings & logging enables	UINT16	bit-mapped	44443333 22221111	One nibble for each of the 4 inputs. Assuming "-bcc" as the bits in each nibble: "b": Log this input when pulse is detected "cc": Input event trigger mode - Contact sensing method; 00 = none; 01 = open to close; 10 = close to open; 11 = any change.	1
80E9	-	80E9	33002	-	33002	Source for Pulse Ouput#1	UINT16	enumeration	-----ppp ----vvvv	"ppp" (Phase) : 000 = none, 001 = Phase A, 010 = Phase B, 011 = Phase C, 100 = All Phases, 101 = Pulse from EOI(End Of Interval). "vvvv"(Value) : 0000= none, 0001 = Wh, 0010 = +Wh, 0011 = -Wh, 0100= Varh, 0101 = +Varh, 0110 = -Varh, 0111 = VAh, 1000= Received Wh, 1001= Delivered Wh, 1010= Inductive Varh, 1011 = Capacitive Varh	1
80EA	-	80EA	33003	-	33003	Kt [Wh/pulse] factor for Pulse Output#1	UINT16	bit-mapped	ddVVVVVV VVVVVVVV	"V…V" = not scaled energy value per pulse, from 0 to 9999. "dd"= decimal point position: 00=0.XXXX, 01=X.XXX, 10=XX.XX, 11= X.XXX.	1
80EB	-	80EC	33004	-	33005	Output#2 Assignment and Kt	UINT16	same as Output #1			2
80ED	-	80EE	33006	-	33007	Output#3 Assignment and Kt	UINT16	same as Output #1			2
80EF	-	80F0	33008	-	33009	Output#4 Assignment and Kt	UINT16	same as Output #1			2
80F1	-	80F1	33010	-	33010	Input Accumulators Scaling	UINT16	bit-mapped	44443333 22221111	see Relay Card above	1
80F2	-	80F2	33011	-	33011	Output Accumulators Scaling	UINT16	bit-mapped	44443333 22221111		1
80F3	-	8126	33012	-	33063	Reserved				Reserved	52
										Block Size:	63
Settings Registers for Digital I/O Relay Card									**Second Overlay**	**write only in PS update mode**	
8127	-	812E	33064	-	33071	Input#1 Label	ASCII	16 char			8
812F	-	8136	33072	-	33079	Input#1 Low State Name	ASCII	16 char			8
8137	-	813E	33080	-	33087	Input#1 High State Name	ASCII	16 char			8
813F	-	8156	33088	-	33111	Input#2 Label and State Names	same as Input#1				24
8157	-	8186	33112	-	33159	Reserved					48
8187	-	818E	33160	-	33167	Relay#1 Label	ASCII	16 char			8

818F	-	8196	33168	-	33175	Relay#1 Open State Name	ASCII	16 char			8
8197	-	819E	33176	-	33183	Relay#1 Closed State Name	ASCII	16 char			8
819F	-	81B6	33184	-	33207	Relay#2 Label and State Names	same as Relay#1				24
81B7	-	81E6	33208	-	33255	Reserved					48
81E7	-	81EE	33256	-	33263	Input#1 Accumulator Label	ASCII	16 char			8
81EF	-	81F6	33264	-	33271	Input#2 Accumulator Label	ASCII	16 char			8
81F7	-	8206	33272	-	33287	Reserved					16
8207	-	8207	33288	-	33288	Input#1 Accumulator Kt	UINT16	bit-mapped	ddVVVVVV VVVVVVVV	KT power factor for the Pulse Output	1
8208	-	8208	33289	-	33289	Input#2 Accumulator Kt	UINT16	bit-mapped	ddVVVVVV VVVVVVVV	"V" is raw power value in Wh/pulse from 0 to 9999. "dd"=decimal point position: 00=0.XXXX, 01=X.XXX, 10=XX.XX, 11= X.XXX.	1
8209	-	8326	33290	-	33575	Reserved					286
										Block Size:	512
Settings Registers for Digital I/O Pulse Output Card									**Second Overlay**	**write only in PS update mode**	
8127	-	812E	33064	-	33071	Input#1 Label	ASCII	16 char			8
812F	-	8136	33072	-	33079	Input#1 Low State Name	ASCII	16 char			8
8137	-	813E	33080	-	33087	Input#1 High State Name	ASCII	16 char			8
813F	-	8156	33088	-	33111	Input#2 Label and State Names	same as Input#1				24
8157	-	816E	33112	-	33135	Input#3 Label and State Names	same as Input#1				24
816F	-	8186	33136	-	33159	Input#4 Label and State Names	same as Input#1				24
8187	-	818E	33160	-	33167	Output#1 Label	ASCII	16 char			8
818F	-	8196	33168	-	33175	Output#1 Open State Name	ASCII	16 char			8
8197	-	819E	33176	-	33183	Output#1 Closed State Name	ASCII	16 char			8
819F	-	81B6	33184	-	33207	Output#2 Label and State Names	same as Output#1				24
81B7	-	81CE	33208	-	33231	Output#3 Label and State Names	same as Output#1				24
81CF	-	81E6	33232	-	33255	Output#4 Label and State Names	same as Output#1				24
81E7	-	81EE	33256	-	33263	Input#1 Accumulator Label	ASCII	16 char			8
81EF	-	81F6	33264	-	33271	Input#2 Accumulator Label	ASCII	16 char			8
81F7	-	81FE	33272	-	33279	Input#3 Accumulator Label	ASCII	16 char			8
81FF	-	8206	33280	-	33287	Input#4 Accumulator Label	ASCII	16 char			8
8207	-	8207	33288	-	33288	Input#1 Accumulator Kt	UINT16	bit-mapped	ddVVVVVV VVVVVVVV	KT power factor for the accumulator input	1
8208	-	8208	33289	-	33289	Input#2 Accumulator Kt	UINT16	bit-mapped	ddVVVVVV VVVVVVVV	"V" is raw power value in Wh/pulse from 0 to 9999.	1
8209	-	8209	33290	-	33290	Input#3 Accumulator Kt	UINT16	bit-mapped	ddVVVVVV VVVVVVVV	"dd"=decimal point position: 00=0.XXXX, 01=X.XXX,	1
820A	-	820A	33291	-	33291	Input#4 Accumulator Kt	UINT16	bit-mapped	ddVVVVVV VVVVVVVV	10=XX.XX, 11= X.XXX.	1
820B	-	8326	33292	-	33575	Reserved				Reserved	284
										Block Size:	512
Settings Registers for Analog Out 0-1mA / Analog Out 4-20mA Cards									**Second Overlay**	**write only in PS update mode**	
8127	-	8127	33064	-	33064	Update rate	UINT16	0 to 65535	milliseconds	Fixed -- see specifications.	1
8128	-	8128	33065	-	33065	Channel direction - 1mA Card only!	UINT16	bit-mapped	-------- ----4321	Full range output for 0-1mA card only: A bit set(1) means full range (-1mA to +1mA); a bit cleared(0) means source only (0mA to +1mA).	1
8129	-	8129	33066	-	33066	Format parameter for output #1	UINT16	bit-mapped	-------- ---f suwb	Format of the polled register:f=float 32; s=signed 32 bit int; u=unsigned 32 bit int; w=signed 16 bit int; b=unsigned 16 bit int.	1
812A	-	812A	33067	-	33067	Source register for Output#1	UINT16	0 to 65535		This register should be programmed with the address of the register whose value is to be used for current output. In different words, the current level output of analog board will follow the value of the register addressed here.	1

812B	-	812C	33068	-	33069	High value of source register for output#1	Depends on the format parameter			Value read from the source register at which High nominal current will be output. Example: for the 4-20mA card, if this register is programmed with 750, then the current output will be 20mA when the value read from the source register is 750.	2
812D	-	812E	33070	-	33071	Low value of source register for output#1	Depends on the format parameter			Value read from the source register at which Low nominal current will be output. Example: for the 4-20mA card, if this register is programmed with 0, then the current output will be 4mA when the value read from the source register is 0.	2
812F	-	8134	33072	-	33077	Analog output#2 format, register, max & min	Same as analog output#1				6
8135	-	813A	33078	-	33083	Analog output#3 format, register, max & min	Same as analog output#1				6
813B	-	8140	33084	-	33089	Analog output#4 format, register, max & min	Same as analog output#1				6
8141	-	8326	33090	-	33575	Reserved				Reserved	486
										Block Size:	512
Settings Registers for Network Cards									**Second Overlay**	**write only in PS update mode**	
8127	-	8127	33064	-	33064	General Options		bit-mapped	-------- ---s cme	Servers enable(1) or disable(0) flags: s=Modbus_TCP_server; c=Modbus_TCP_client; m=HTTP Modbus RTU for diagnostics. Sleep enabled e=0; sleep disabled e=1.	1
8128	-	8128	33065	-	33065	Reserved					1
8129	-	8130	33066	-	33073	Host name label	ASCII			16 bytes (8 registers)	8
8131	-	8134	33074	-	33077	IP card network address	UINT16	0 to 255 (IPv4)		These 4 registers hold the 4 numbers (1 number each register) that make the IP address used by the card.	4
8135	-	8135	33078	-	33078	IP network address mask length	UINT16	0 to 32		Number of bits that are set in the IP address mask, starting from the Msb of the 32 bit word. Example 24 = 255.255.255.0; a value of 2 would mean 192.0.0.0	1
8136	-	8139	33079	-	33082	IP card network gateway address	UINT16	0 to 255 (IPv4)		These 4 registers hold the 4 numbers that make the IP gateway address on network.	4
813A	-	813D	33083	-	33086	IP card network DNS #1 address	UINT16	0 to 255 (IPv4)		IP address of the DNS#1 on the network.	4
813E	-	8141	33087	-	33090	IP card network DNS #2 address	UINT16	0 to 255 (IPv4)		IP address of the DNS#2 on the network.	4
8142	-	8146	33091	-	33095	Reserved				Set to 0.	5
8147	-	824A	33096	-	33355	Reserved				Reserved	260
824B	-	824B	33356	-	33356	Reserved					1
824C	-	824C	33357	-	33357	Reserved				Reserved	1
824D	-	826C	33358	-	33389	Reserved					32
826D	-	826D	33390	-	33390	Reserved					1
826E	-	82AD	33391	-	33454	Reserved					64
82AE	-	82BD	33455	-	33470	Reserved					16
82BE	-	82CC	33471	-	33485	Reserved					16
82CD	-	8326	33486	-	33575	Reserved				Reserved	89
										Block Size:	512
12-Bit Readings Section											
12-Bit Block										**read-only except as noted**	
9C40	-	9C40	40001	-	40001	System Sanity Indicator	UINT16	0 or 1	none	0 indicates proper meter operation	1
9C41	-	9C41	40002	-	40002	Volts A-N	UINT16	2047 to 4095	volts	2047= 0, 4095= +150	1
9C42	-	9C42	40003	-	40003	Volts B-N	UINT16	2047 to 4095	volts	volts = 150 * (register - 2047) / 2047	1
9C43	-	9C43	40004	-	40004	Volts C-N	UINT16	2047 to 4095	volts		1

9C44	-	9C44	40005	-	40005	Amps A	UINT16	0 to 4095	amps	0= -10, 2047= 0, 4095= +10	1
9C45	-	9C45	40006	-	40006	Amps B	UINT16	0 to 4095	amps	amps = 10 * (register - 2047) / 2047	1
9C46	-	9C46	40007	-	40007	Amps C	UINT16	0 to 4095	amps		1
9C47	-	9C47	40008	-	40008	Watts, 3-Ph total	UINT16	0 to 4095	watts	0= -3000, 2047= 0, 4095= +3000	1
9C48	-	9C48	40009	-	40009	VARs, 3-Ph total	UINT16	0 to 4095	VARs	watts, VARs, VAs =	1
9C49	-	9C49	40010	-	40010	VAs, 3-Ph total	UINT16	2047 to 4095	VAs	3000 * (register - 2047) / 2047	1
9C4A	-	9C4A	40011	-	40011	Power Factor, 3-Ph total	UINT16	1047 to 3047	none	1047= -1, 2047= 0, 3047= +1 pf = (register - 2047) / 1000	1
9C4B	-	9C4B	40012	-	40012	Frequency	UINT16	0 to 2730	Hz	0= 45 or less, 2047= 60, 2730= 65 or more freq = 45 + ((register / 4095) * 30)	1
9C4C	-	9C4C	40013	-	40013	Volts A-B	UINT16	2047 to 4095	volts	2047= 0, 4095= +300	1
9C4D	-	9C4D	40014	-	40014	Volts B-C	UINT16	2047 to 4095	volts	volts = 300 * (register - 2047) / 2047	1
9C4E	-	9C4E	40015	-	40015	Volts C-A	UINT16	2047 to 4095	volts		1
9C4F	-	9C4F	40016	-	40016	CT numerator	UINT16	1 to 9999	none	CT = numerator * multiplier / denominator	1
9C50	-	9C50	40017	-	40017	CT multiplier	UINT16	1, 10, 100	none		1
9C51	-	9C51	40018	-	40018	CT denominator	UINT16	1 or 5	none		1
9C52	-	9C52	40019	-	40019	PT numerator	UINT16	1 to 9999	none	PT = numerator * multiplier / denominator	1
9C53	-	9C53	40020	-	40020	PT multiplier	UINT16	1, 10, 100, 1000	none		1
9C54	-	9C54	40021	-	40021	PT denominator	UINT16	1 to 9999	none		1
9C55	-	9C56	40022	-	40023	W-hours, Positive	UINT32	0 to 99999999	Wh per energy format	* 5 to 8 digits	2
9C57	-	9C58	40024	-	40025	W-hours, Negative	UINT32	0 to 99999999	Wh per energy format	* decimal point implied, per energy format	2
9C59	-	9C5A	40026	-	40027	VAR-hours, Positive	UINT32	0 to 99999999	VARh per energy format	* resolution of digit before decimal point = units, kilo, or mega, per energy format	2
9C5B	-	9C5C	40028	-	40029	VAR-hours, Negative	UINT32	0 to 99999999	VARh per energy format		2
9C5D	-	9C5E	40030	-	40031	VA-hours	UINT32	0 to 99999999	VAh per energy format	* see note 10	2
9C5F	-	9C60	40032	-	40033	W-hours, Positive, Phase A	UINT32	0 to 99999999	Wh per energy format		2
9C61	-	9C62	40034	-	40035	W-hours, Positive, Phase B	UINT32	0 to 99999999	Wh per energy format		2
9C63	-	9C64	40036	-	40037	W-hours, Positive, Phase C	UINT32	0 to 99999999	Wh per energy format		2
9C65	-	9C66	40038	-	40039	W-hours, Negative, Phase A	UINT32	0 to 99999999	Wh per energy format		2
9C67	-	9C68	40040	-	40041	W-hours, Negative, Phase B	UINT32	0 to 99999999	Wh per energy format		2
9C69	-	9C6A	40042	-	40043	W-hours, Negative, Phase C	UINT32	0 to 99999999	Wh per energy format		2
9C6B	-	9C6C	40044	-	40045	VAR-hours, Positive, Phase A	UINT32	0 to 99999999	VARh per energy format		2
9C6D	-	9C6E	40046	-	40047	VAR-hours, Positive, Phase B	UINT32	0 to 99999999	VARh per energy format		2
9C6F	-	9C70	40048	-	40049	VAR-hours, Positive, Phase C	UINT32	0 to 99999999	VARh per energy format		2
9C71	-	9C72	40050	-	40051	VAR-hours, Negative, Phase A	UINT32	0 to 99999999	VARh per energy format		2
9C73	-	9C74	40052	-	40053	VAR-hours, Negative, Phase B	UINT32	0 to 99999999	VARh per energy format		2
9C75	-	9C76	40054	-	40055	VAR-hours, Negative, Phase C	UINT32	0 to 99999999	VARh per energy format		2
9C77	-	9C78	40056	-	40057	VA-hours, Phase A	UINT32	0 to 99999999	VAh per energy format		2
9C79	-	9C7A	40058	-	40059	VA-hours, Phase B	UINT32	0 to 99999999	VAh per energy format		2
9C7B	-	9C7C	40060	-	40061	VA-hours, Phase C	UINT32	0 to 99999999	VAh per energy format		2
9C7D	-	9C7D	40062	-	40062	Watts, Phase A	UINT16	0 to 4095	watts		1
9C7E	-	9C7E	40063	-	40063	Watts, Phase B	UINT16	0 to 4095	watts		1
9C7F	-	9C7F	40064	-	40064	Watts, Phase C	UINT16	0 to 4095	watts		1
9C80	-	9C80	40065	-	40065	VARs, Phase A	UINT16	0 to 4095	VARs	0= -3000, 2047= 0, 4095= +3000	1
9C81	-	9C81	40066	-	40066	VARs, Phase B	UINT16	0 to 4095	VARs	watts, VARs, VAs =	1
9C82	-	9C82	40067	-	40067	VARs, Phase C	UINT16	0 to 4095	VARs	3000 * (register - 2047) / 2047	1
9C83	-	9C83	40068	-	40068	VAs, Phase A	UINT16	2047 to 4095	VAs		1
9C84	-	9C84	40069	-	40069	VAs, Phase B	UINT16	2047 to 4095	VAs		1
9C85	-	9C85	40070	-	40070	VAs, Phase C	UINT16	2047 to 4095	VAs		1
9C86	-	9C86	40071	-	40071	Power Factor, Phase A	UINT16	1047 to 3047	none	1047= -1, 2047= 0, 3047= +1 pf = (register - 2047) / 1000	1
9C87	-	9C87	40072	-	40072	Power Factor, Phase B	UINT16	1047 to 3047	none		1
9C88	-	9C88	40073	-	40073	Power Factor, Phase C	UINT16	1047 to 3047	none		1
9C89	-	9CA2	40074	-	40099	Reserved	N/A	N/A	none	Reserved	26
9CA3	-	9CA3	40100	-	40100	Reset Energy Accumulators	UINT16	password (Note 5)		write-only register; always reads as 0	1
										Block Size:	100

						Log Retrieval Section					
Log Retrieval Block										**read/write except as noted**	
C34C	-	C34D	49997	-	49998	Log Retrieval Session Duration	UINT32	0 to 4294967294	4 msec	0 if no session active; wraps around after max count	2
C34E	-	C34E	49999	-	49999	Log Retrieval Session Com Port	UINT16	0 to 4		0 if no session active, 1-4 for session active on COM1 - COM4	1
C34F	-	C34F	50000	-	50000	Log Number, Enable, Scope	UINT16	bit-mapped	nnnnnnnn esssssss	high byte is the log number (0-system, 1-alarm, 2-history1, 3-history2, 4-history3, 5-I/O changes, 11-waveform, (11 reserved for future use) e is retrieval session enable(1) or disable(0) sssssss is what to retrieve (0-normal record, 1-timestamps only, 2-complete memory image (no data validation if image)	1
C350	-	C350	50001	-	50001	Records per Window or Batch, Record Scope Selector, Number of Repeats	UINT16	bit-mapped	wwwwwwww snnnnnnn	high byte is records per window if s=0 or records per batch if s=1, low byte is number of repeats for function 35 or 0 to suppress auto-incrementing; max number of repeats is 8 (RTU) or 4 (ASCII) total windows, a batch is all the windows	1
C351	-	C352	50002	-	50003	Offset of First Record in Window	UINT32	bit-mapped	ssssssss nnnnnnnn nnnnnnnn nnnnnnnn	ssssssss is window status (0 to 7-window number, 0xFF-not ready); this byte is read-only. nn…nn is a 24-bit record number. The log's first record is latched as a reference point when the session is enabled. This offset is a record index relative to that point. Value provided is the relative index of the whole or partial record that begins the window.	2
C353	-	C3CD	50004	-	50126	Log Retrieve Window	UINT16	see comments	none	mapped per record layout and retrieval scope, read-only	123
										Block Size:	130
Log Status Block										**read only**	
						Alarm Log Status Block					
C737	-	C738	51000	-	51001	Log Size in Records	UINT32	0 to 4,294,967,294	record		2
C739	-	C73A	51002	-	51003	Number of Records Used	UINT32	1 to 4,294,967,294	record		2
C73B	-	C73B	51004	-	51004	Record Size in Bytes	UINT16	14 to 242	byte		1
C73C	-	C73C	51005	-	51005	Log Availability	UINT16		none	0=available, 1-4=in use by COM1-4, 0xFFFF=not available (log size=0)	1
C73D	-	C73F	51006	-	51008	Timestamp, First Record	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
C740	-	C742	51009	-	51011	Timestamp, Last Record	TSTAMP	1Jan2000 - 31Dec2099	1 sec		3
C743	-	C746	51012	-	51015	Reserved				Reserved	4
										Individual Log Status Block Size:	16
C747	-	C756	51016	-	51031	**System Log Status Block**		same as alarm log status block			16
C757	-	C766	51032	-	51047	**Historical Log 1 Status Block**		same as alarm log status block			16
C767	-	C776	51048	-	51063	**Historical Log 2 Status Block**		same as alarm log status block			16
C777	-	C786	51064	-	51079	**Historical Log 3 Status Block**		same as alarm log status block			16
C787	-	C796	51080	-	51095	**I/O Change Log Status Block**		same as alarm log status block			16
C797	-	C7B6	51096	-	51127	**Reserved**					32
										Block Size:	128
						End of Map					

Data Formats	
ASCII	ASCII characters packed 2 per register in high, low order and without any termination characters. For example, "Shark200" would be 4 registers containing 0x5378, 0x6172, 0x6B32, 0x3030.
SINT16 / UINT16	16-bit signed / unsigned integer.
SINT32 / UINT32	32-bit signed / unsigned integer spanning 2 registers. The lower-addressed register is the high order half.
FLOAT	32-bit IEEE floating point number spanning 2 registers. The lower-addressed register is the high order half (i.e., contains the exponent).
TSTAMP	3 adjacent registers, 2 bytes each. First (lowest-addressed) register high byte is year (0-99), low byte is month (1-12). Middle register high byte is day(1-31), low byte is hour (0-23 plus DST bit). DST (daylight saving time) bit is bit 6 (0x40). Third register high byte is minutes (0-59), low byte is seconds (0-59). For example, 9:35:07AM on October 12, 2049 would be 0x310A, 0x0C49, 0x2307, assuming DST is in effect.

Notes

1 All registers not explicitly listed in the table read as 0. Writes to these registers will be accepted but won't actually change the register (since it doesn't exist).

2 Meter Data Section items read as 0 until first readings are available or if the meter is not in operating mode. Writes to these registers will be accepted but won't actually change the register.

3 Register valid only in programmable settings update mode. In other modes these registers read as 0 and return an illegal data address exception if a write is attempted.

4 Meter command registers always read as 0. They may be written only when the meter is in a suitable mode. The registers return an illegal data address exception if a write is attempted in an incorrect mode.

5 If the password is incorrect, a valid response is returned but the command is not executed. Use 5555 for the password if passwords are disabled in the programmable settings.

6 M denotes a 1,000,000 multiplier.

7 Each identifier is a Modbus register. For entities that occupy multiple registers (FLOAT, SINT32, etc.) all registers making up the entity must be listed, in ascending order. For example, to log phase A volts, VAs, voltage THD, and VA hours, the register list would be 0x3E7, 0x3E8, 0x411, 0x412, 0x176F, 0x61D, 0x61E and the number of registers (0x7917 high byte) would be 7.

8 Writing this register causes data to be saved permanently in nonvolatile memory. Reply to the command indicates that it was accepted but not whether or not the save was successful. This can only be determined after the meter has restarted.

9 Reset commands make no sense if the meter state is LIMP. An illegal function exception will be returned.

10 Energy registers should be reset after a format change.

11 Entities to be monitored against limits are identified by Modbus address. Entities occupying multiple Modbus registers, such as floating point values, are identified by the lower register address. If any of the 8 limits is unused, set its identifier to zero. If the indicated Modbus register is not used or is a nonsensical entity for limits, it will behave as an unused limit.

12 There are 2 setpoints per limit, one above and one below the expected range of values. LM1 is the "too high" limit, LM2 is "too low". The entity goes "out of limit" on LM1 when its value is greater than the setpoint. It remains "out of limit" until the value drops below the in threshold. LM2 works similarly, in the opposite direction. If limits in only one direction are of interest, set the in threshold on the "wrong" side of the setpoint. Limits are specified as % of full scale, where full scale is automatically set appropriately for the entity being monitored:

current	FS = CT numerator * CT multiplier
voltage	FS = PT numerator * PT multiplier
3 phase power	FS = CT numerator * CT multiplier * PT numerator * PT multiplier * 3 [* SQRT(3) for delta hookup]
single phase power	FS = CT numerator * CT multiplier * PT numerator * PT multiplier [* SQRT(3) for delta hookup]
frequency	FS = 60 (or 50)
power factor	FS = 1.0
percentage	FS = 100.0
angle	FS = 180.0

13 THD not available shows 10000 in all THD and harmonic magnitude and phase registers for the channel. THD may be unavailable due to low V or I amplitude, delta hookup (V only), or V-switch setting.

14 Option Card Identification and Configuration Block is an image of the EEPROM on the card.

15 A block of data and control registers is allocated for each option slot. Interpretation of the register data depends on what card is in the slot.

16 Measurement states: Off occurs during programmable settings updates; Run is the normal measuring state; Limp indicates that an essentail non-volatile memory block is corrupted; and Warmup occurs briefly (approximately 4 seconds) at startup while the readings stabilize. Run state is required for measurement, historical logging, demand interval processing, limit alarm evaluation, min/max comparisons, and THD calculations. Resetting min/max or energy is allowed only in run and off states; warmup will return a busy exception. In limp state, the meter reboots at 5 minute intervals in an effort to clear the problem.

17 Limits evaluation for all entites except demand averages commences immediately after the warmup period. Evaluation for demand averages, maximum demands, and minimum demands commences at the end of the first demand interval after startup.

18 Autoincrementing and function 35 must be used when retrieving waveform logs.

19 Depending on the V-switch setting, there are 15, 29, or 45 flash sectors available in a common pool for distribution among the 3 historical and waveform logs. The pool size, number of sectors for each log, and the number of registers per record together determine the maximum number of records a log can hold.

S = number of sectors assigned to the log,
H = number of Modbus registers to be monitored in each historical record (up to 117),
R = number of bytes per record = (12 + 2H) for historical logs
N = number of records per sector = 65516 / R, rounded down to an integer value (no partial records in a sector)
T = total number of records the log can hold = S * N
T = S * 2 for the waveform log.

20	Only 1 input on all digital input cards may be specified as the end-of-interval pulse.
21	Logs cannot be reset during log retrieval. Waveform log cannot be reset while storing a capture. Busy exception will be returned.
22	Combination of class and type currently defined are: 0x23 = Fiber cards 0x24 = Network card 0x41 = Relay card 0x42 = Pulse card 0x81 = 0-1mA analog output card 0x82 = 4-20mA analog output card.

Appendix C
Using DNP Mapping for the Shark® 200 Meter

C.1: Overview

This Appendix describes the functionality of the **DNP** Lite protocol in the Shark® 200 meter. A DNP **programmer** must follow this information in order to retrieve data from the Shark® 200 meter using this protocol. DNP Lite is a reduced set of the Distributed Network Protocol Version 3.0 subset 2, and it gives enough functionality to get critical measurements from the Shark® 200 meter.

The DNP Lite supports **class 0 object** only. No event generation is supported. The Shark® 200 meter when in DNP Lite will always act as a **secondary device (slave)**.

C.2: Physical Layer

DNP Lite uses **serial communication**. It can be assigned to **Port 2** (RS-485 compliant port) or any communication capable option board. Speed and data format is transparent for DNP Lite: they can be set to any supported value. The IrDA port cannot use DNP Lite.

C.3: Data Link Layer

The Shark® 200 meter can be assigned with a value from 1 to 65534 as the target **device address** for DNP Lite. The data link layer follows the standard frame FT3 used by the DNP Version 3.0 protocol, but only 3 functions are implemented: **Reset Link**, **Reset User** and **Link Status**, as depicted in the following table.

Function	Function Code
Reset Link	0
Reset User	1
Link Status	9

Table C.1: Supported Link Functions.[dst] and [src] are the device address of the Shark® 200 Meter and Master device, respectively.

Please refer to Section C.7 for more detail on supported frames for the data link layer.

In order to establish a clean communication with the Shark® 200 meter, we recommended you perform the **Reset Link** and **Reset User** functions. The **Link Status** is not mandatory but if queried it will be attended to. The inter-character **time-out** for DNP Lite is **1 second**. If this amount of time, or more, elapses between two consecutive characters within a FT3 frame, the frame will be dropped.

C.4: Application Layer

In the Shark® 200 meter, DNP Lite supports the **Read** function, **Write** Function, the **Direct Operate** function and the **Direct Operate Unconfirmed** function.

- The **Read** function (**code 01**) provides a means for reading the critical measurement data from the meter. This function should be posted to read object 60 variation 1, which will read all the available Class 0 objects from the DNP Lite register map. See register map in Section C.6. In order to retrieve all objects with their respective variations, the qualifier must be set to ALL (0x06). See Section C.7 for an example showing a read Class 0 request data from the meter.

- The **Write** function (**code 02**) provides a mean for clearing the Device restart bit in the Internal Indicator register only. This is mapped to Object 80, point 0 with variation 1. When clearing the restart device indicator use qualifier 0. Section C.7 shows the supported frames for this function.

- The **Direct Operate** function (**code 05**) is intended for resetting the energy counters and the demand counters (minimum and maximum energy registers). These actions are mapped to Object 12, point 0 and point 2, that are seen as a control relay.
  The relay must be operated (On) in 0 msec and released (Off) in 1 msec only. Qualifiers 0x17 or x28 are supported for writing the energy reset. Sample frames are shown in Section C.7.

- The **Direct Operate Unconfirmed** (or **Unacknowledged**) function (**code 06**) is intended for asking the communication port to switch to Modbus RTU protocol from DNP Lite. This switching is seen as a control relay mapped into Object 12, point 1 in the meter. The relay must be operated with qualifier 0x17, code 3 count 0, with 0 millisecond on and 1 millisecond off, only.
  After sending this request the current communication port will accept Modbus RTU frames only. To make this port go back to DNP protocol, the unit must be power-recycled. Section C.7 shows the constructed frame to perform DNP to Modbus RTU protocol change.

C.5: Error Reply

In the case of an unsupported function, or any other recognizable error, an error reply will be generated from the Shark® 200 meter to the Primary station (the requester). The Internal Indicator field will report the type of error: unsupported function or bad parameter.
The broadcast acknowledge and restart bit, are also signaled in the internal indicator but they do not indicate an error condition.

C.6: DNP Lite Register Map

Object 10 – Binary Output States

Object	Point	Var	Description	Format	Range	Multiplier	Units	Comments
10	0	2	Reset Energy Counters	BYTE	Always 1	N/A	None	Read by Class 0 Only
10	1	2	Change to Modbus RTU Protocol	BYTE	Always 1	N/A	None	Read by Class 0 Only
10	2	2	Reset Demand Cntrs (Max / Min)	BYTE	Always 1	N/A	None	Read by Class 0 Only

Object 12 – Control Relay Outputs

Object	Point	Var	Description	Format	Range	Multiplier	Units	Comments
12	0	1	Reset Energy Counters	N/A	N/A	N/A	none	Responds to Function 5 (Direct Operate), Qualifier Code 17x or 28x, Control Code 3, Count 0, On 0 msec, Off 1 msec ONLY.
12	1	1	Change to Modbus RTU Protocol	N/A	N/A	N/A	none	Responds to Function 6 (Direct Operate - No Ack), Qualifier Code 17x, Control Code 3, Count 0, On 0 msec, Off 1 msec ONLY.
12	2	1	Reset Demand Counters (Max / Min)	N/A	N/A	N/A	none	Responds to Function 5 (Direct Operate), Qualifier Code 17x or 28x, Control Code 3, Count 0, On 0 msec, Off 1 msec ONLY.

Object 20 – Binary Counters (Primary Readings) - Read via Class 0 only

Object	Point	Var	Description	Format	Range	Multiplier	Units	Comments
20	0	5	W-hours, Positive	UINT32	0 to 99999999	Multiplier = 10(n-d), where n and d are derived from the energy format. n = 0, 3, or 6 per energy format scale and d = number of decimal places.	W hr	example: energy format = 7.2K and W-hours counter = 1234567 n=3 (K scale), d=2 (2 digits after decimal point), multiplier = 10(3-2) = 101 = 10, so energy is 1234567 * 10 Whrs, or 12345.67 KWhrs
20	1	5	W-hours, Negative	UINT32	0 to 99999999		W hr	
20	2	5	VAR-hours, Positive	UINT32	0 to 99999999		VAR hr	
20	3	5	VAR-hours, Negative	UINT32	0 to 99999999		VAR hr	
20	4	5	VA-hours, Total	UINT32	0 to 99999999		VA hr	

Object 30 – Analog Inputs (Secondary Readings) - Read via Class 0 only

Object	Point	Var	Description	Format	Range	Multiplier	Units	Comments
30	0	4	Meter Health	sint16	0 or 1	N/A	None	0 = OK
30	1	4	Volts A-N	sint16	0 to 32767	(150 / 32768)	V	Values above 150V secondary read 32767.
30	2	4	Volts B-N	sint16	0 to 32767	(150 / 32768)	V	
30	3	4	Volts C-N	sint16	0 to 32767	(150 / 32768)	V	
30	4	4	Volts A-B	sint16	0 to 32767	(300 / 32768)	V	Values above 300V secondary read 32767.
30	5	4	Volts B-C	sint16	0 to 32767	(300 / 32768)	V	
30	6	4	Volts C-A	sint16	0 to 32767	(300 / 32768)	V	
30	7	4	Amps A	sint16	0 to 32767	(10 / 32768)	A	Values above 10A secondary read 32767.
30	8	4	Amps B	sint16	0 to 32767	(10 / 32768)	A	
30	9	4	Amps C	sint16	0 to 32767	(10 / 32768)	A	
30	10	4	Watts, 3-Ph total	sint16	-32768 to +32767	(4500 / 32768)	W	
30	11	4	VARs, 3-Ph total	sint16	-32768 to +32767	(4500 / 32768)	VAR	
30	12	4	VAs, 3-Ph total	sint16	0 to +32767	(4500 / 32768)	VA	
30	13	4	Power Factor, 3-Ph total	sint16	-1000 to +1000	0.001	None	
30	14	4	Frequency	sint16	0 to 9999	0.01	Hz	
30	15	4	Positive Watts, 3-Ph, Maximum Avg Demand	sint16	-32768 to +32767	(4500 / 32768)	W	
30	16	4	Positive VARs, 3-Ph, Maximum Avg Demand	sint16	-32768 to +32767	(4500 / 32768)	VAR	
30	17	4	Negative Watts, 3-Ph, Maximum Avg Demand	sint16	-32768 to +32767	(4500 / 32768)	W	
30	18	4	Negative VARs, 3-Ph, Maximum Avg Demand	sint16	-32768 to +32767	(4500 / 32768)	VAR	
30	19	4	VAs, 3-Ph, Maximum Avg Demand	sint16	-32768 to +32767	(4500 / 32768)	VA	
30	20	4	Angle, Phase A Current	sint16	-1800 to +1800	0.1	degree	
30	21	4	Angle, Phase B Current	sint16	-1800 to +1800	0.1	degree	
30	22	4	Angle, Phase C Current	sint16	-1800 to +1800	0.1	degree	
30	23	4	Angle, Volts A-B	sint16	-1800 to +1800	0.1	degree	
30	24	4	Angle, Volts B-C	sint16	-1800 to +1800	0.1	degree	
30	25	4	Angle, Volts C-A	sint16	-1800 to +1800	0.1	degree	
30	26	4	CT numerator	sint16	1 to 9999	N/A	none	CT ratio =
30	27	4	CT multiplier	sint16	1, 10, or 100	N/A	none	(numerator * multiplier) / denominator
30	28	4	CT denominator	sint16	1 or 5	N/A	none	
30	29	4	PT numerator	SINT16	1 to 9999	N/A	none	PT ratio =
30	30	4	PT multiplier	SINT16	1, 10, or 100	N/A	none	(numerator * multiplier) / denominator
30	31	4	PT denominator	SINT16	1 to 9999	N/A	none	
30	32	4	Neutral Current	SINT16	0 to 32767	(10 / 32768)	A	For 1A model, multiplier is (2 / 32768) and values above 2A secondary read 32767

.

Object 80 – Internal Indicator

Object	Point	Var	Description	Format	Range	Multiplier	Units	Comments
80	0	1	Device Restart Bit	N/A	N/A	N/A	none	Clear via Function 2 (Write), Qualifier Code 0.

C.7: DNP Message Layouts

Legend

All numbers are in hexadecimal base. In addition the following symbols are used.

dst	16 bit frame destination address
src	16 bit frame source address
crc	DNP Cyclic redundant checksum (polynomial $x^{16}+x^{13}+x^{12}+x^{11}+x^{10}+x^{7}+x^{6}+x^{5}+x^{2}+1$)
x	transport layer data sequence number
y	application layer data sequence number

Link Layer related frames

Reset Link

Request	05	64	05	C0	dst	src	crc
Reply	05	64	05	00	src	dst	crc

Reset User

Request	05	64	05	C1	dst	src	crc
Reply	05	64	05	00	src	dst	crc

Link Status

Request	05	64	05	C9	dst	src	crc
Reply	05	64	05	0B	src	dst	crc

Application Layer related frames

Clear Restart

Request	05	64	0E	C4	dst		src		crc	
	Cx	Cy	02	50	01	00	07	07	00	crc
Reply	05	64	0A	44	src		dst		crc	
	Cx	Cy	81	int. ind.	crc					

Class 0 Data

Request	05	64	0B	C4	dst		src		crc						
	Cx	Cy	01	3C	01	06	crc								
Request	05	64	14	C4	dst		src		crc						
(alternate)	Cx	Cy	01	3C	02	06	3C	03	06	3C	04	06	3C	01	06	crc
Reply	05	64	72	44	src		dst		crc						
(same for either request)	Cx	Cy	81	int. ind.	14	05	00	00	04	pt 0			pt 1		crc
	pt 1			pt 2			pt 3			pt 4			1E	04	crc
	00	00	20	pt 0		pt 1		pt 2		pt 3		pt 4		pt 5	pt6	crc
	pt6	pt 7		pt 8		pt 9		pt 10		pt 11		pt 12		pt 13		crc
		pt 15		pt 16		pt 17		pt 18		pt 19		pt 20		pt 21		crc
		pt 23		pt 24		pt 25		pt 26		pt 27		pt 28		pt 29		crc
		pt 31		pt 32		0A	02	00	00	02	pt0	pt1	pt2	crc		

Reset Energy

Request	05	64	18	C4	dst		src		crc								
	Cx	Cy	05	0C	01	17	01	00	03	00	00	00	00	00	01	00	crc
	00	00	00	crc													

Reply	05	64	1A	44	src		dst		crc								
	Cx	Cy	81	int. ind.	0C	01	17	01	00	03	00	00	00	00	00	00	crc
	01	00	00	00	00	crc											

Request	05	64	1A	C4	dst		src		crc								
(alternate)	Cx	Cy	05	0C	01	28	01	00	00	00	03	00	00	00	00	00	crc
	01	00	00	00	00	crc											

Reply	05	64	1C	44	src		dst		crc								
	Cx	Cy	81	int. ind.	0C	01	28	01	00	00	00	03	00	00	00	00	crc
	00	00	01	00	00	00	00	crc									

Switch to Modbus

Request	05	64	18	C4	dst		src		crc								
	Cx	Cy	06	0C	01	17	01	01	03	00	00	00	00	00	01	00	crc
	00	00	00	crc													

No Reply

Reset Demand (Maximums & Minimums)

Request	05	64	18	C4	dst		src		crc								
	Cx	Cy	05	0C	01	17	01	02	03	00	00	00	00	00	01	00	crc
	00	00	00	crc													

Reply	05	64	1A	44	src		dst		crc								
	Cx	Cy	81	int. ind.	0C	01	17	01	02	03	00	00	00	00	00	00	crc
	01	00	00	00	00	crc											

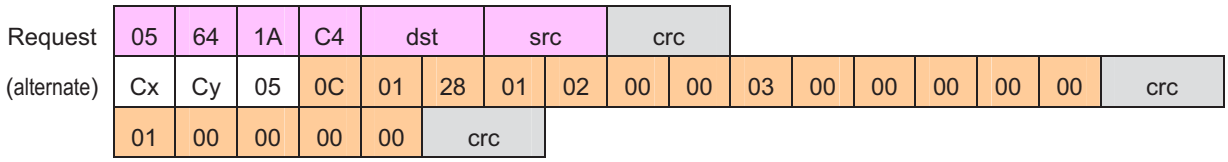
Request
05 64 1A C4 dst src crc
(alternate)
Cx Cy 05 0C 01 28 01 02 00 00 03 00 00 00 00 00 crc
01 00 00 00 00 crc

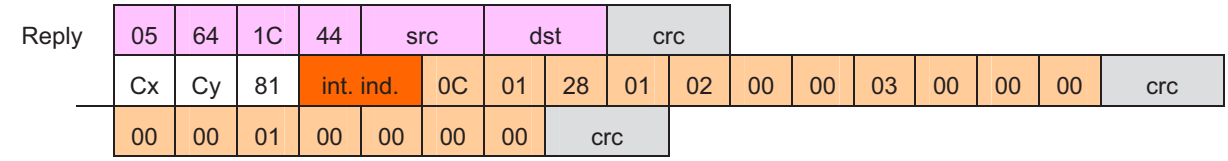
Reply
05 64 1C 44 src dst crc
Cx Cy 81 int. ind. 0C 01 28 01 02 00 00 03 00 00 00 crc
00 00 01 00 00 00 00 crc

Error Reply


Reply
05 64 0A 44 src dst crc
Cx Cy 81 int. ind. crc

Appendix D
Using the USB to IrDA Adapter (CAB6490)

D.1: Introduction

Com 1 of the Shark® 200 meter is the IrDA port, located on the face of the meter. One way to communicate with the IrDA port is with EIG's USB to IrDA Adapter (CAB6490), which allows you to access the Shark® 200 meter's data from a PC. This Appendix contains instructions for installing the USB to IrDA Adapter.

D.2: Installation Procedures

The **USB to IrDA Adapter** comes packaged with a **USB cable** and an **Installation CD**. Follow this procedure to install the Adapter on your PC.

1. **Connect** the USB **cable** to the USB to IrDA **Adapter**, and **plug** the USB into your PC's **USB port**.

2. Insert the **Installation CD** into your PC's CD ROM drive.

3. You will see the screen shown below. The **Found New Hardware Wizard** allows you to install the software for the Adapter. Click the Radio Button next to **Install from a list or specific location.**

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
This wizard helps you install software for:
USB-IrDA Adapter
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

4. Click **Next**. You will see the screen shown on the next page.

Select these options

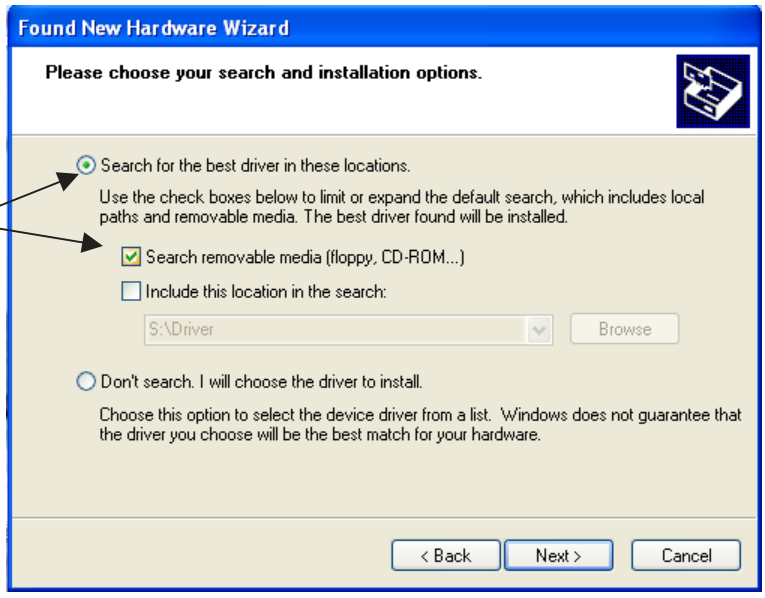
Found New Hardware Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM...)
Include this location in the search:
S:\Driver
Browse
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back
Next >
Cancel

5. Make sure the **first Radio Button** and the **first Checkbox** are selected, as shown in the above screen. These selections allow the Adapter's driver to be copied from the Installation disk to your PC.

6. Click **Next**. You will see the screen shown below.

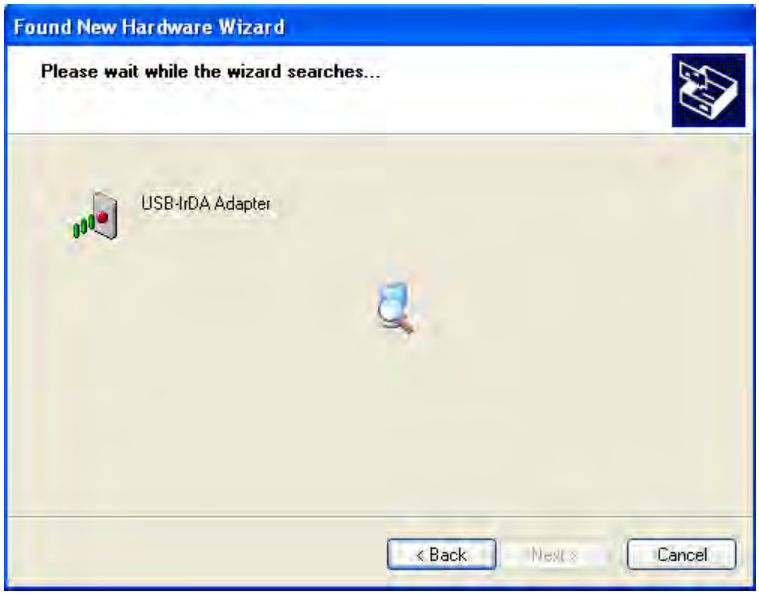

7. When the **driver** for the **Adapter** is found, you will see the screen shown on the next page.

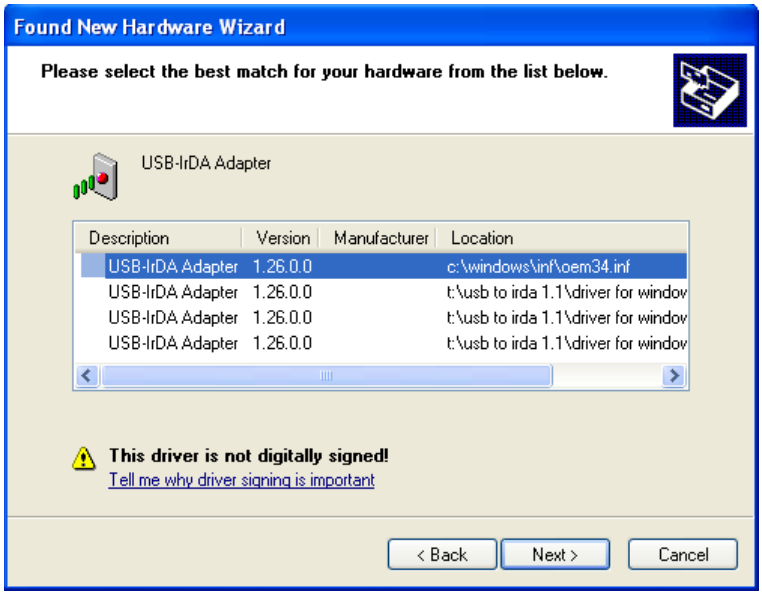
Found New Hardware Wizard
Please select the best match for your hardware from the list below.
USB-IrDA Adapter
Description
Version
Manufacturer
Location
USB-IrDA Adapter 1.26.0.0 c:\windows\inf\oem34.inf
USB-IrDA Adapter 1.26.0.0 t:\usb to irda 1.1\driver for windov
USB-IrDA Adapter 1.26.0.0 t:\usb to irda 1.1\driver for windov
USB-IrDA Adapter 1.26.0.0 t:\usb to irda 1.1\driver for windov
This driver is not digitally signed!
Tell me why driver signing is important
< Back
Next >
Cancel

8. You do not need to be concerned about the message on the bottom of the screen. Click **Next** to **continue** with the installation.

9. You will see the two windows shown below. Click **Continue Anyway**.

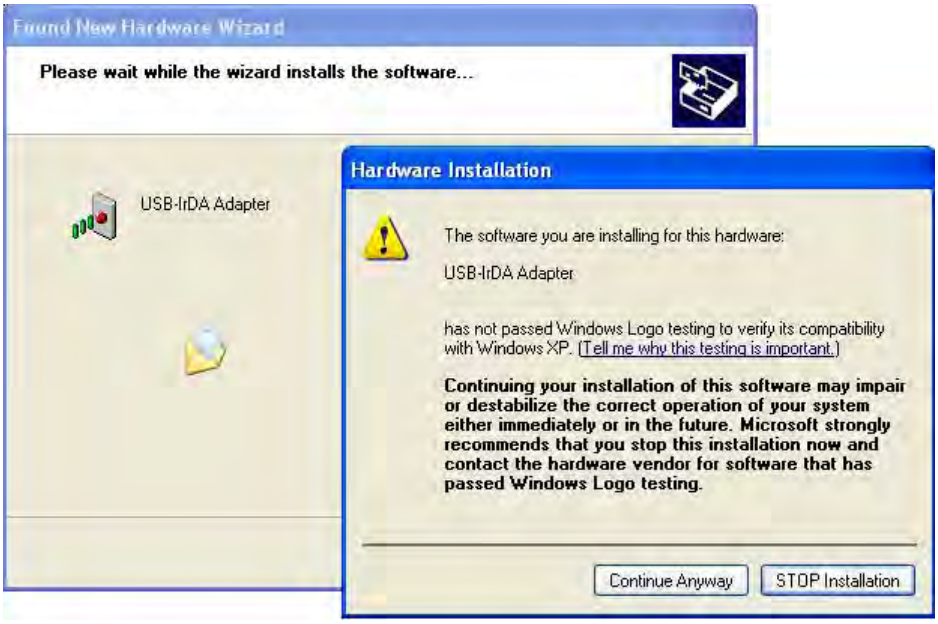
Found New Hardware Wizard
Please wait while the wizard installs the software...
USB-IrDA Adapter
Hardware Installation
The software you are installing for this hardware:
USB-IrDA Adapter
has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

10. You will see the screen shown on the next page while the Adapter's **driver** is being **installed** on your PC.

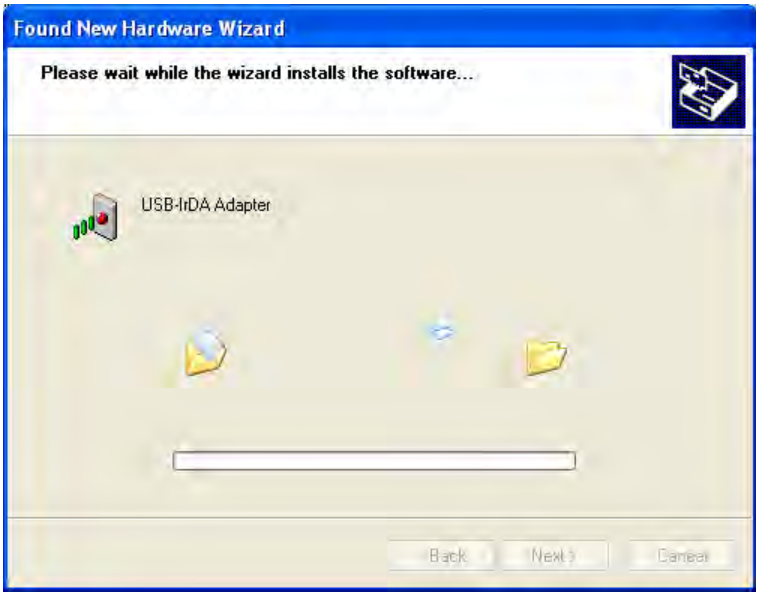

11. When the **driver installation** is **complete**, you will see the screen shown below.

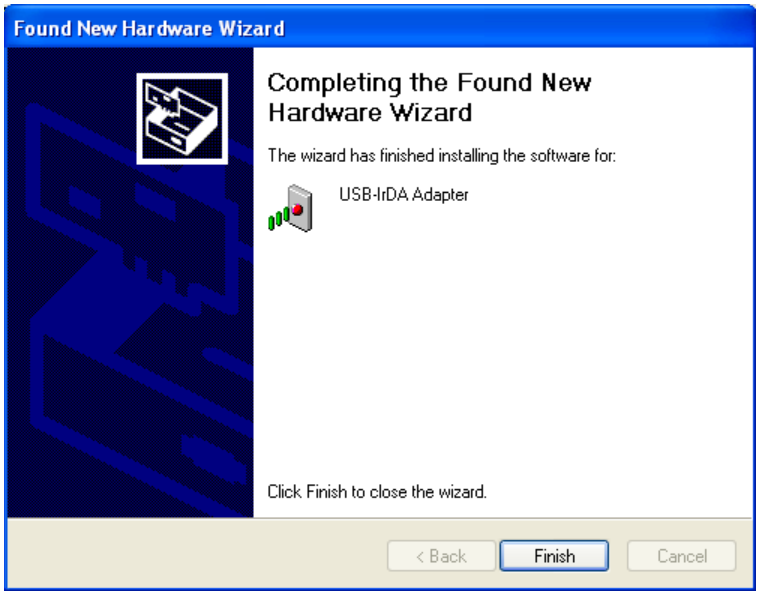

12. Click **Finish** to close the **Found New Hardware Wizard**.

IMPORTANT! Do NOT remove the Installation CD until the entire procedure has been completed.

13. Position the **USB to IrDA Adapter** so that it points directly at the **IrDA** on the front of the Shark® 200 meter. It should be as close as possible to the meter, and not more than 15 inches/38 cm away from it.

14. The **Found New Hardware Wizard** screen opens again.

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
This wizard helps you install software for:
USB-IrDA Adapter
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

This time, click the Radio Button next to **Install the software automatically**.

15. Click **Next**. You will see the screen shown below.

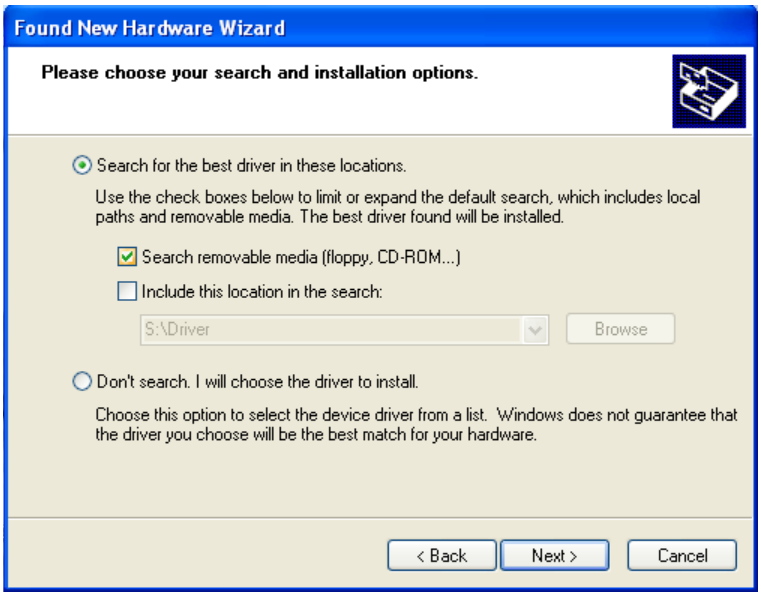
Found New Hardware Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM...)
Include this location in the search:
S:\Driver
Browse
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back
Next >
Cancel

16. Make sure the **first Radio Button** and the **first Checkbox** are selected, as shown in the above screen. Click **Next**. You will see the two screens shown on the next page.

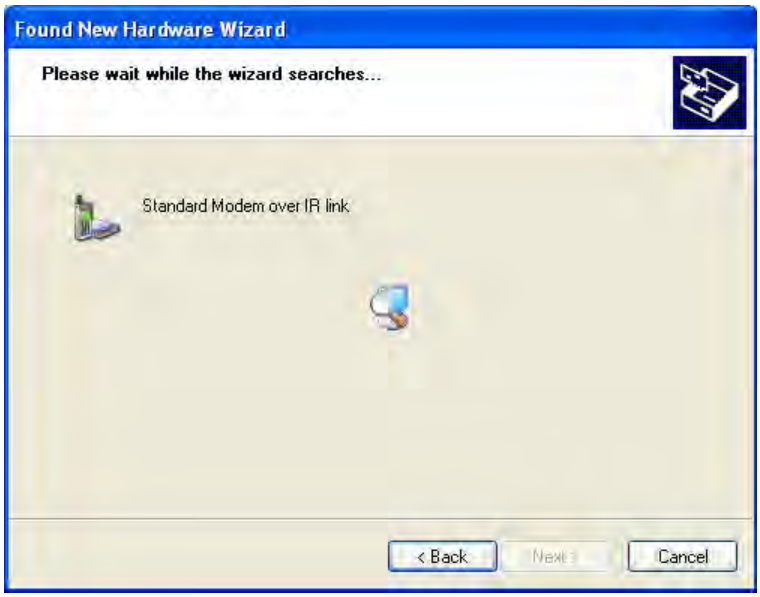

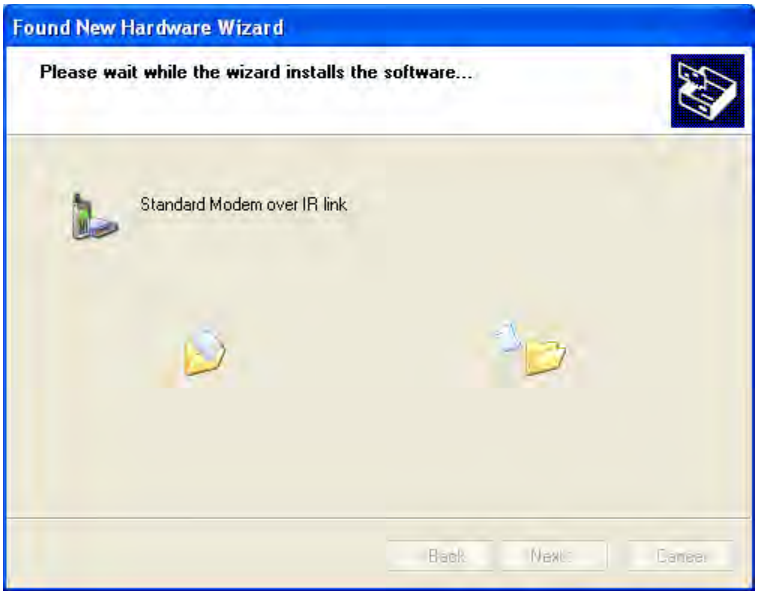

17. When the **installation** is **complete**, you will see the screen shown on the next page.

Found New Hardware Wizard
Completing the Found New Hardware Wizard
The wizard has finished installing the software for:
Standard Modem over IR link
Click Finish to close the wizard.
Back
Finish
Cancel

Click **Finish** to close the **Found New Hardware Wizard**.

18. To **verify** that your Adapter has been installed properly, click **Start**>**Settings**>**Control Panel**>**System**>**Hardware**>**Device Manager**. The USB to IrDA Adapter should appear under both Infrared Devices and Modems (click on the + sign to display all configured modems). See the example screen below.
    NOTE: If the Adapter doesn't show up under Modems, move it away from the meter for a minute and then position it pointing at the IrDA, again.

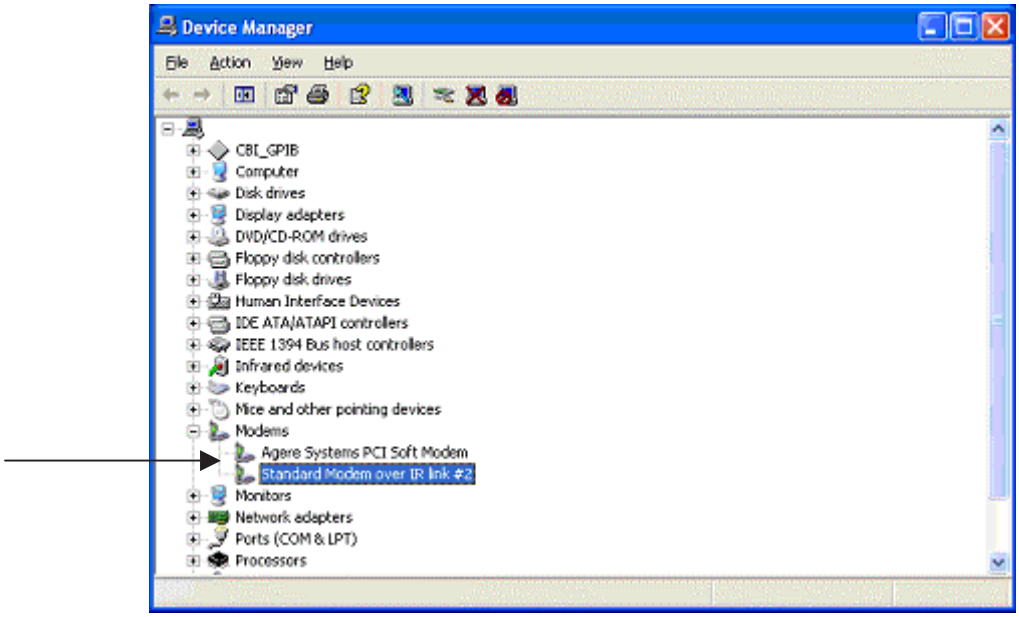

19. Double-click on the **Standard Modem over IR link** (this is the USB to IrDA Adapter). You will see the **Properties** screen for the Adapter.

20. Click the **Modem** tab. The **Com Port** that the Adapter is using is displayed in the screen.

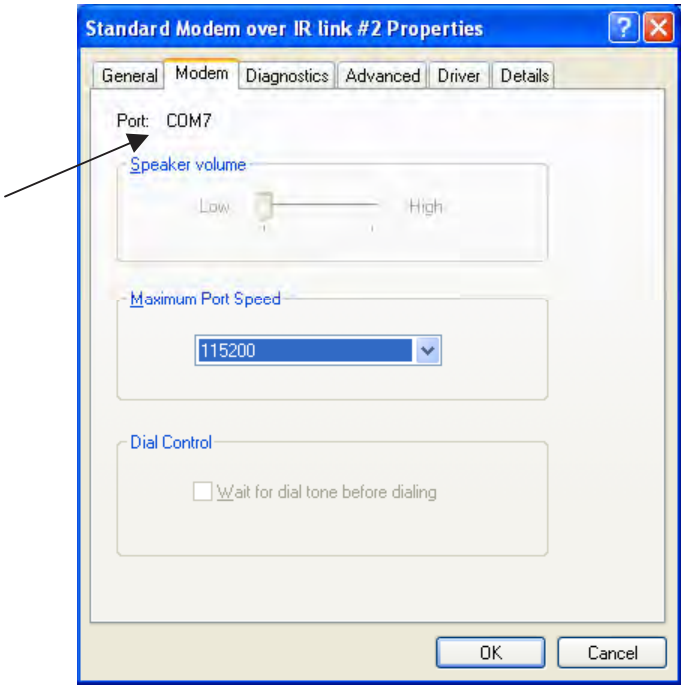

21. Use this **Com Port** to connect to the meter from your PC, using the **Communicator EXT** software. Refer to Chapter 5 of the *Communicator EXT 3.0 User's Manual* for detailed connection instructions.